



Connect Four Electronic Handheld Battery Compartment Replacement

This guide will show you how to remove the battery casing so that you can access the battery compartment.

Written By: Kamaryn



Connect Four®

Difficulty Chart by Game and Skill Level

	Game Number	Skill Level
Easiest	1	1
	2	1
	1	2
	2	2
	1	3
Hardest	2	3

One AA size battery.

⚠ CAUTION: To Avoid Battery Leakage

- Be sure to insert the battery correctly and always follow the game and battery manufacturers' instructions.
- Always remove a weak or dead battery from the product.

©2002 Hasbro. Pawtucket, RI 02862

All Rights Reserved.

04634

Made in China.


INTRODUCTION

You will need to access the battery compartment before you can change the battery or remove the larger back casing. To remove the battery casing, you will need a Phillips head screwdriver.

TOOLS:

- Small Phillips Head Screwdriver (1)

Step 1 — Ensure the device is off.

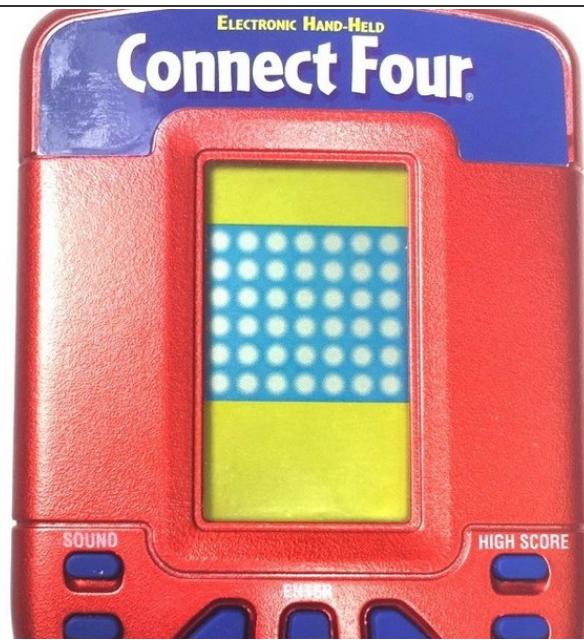

- Make sure the Connect Four Electronic Handheld is off. There is no off button, so you will need to let it shut off automatically.

Step 2 — Removing the battery casing.



- Take a Phillips head screwdriver and remove the (9.1mm length) #2 screw in the middle of the battery casing.
- Slide the cover off and remove the battery.

To reassemble your device, follow these instructions in reverse order.