



Connect Four Electronic Handheld Battery Replacement

This guide provides step-by-step instructions on how to remove and replace the Connect Four Electronic Handheld battery.

Written By: Kamaryn



	Game Number	Skill Level
Easiest	1	1
	2	1
	1	2
	2	2
	1	3
Hardest	2	3

One AA size battery.

CAUTION:
To Avoid Battery Leakage

- Be sure to insert the battery correctly and always follow the game and battery manufacturers' instructions.
- Always remove a weak or dead battery from the product.

©2002 Hasbro. Pawtucket, RI 02862
All Rights Reserved.
Made in China.



INTRODUCTION

If the battery in your Connect Four has died, you will need to replace it. The Connect Four Electronic Handheld requires 1 AA battery. To access the battery compartment on the back of the device, you will need a Phillips head screwdriver.

TOOLS:


- Small Phillips Head Screwdriver (1)



PARTS:

- 1 AA Battery (1)

Step 1 — Ensure the device is off.

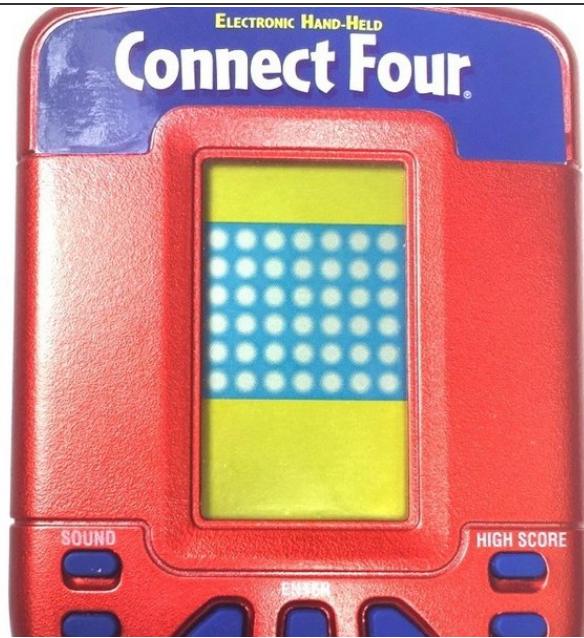

- Make sure the Connect Four Electronic Handheld is off. There is no off button, so you will need to let it shut off automatically.

Step 2 — Removing the battery casing.



- Take a Phillips head screwdriver and remove the (9.1mm length) #2 screw in the middle of the battery casing.
- Slide the cover off and remove the battery.

Step 3 — Replacing the battery.



- Put in the new AA battery, ensuring that the negative end slides into the spring.

To reassemble your device, follow these instructions in reverse order.