




Connect Four Electronic Handheld Buttons Replacement

This guide will instruct you on how to replace the Connect Four Electronic Handheld buttons. Buttons may need to be replaced if they are broken, worn, or unresponsive.

Written By: Julia Wyder

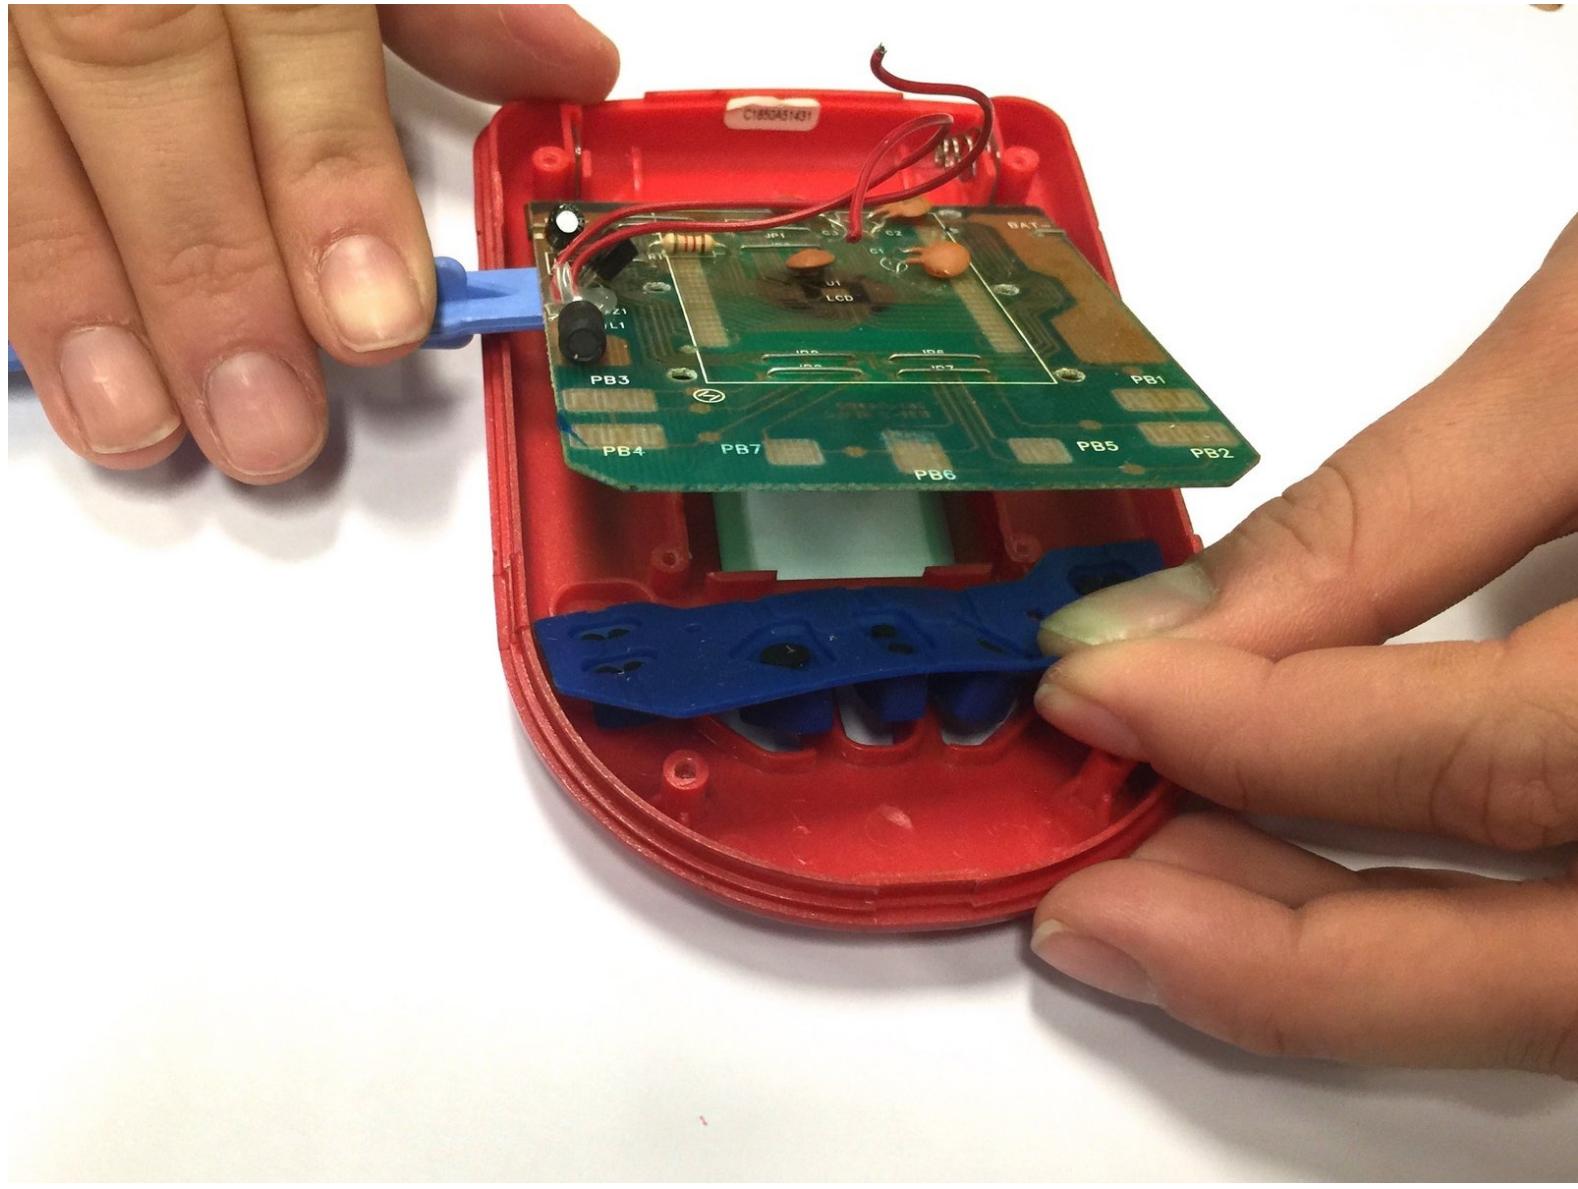


INTRODUCTION

If the buttons on your Connect Four have been damaged, you will need to replace them. If the buttons are torn, you will need to purchase a new button sheet. If the buttons are unaligned, simply readjust the button sheet. In order to get to the buttons, you will have to remove the casing on the back of the device. This requires a Phillips head screwdriver.

TOOLS:

- [Small Phillips Head Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Ensure the device is off.

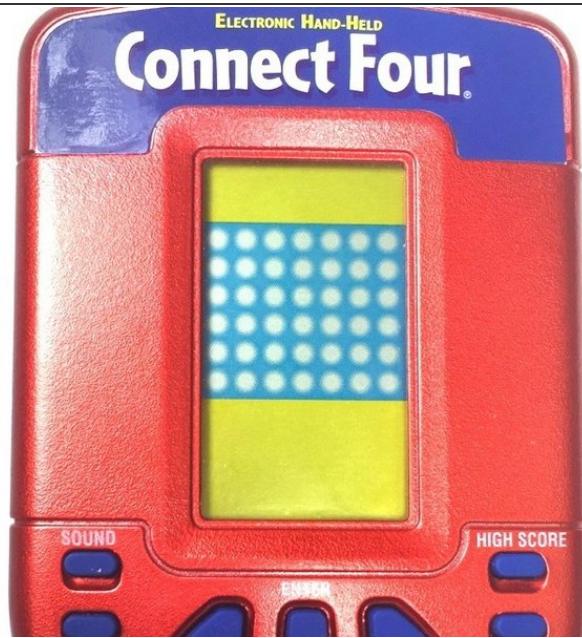

- Make sure the Connect Four Electronic Handheld is off. There is no off button, so you will need to let it shut off automatically.

Step 2 — Removing the battery casing.



- Take a Phillips head screwdriver and remove the (9.1mm length) #2 screw in the middle of the battery casing.
- Slide the cover off and remove the battery.


Step 3 — Removing/Replacing the Back Casing



- Using a Phillips head screwdriver, remove the four (7.1mm- length) #3 screws that hold the back casing in place.
- Carefully remove the back casing.


⚠ When removing the back casing, make sure not to rupture the wires that connect the speaker to the circuit board.

Step 4 — Detaching the Circuit Board

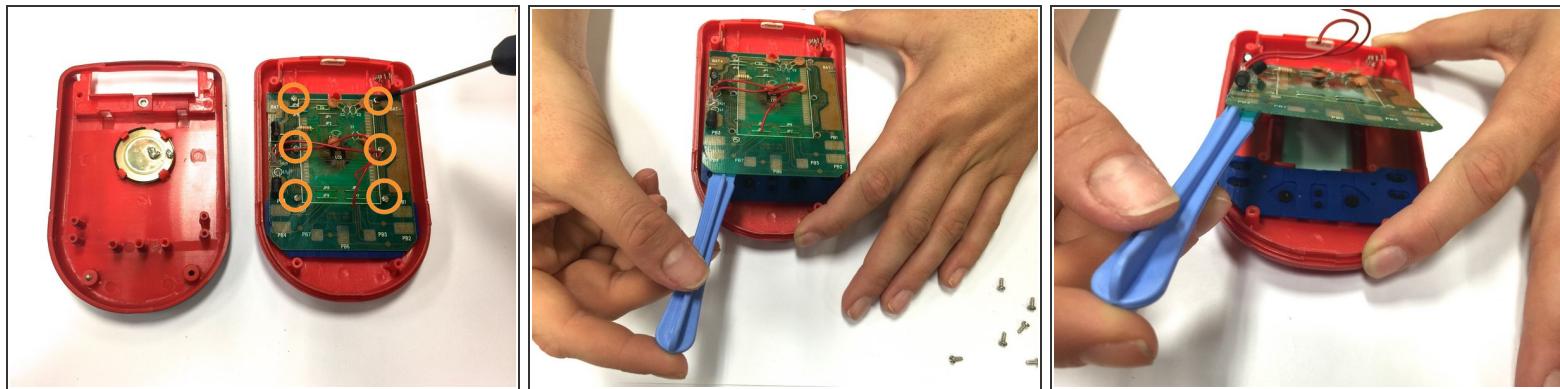

- Using a Phillips head screwdriver, remove the six (0.25"-length) #3 screws that hold down the cpu board.
- Using a spudger, lever the circuit board just enough to where you can easily access the button sheet.

Step 5 — Removing/ Replacing the Button Sheet

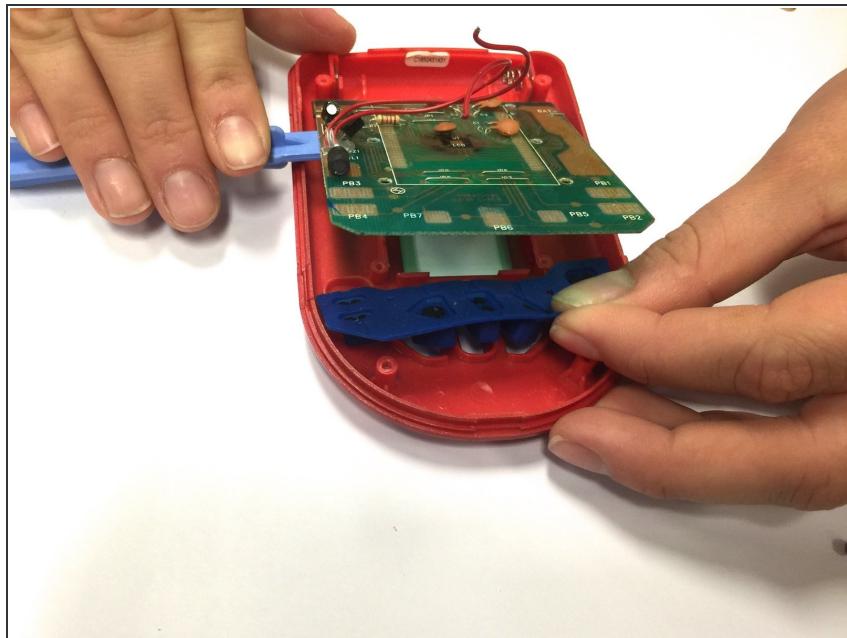

- Take out the button sheet, and replace it with a new one.

To reassemble your device, follow these instructions in reverse order.