



Contour Roam2 Waterproof Action Camera Record Slider Replacement

This guide will show you how to replace the record slider on your Contour Roam2 waterproof action camera.

Written By: Matthew Kofsky



This document was generated on 2019-09-22 04:49:25 AM (MST).

INTRODUCTION

This guide will give you step-by-step instructions on how to replace the record slider on your Contour Roam2 waterproof action camera if the camera won't begin or end recording properly.

TOOLS:

- [Phillips #000 Screwdriver \(1\)](#)

Step 1 — Record Slider



- Using the phillips head screwdriver (PH000) locate and remove the 4.45mm (.175in) screw by the 180 degree graphic on the metal ring.

 The screws in the camera are very small and can strip very easily. Apply consistent pressure when removing screws.

Step 2



- Rotate the metal ring counterclockwise until completely removed.

Step 3



- Using the phillips head screwdriver (PH000) remove the two 4.46mm (.175in) screws on each side near the back of the camera.

Step 4



- Grab the camera on both sides and slide the outer shell forward until completely removed.

Step 5



- Lift the record slider out.

i The record slider should come out easily no matter the position (forward or backward).

To reassemble your device, follow these instructions in reverse order.