



# Coolpix S01 USB Cover Replacement

This guide goes through the process of effectively replacing a broken, loose, or missing USB tray for your Nikon Coolpix camera.

Written By: Fernando Ochoa



 **TOOLS:**


- [iFixit Opening Tools \(1\)](#)
- [Precision Tweezers Set \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)

## Step 1 — USB Cover



- First make sure the camera is powered off.
- Use the Hex and PH000 tool to remove the 2 mm screw from the left side of the camera.
- Next remove the 2 mm screw from the right side of the camera.


## Step 2

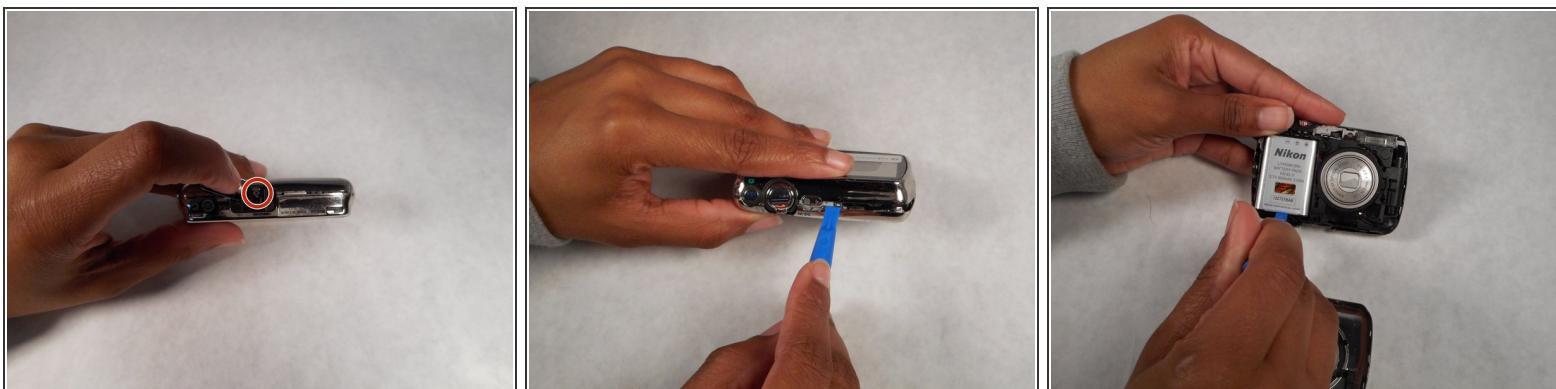

- Remove the 3mm screw from the bottom of the camera.
- Once you have the 2mm and 3mm screws out, gently pull the sides up with the smallest plastic opening tool. This will reveal the inside of the camera.

**⚠** Be sure to remove the battery before continuing your repair.

## Step 3

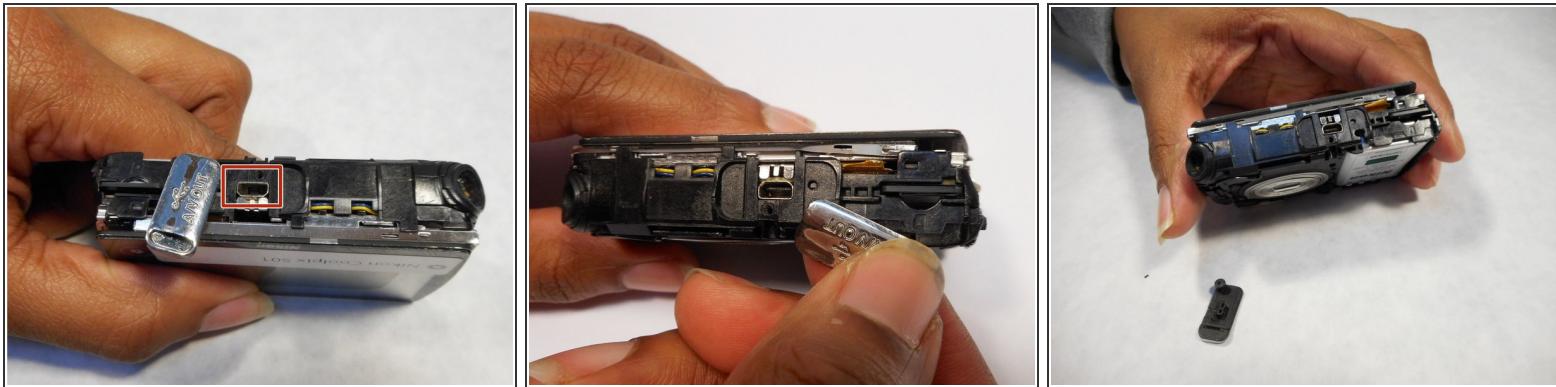

- On the bottom of the camera, locate the USB port.
- Gently slide the USB cover off of the camera with your fingers or tweezers.
- You can replace the USB cover by purchasing one from a local electronics store or online at [iFixit.com](http://iFixit.com).

To reassemble your device, follow these instructions in reverse order.