



Coolpix S01 Zoom Trigger Replacement

This guide will help you replace your zoom trigger on your camera.

Written By: angelica fitzgerald



INTRODUCTION

Broken zoom trigger? No problem! If you own a Nikon Coolpix digital camera and are experiencing a jammed zoom trigger or a zoom trigger that just won't work, this guide will surely help.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

Step 1 — Zoom Trigger



- Before starting, make sure the camera is powered off.
- Take the Hex and PH000 bit to remove a 2mm screw from the left side of the camera.
- Next, remove the 2mm screw from the right side.
- Lastly, remove the 3mm screw from the bottom of the camera.


Step 2



- Once the two 2mm screws and the 3 mm screw have been removed, use the smallest plastic opening tool and pull up on the sides to reveal the inside of the camera.



⚠ Be sure to remove the battery before continuing your repair.

Step 3

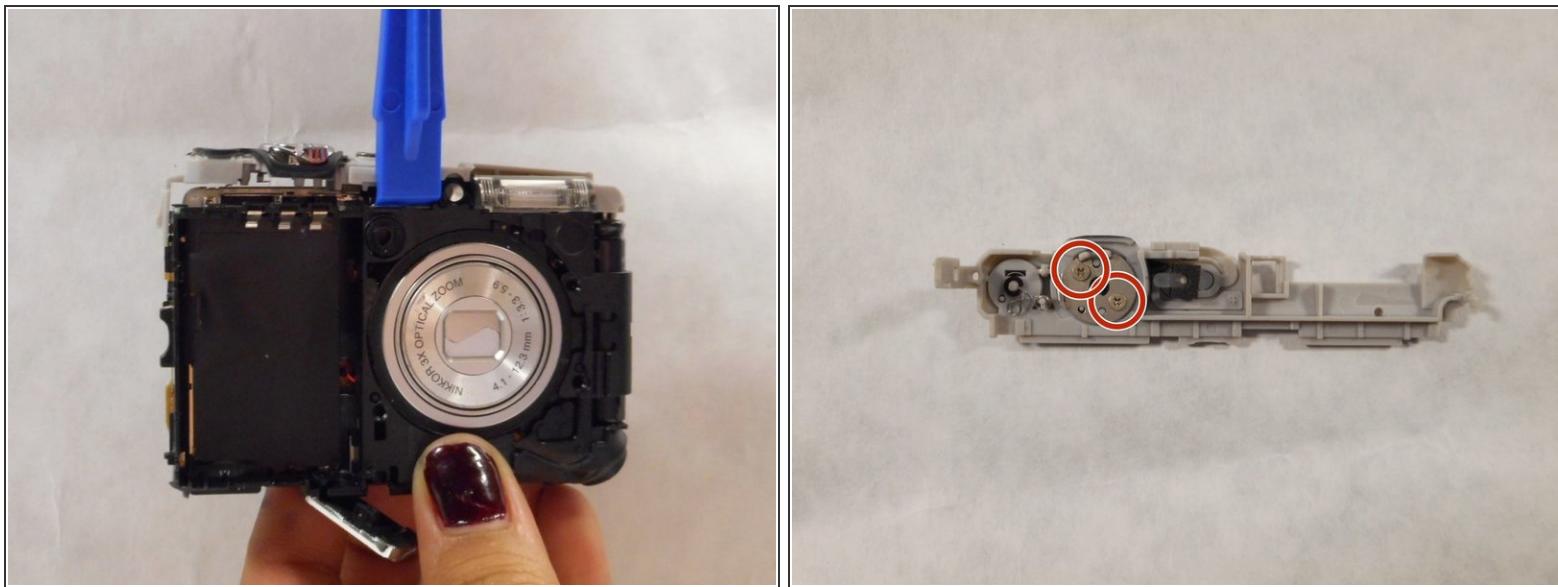

- After the battery is out, remove the gray button bar from the top of the camera with the smallest opening tool.
- With the gray bar detached from the camera, turn it upside down. With the Hex and the J000 bit remove the two 1mm screws.

Step 4

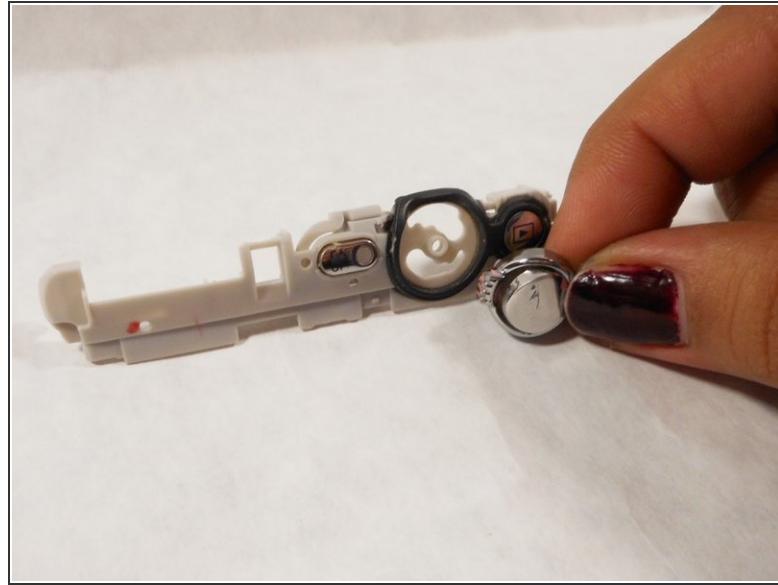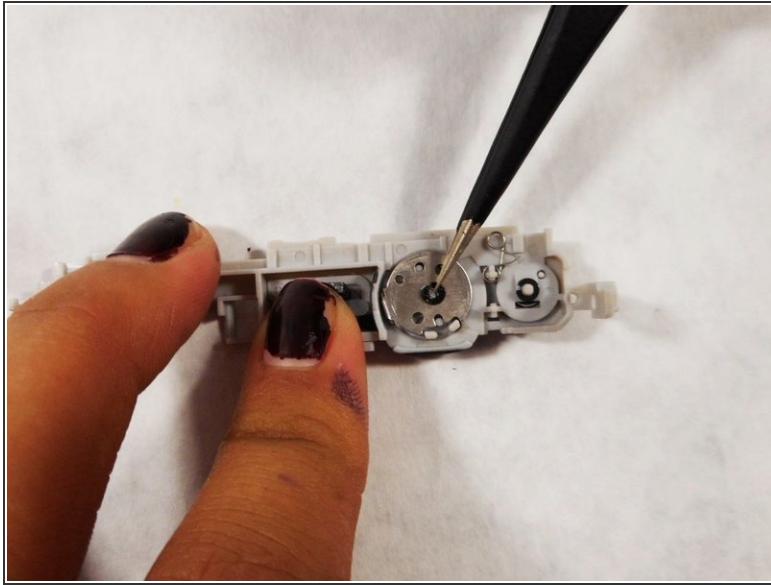

- Take the needle nose tweezers to remove the black ring in the middle of the button.
- You have successfully removed the zoom trigger and can replace with a new one if needed.
- To reassemble follow steps in reverse.

To reassemble your device, follow these instructions in reverse order.