


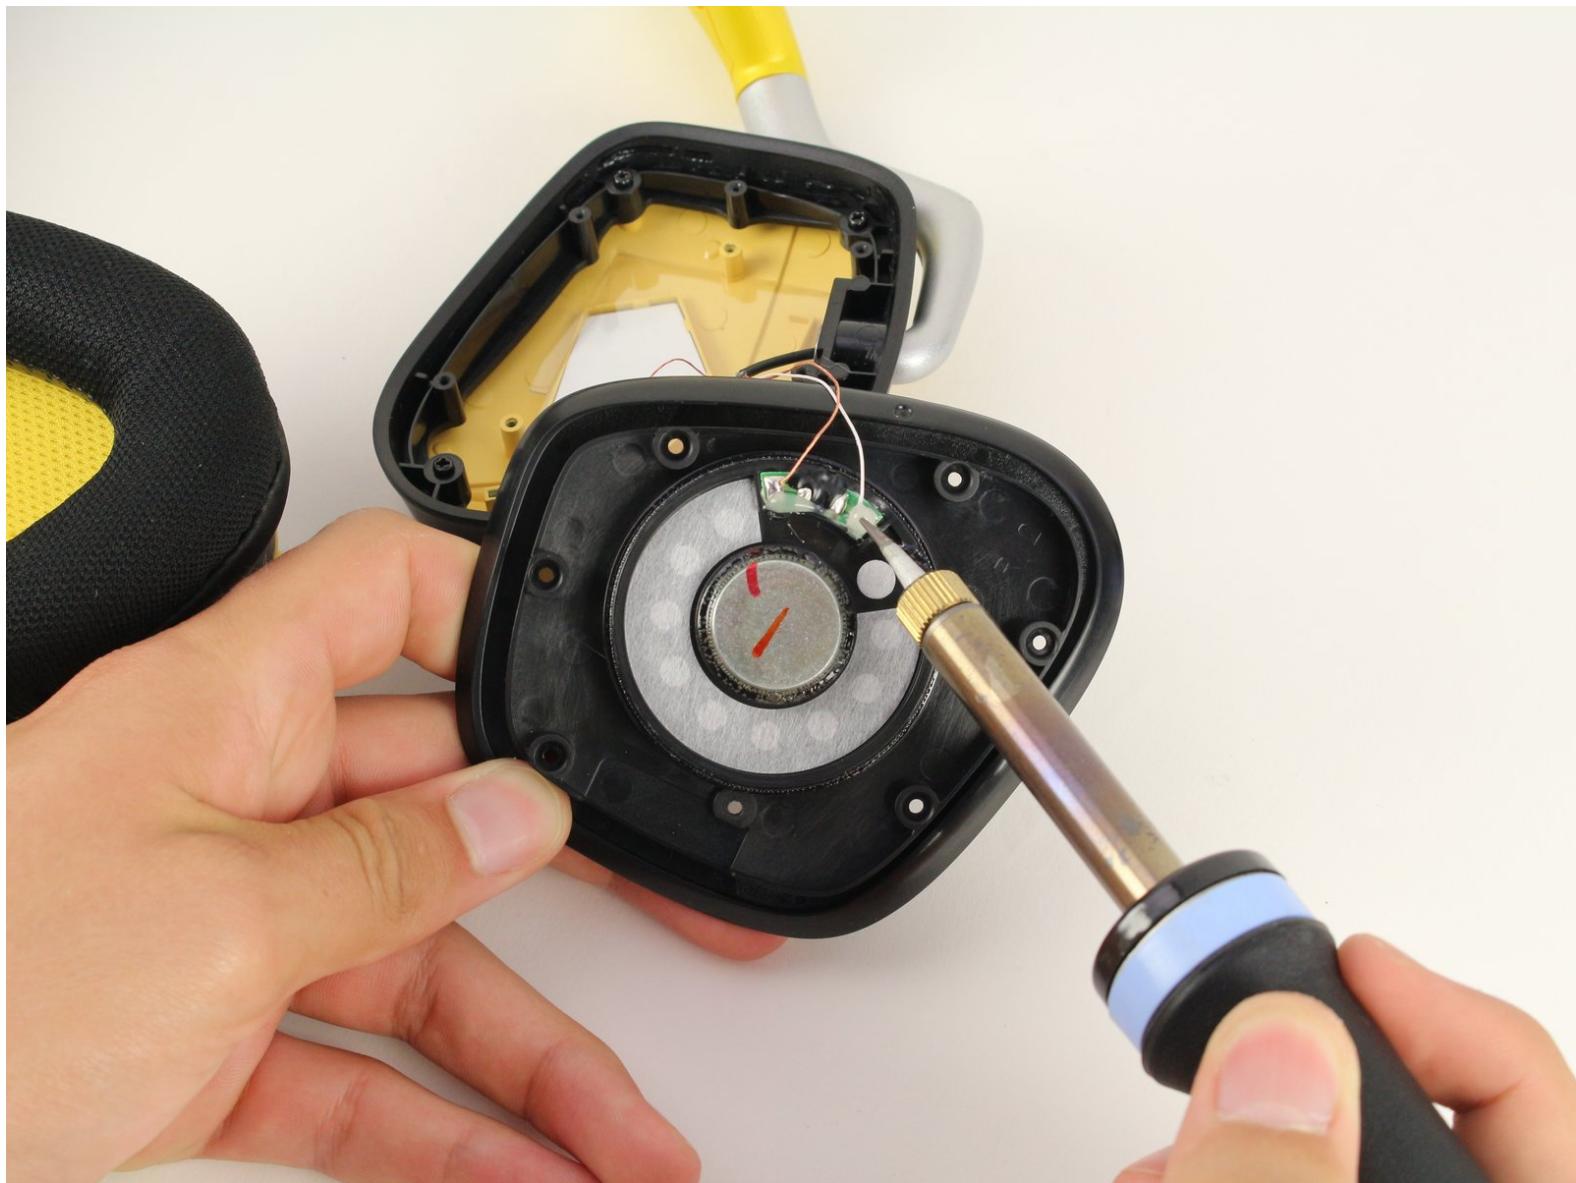

# Corsair Void Pro RGB Speakers Replacement

This guide shows how to replace the speakers in your Corsair Void Pro RGB.

Written By: Gianna Nobili



## INTRODUCTION

Replacing the speakers is a difficult task. It will required you to disassemble both sides of the headphones and require soldering skills. You will need to have a soldering kit to do this replacement. Replacing the speakers can be difficult without prior mechanical experience, so make sure you give yourself the necessary time to complete this replacement.

### TOOLS:

- iFixit Opening Tools (1)
- Phillips #0 Screwdriver (1)
- T5 Torx Screwdriver (1)
- Soldering Iron (1)
- Desoldering Pump (1)
- Solder (1)

### PARTS:

- Mini Speaker (1)

## Step 1 — Earcup



- Carefully remove earmuff from headphones by getting a grip under the earmuff cushion and peeling up over the lip that keeps it in place.

## Step 2




- Using the Phillips #0 screwdriver, unscrew the seven 6.4 mm screws holding the black speaker cover in place.
- If you are disassembling the lefthand earmuff, there will be eight 6.4 mm screws to remove.

## Step 3



- Remove and set aside the black panel, taking care to keep the wires attached.
- ⓘ The panel should lift up without much force. If the panel does not budge, carefully use the iFixit plastic opening tool to dislodge the piece.

## Step 4 — Speakers

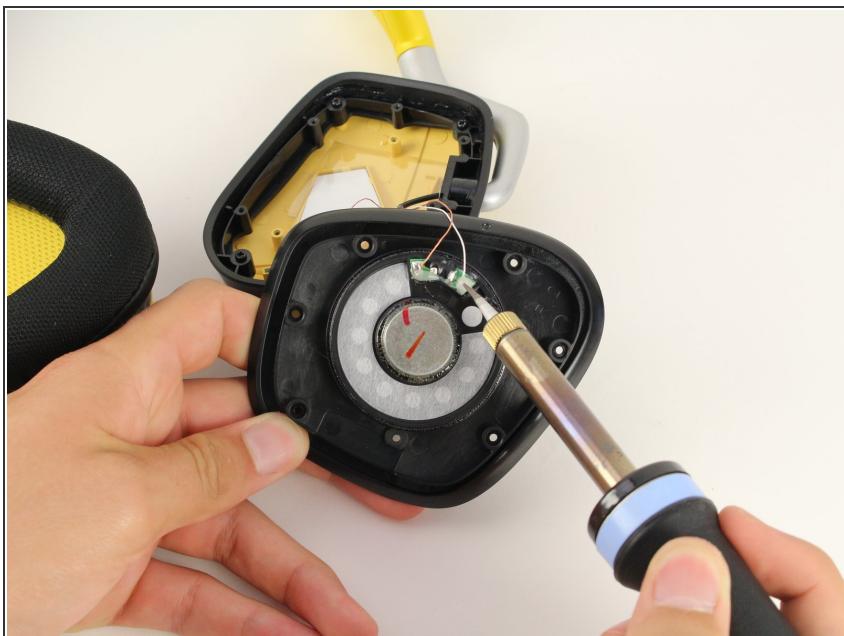

- Desolder the wire that connects to the speaker.
- ⓘ For steps on how to solder, see this helpful [guide](#).

## Step 5



- Use a knife tool as a wedge to remove the speaker and glue in the new speaker.

To reassemble your device, follow these instructions in reverse order.