



Cr-48 Chromebook RAM Replacement

Written By: Athar



 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Remove the Battery



- Slide the switch on the bottom of the laptop until the battery pops out.
- Once the battery pops out, you can remove it.

Step 2 — Remove Rear Rubber Feet




- Using forceps or tweezers, remove the two rear rubber feet to expose two hidden screws.

Step 3 — Remove Screws




- Using a Phillips head #00 Screwdriver, remove a total of 12 screws:
 - 10 screws in the battery compartment.
 - size ph#00, approximately 3 mm long
 - 2 screws under the rubber feet previously removed
 - Size ph#00, approximately 4.5 mm long

Step 4

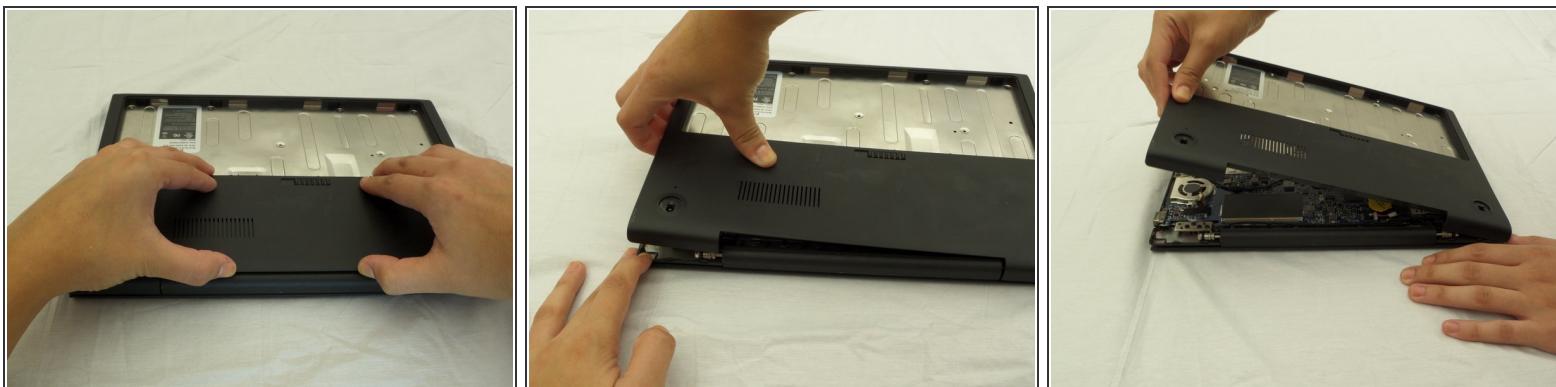

- Starting where the body of the laptop and the laptop screen meet, pry apart the lower case from the rest of the laptop.
- *(i)* The case is easier to remove when separating in a clockwise motion, as seen in the pictures.

Step 5 — Locate RAM

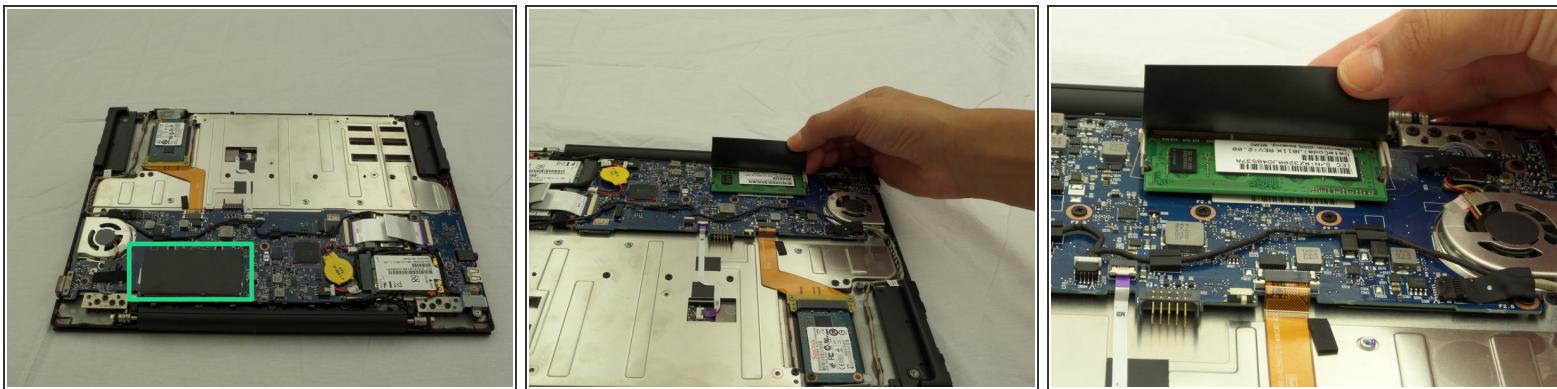



- Locate the RAM under a black flap alongside where the laptop screen and device body meet.

Step 6 — Pull Metal Clasps away from RAM



- Locate the metal clasps on either side of the RAM Card
- Using your thumbs, pull the pieces away from the RAM and then the RAM card should pop up.

Step 7 — Remove RAM

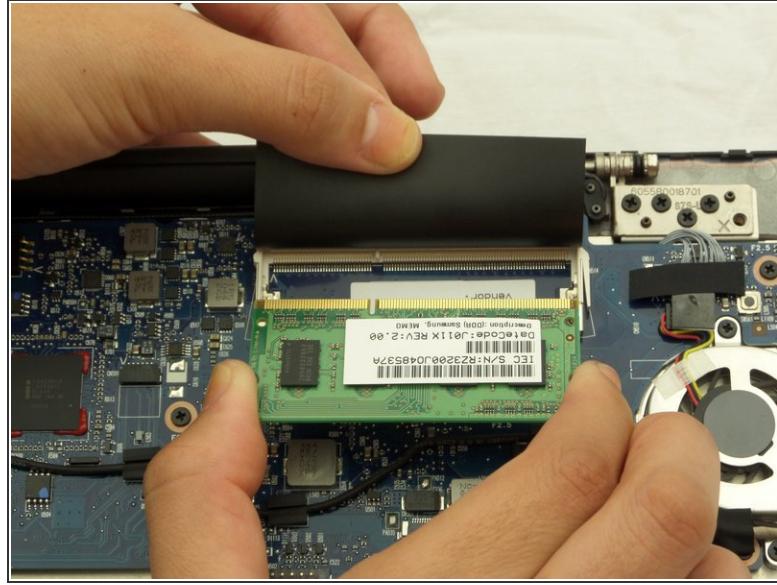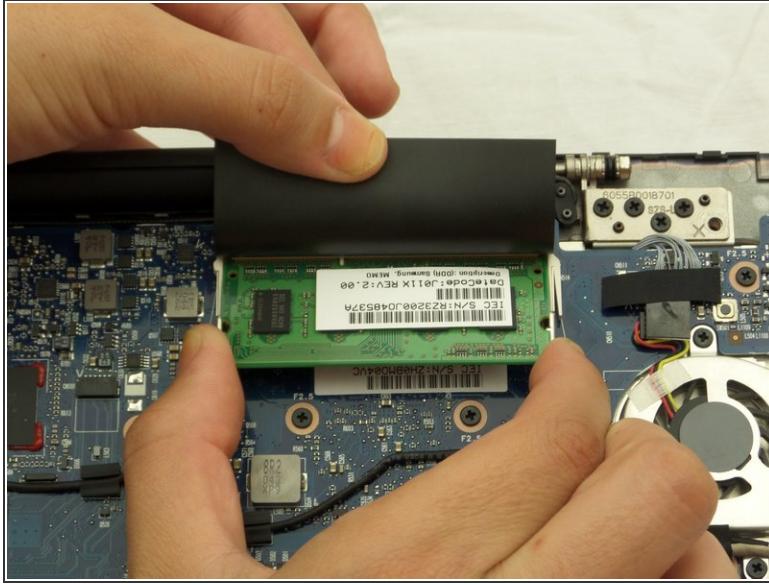

- Use two fingers to pull the RAM upwards and out.

To reassemble your device, follow these instructions in reverse order.