




Craig CMP801 Back Cover Replacement

Use this guide to remove the back cover and replace if needed.

Written By: Duyen

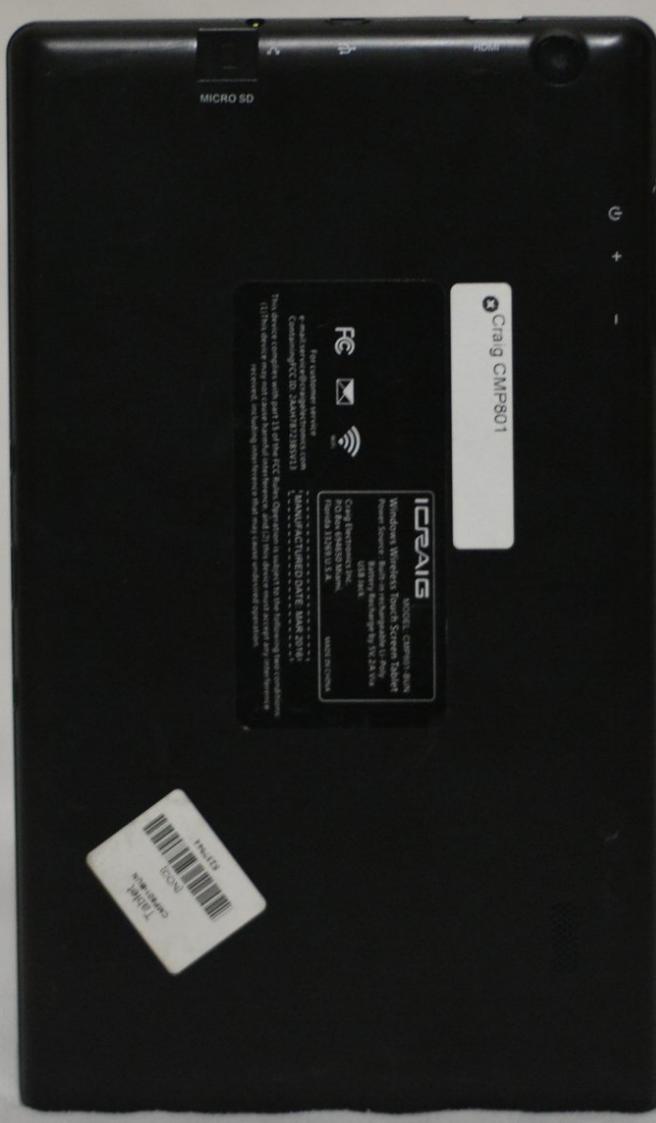


INTRODUCTION

Use the metal or nylon opening tool(s) to remove the back cover.

TOOLS:

- Metal Spudger (1)

Step 1 — Back Cover

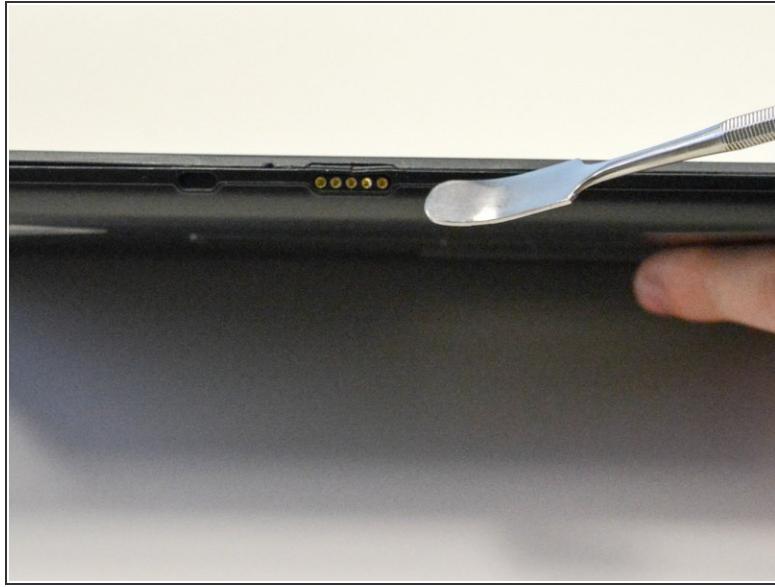

- Locate the opening line between the cover and the device. Then locate the groove near the charging port.


Step 2



- Use a metal spudger to separate the back cover from the front touch screen.
- To do this, place the metal spudger in between the groove near the charging port of the device to unlatch the first clip.

This document was generated on 2019-09-21 07:15:16 AM (MST).

Step 3

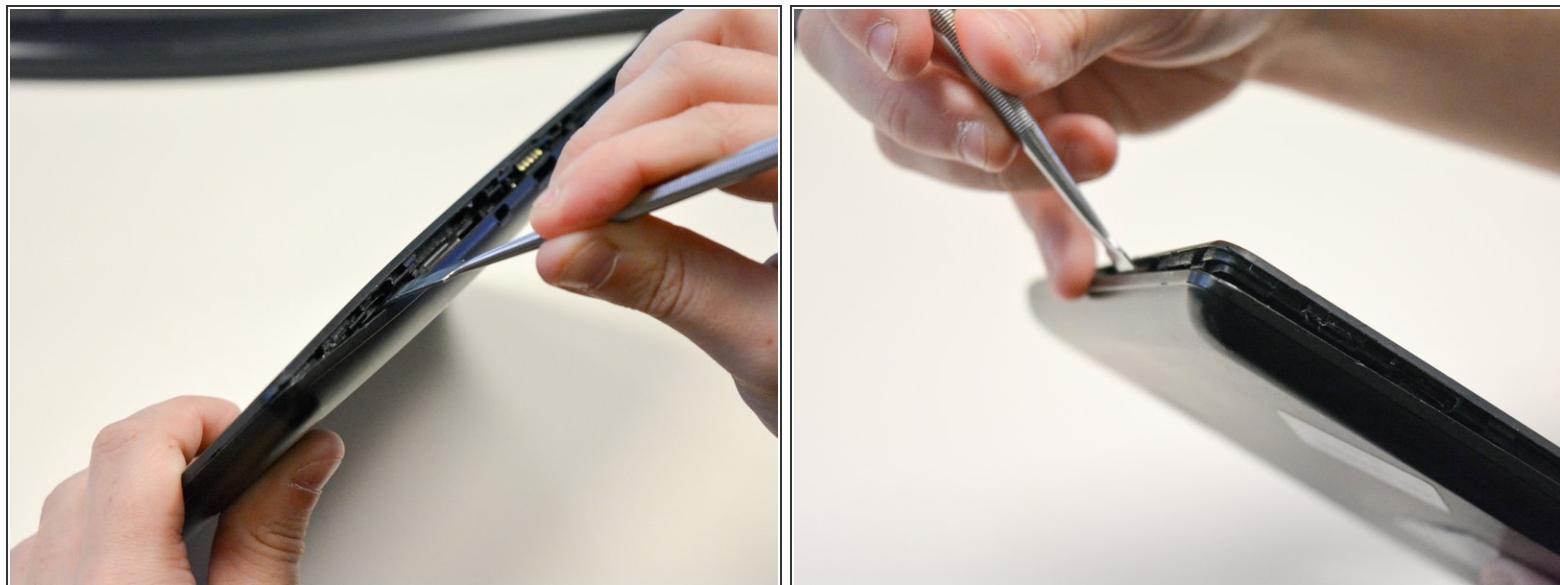

- Continue to separate all of the clips around the device until the back cover comes off completely.

To reassemble your device, follow these instructions in reverse order.