


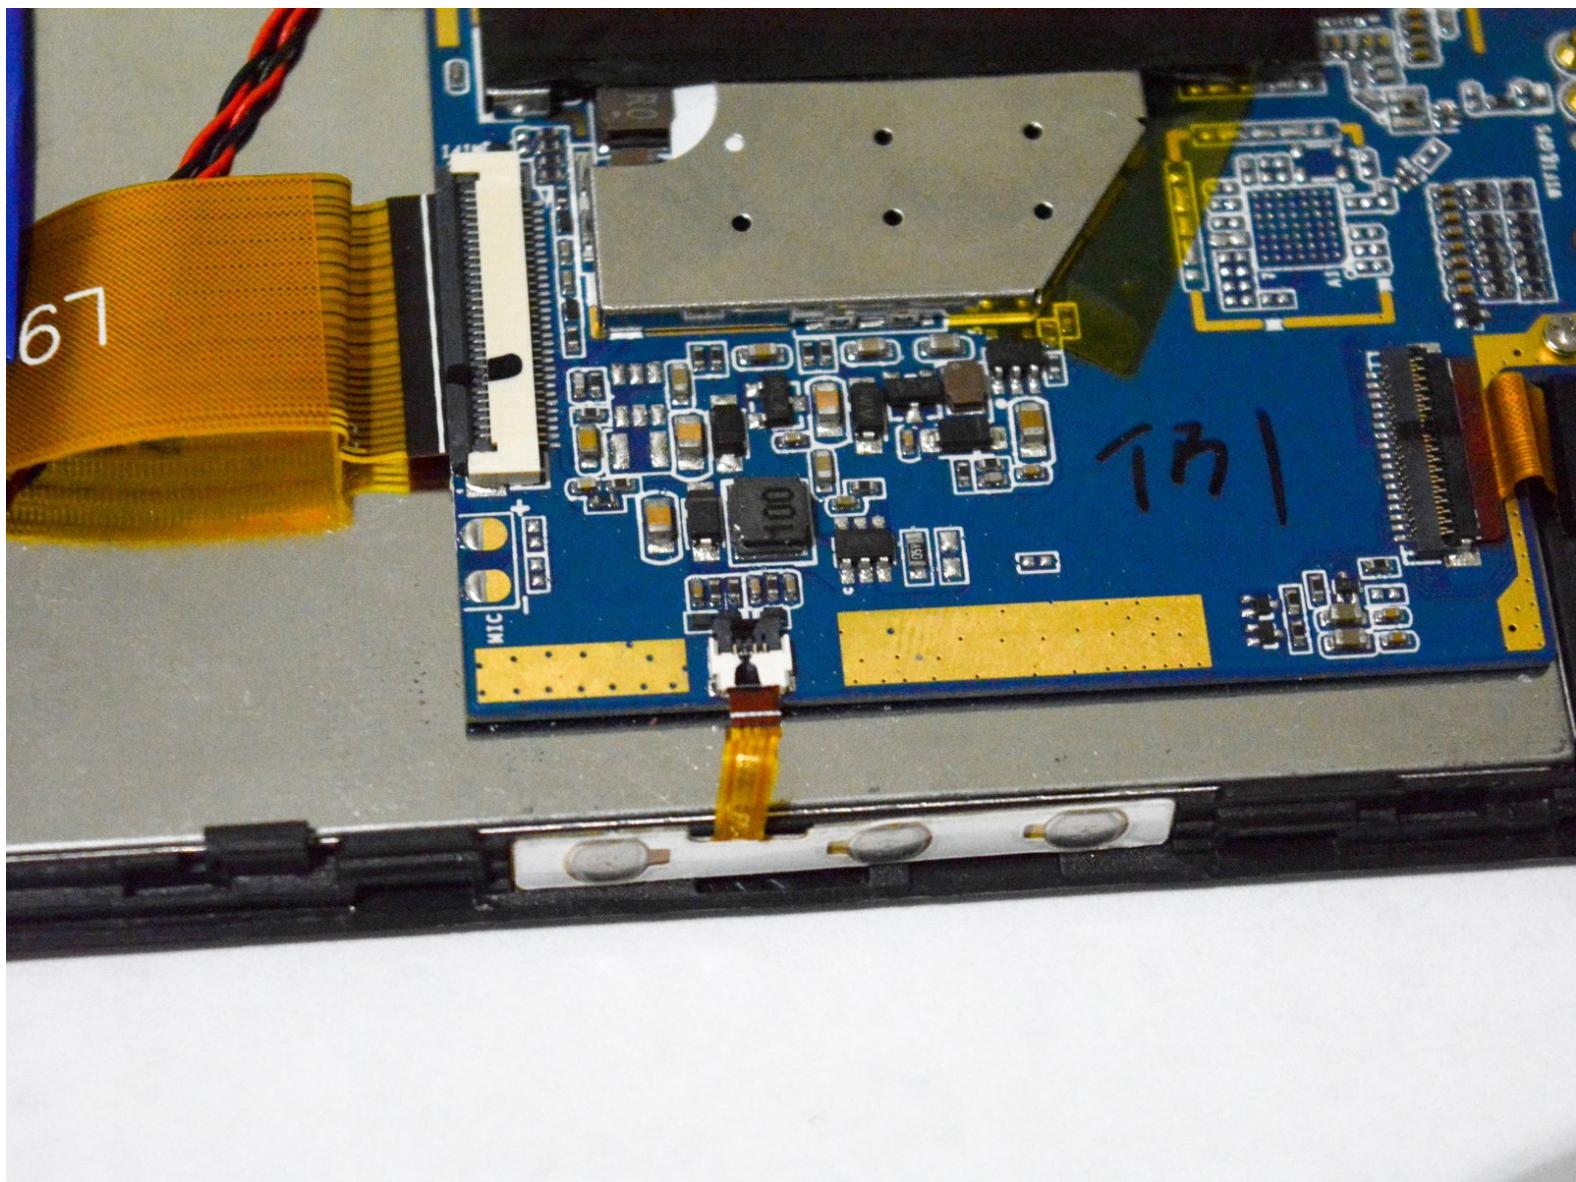

Craig CMP801 Volume Controls Replacement

This guide will show how to replace the volume controls in Craig CMP801.


Written By: Mohammed



 **TOOLS:**

- [Metal Spudger \(1\)](#)
 - [Precision Tweezers Set \(1\)](#)
 - Angled tweezers
 - [iFixit Opening Tools \(1\)](#)
-

Step 1 — Back Cover

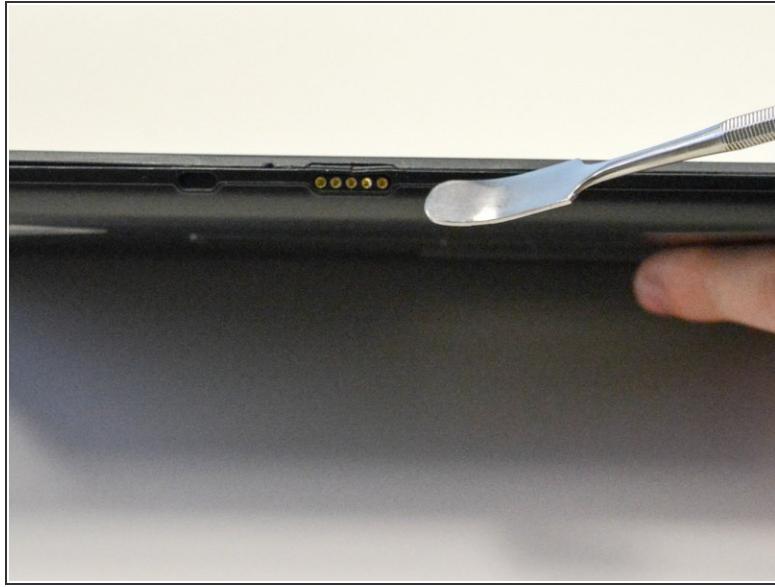

- Locate the opening line between the cover and the device. Then locate the groove near the charging port.

Step 2




- Use a metal spudger to separate the back cover from the front touch screen.
- To do this, place the metal spudger in between the groove near the charging port of the device to unlatch the first clip.

Step 3



- Continue to separate all of the clips around the device until the back cover comes off completely.



Step 4 — Volume Controls

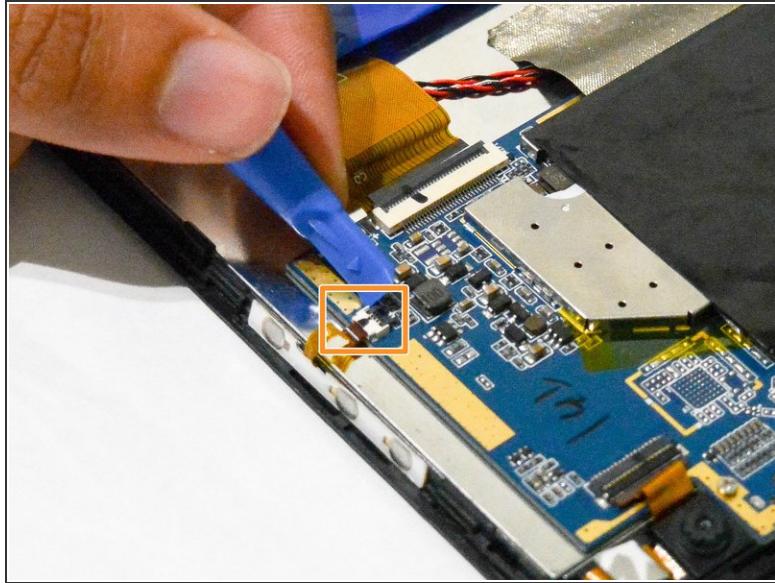

- After taking out the back cover, locate the black flap.
- Open the black flap with the plastic opening tools.

⚠ Be careful not to break the flap when you open it.



Step 5

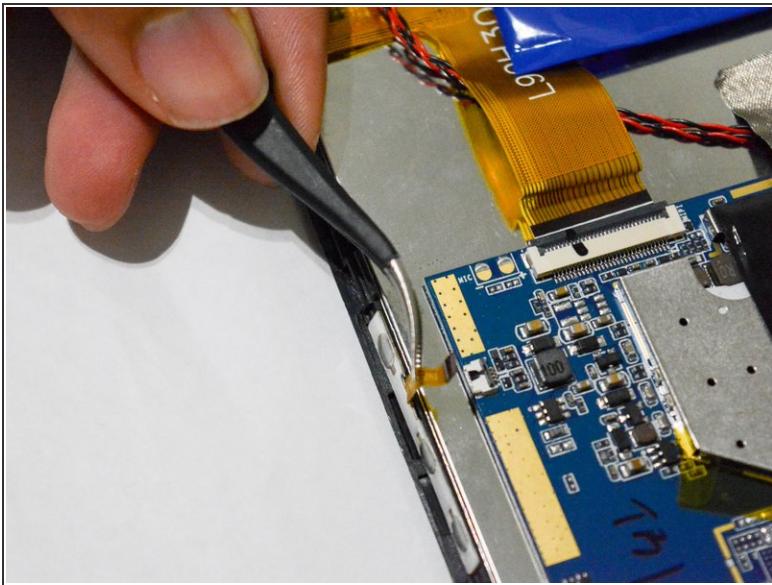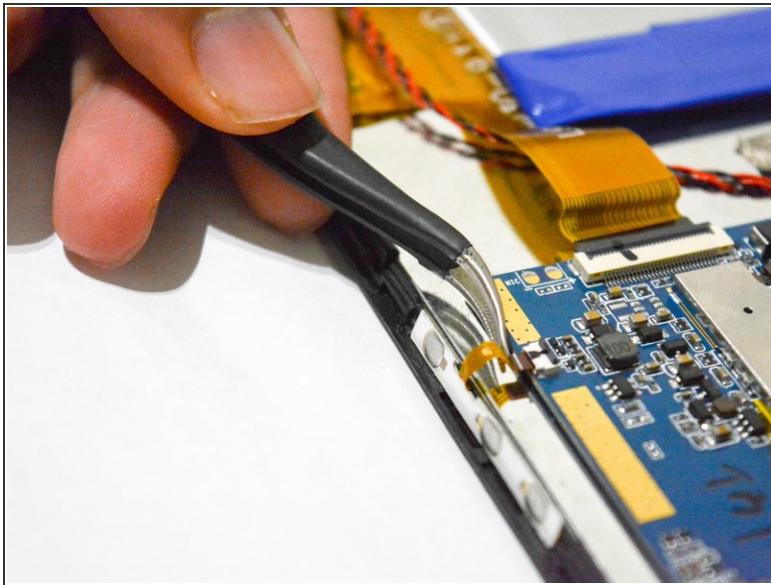

- Once the tab is released, use the angled tweezers to take out the tab.

 Be careful not to scratch the tab.

Step 6

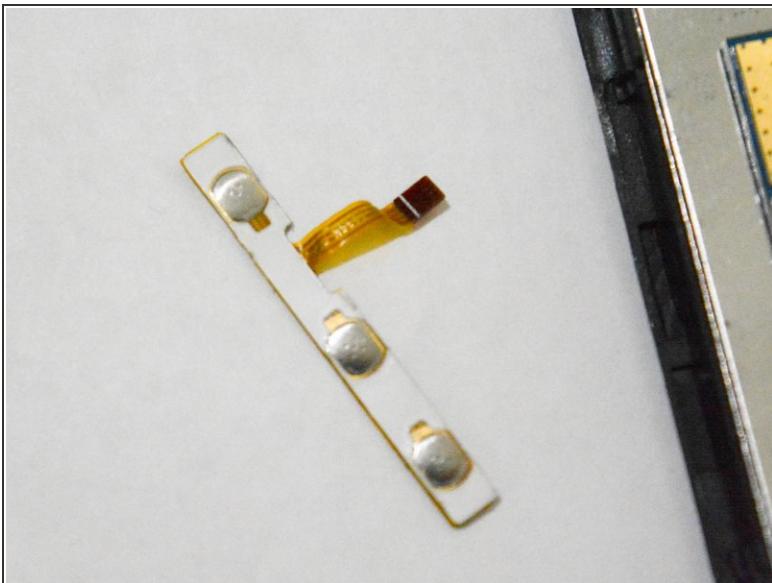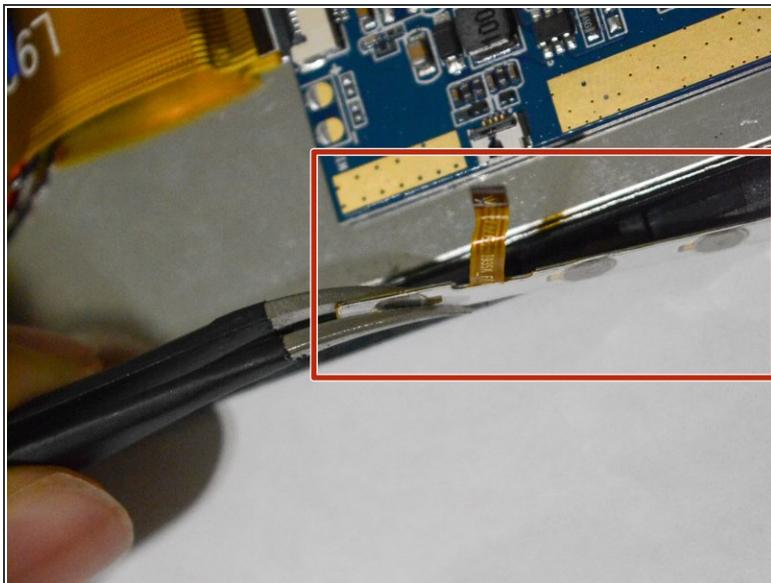

- Use the angled tweezers to pull the volume controls out and replace it with a new one.

To reassemble your device, follow these instructions in reverse order.