



# Creative Nomad II SmartMedia Card Replacement

Use this guide to install the SmartMedia memory card in the CREATIVE NOMAD II Media Player.

Written By: George Gargov



## Step 1 — Battery



- Using your thumb, slide down and remove the battery cover.

## Step 2



- Using your index finger, remove the old AA battery.
- Install the new AA battery.

## Step 3 — Smart Media Card



- Slide down the eject button.
- Pull out the old SmartMedia Card.
- Insert the new SmartMedia Card.
  - The notched corner of the SmartMedia card should go in the top left corner.

To reassemble your device, follow these instructions in reverse order.