


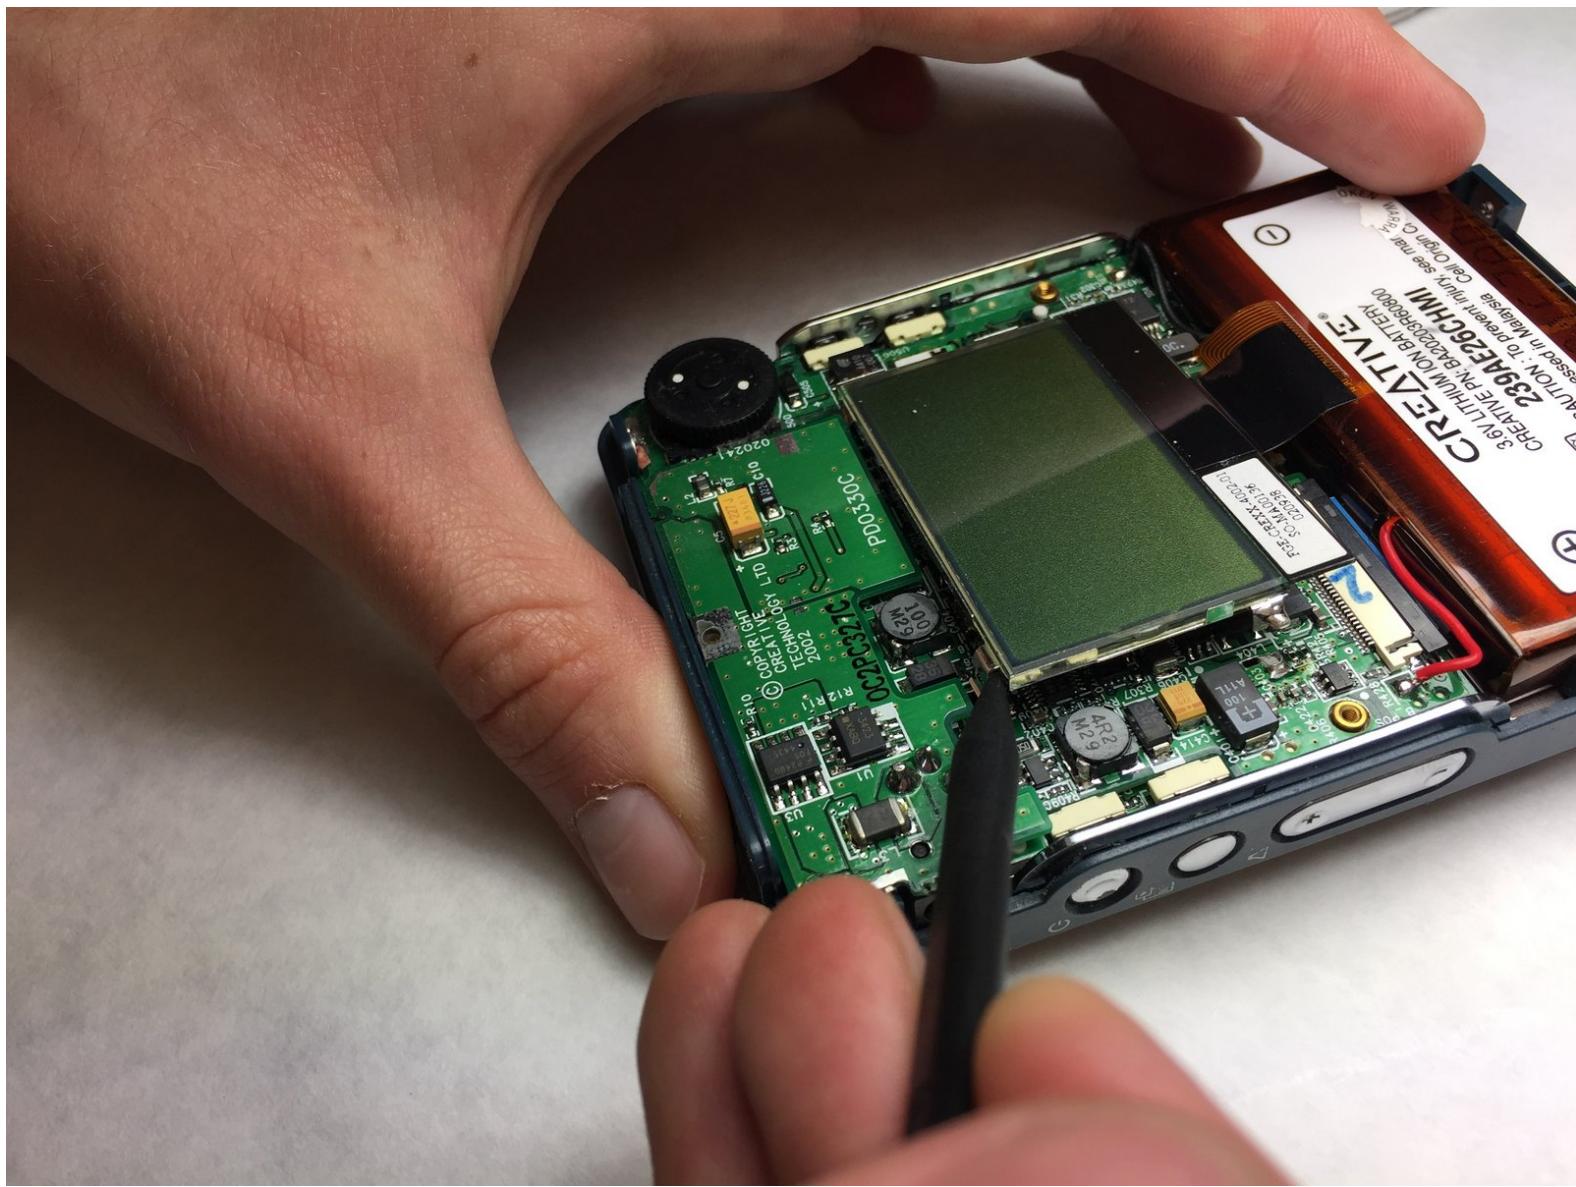

Creative Nomad Jukebox Zen Display Screen Replacement

Is your Creative Nomad Jukebox Zen screen damaged or not working? This guide will walk you through the steps to replace it.

Written By: Austin Shaw



This document was generated on 2019-09-17 10:04:40 AM (MST).

INTRODUCTION

Hello! This guide will show you the steps to replace the damaged/cracked screen in your Creative Nomad Jukebox Zen Device and have you listening to your music again in no time! Please use caution when using the soldering tool.

TOOLS:

- [JIS Driver Set](#) (1)
- [Spudger](#) (1)
- [Soldering Iron](#) (1)
- [Solder](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Front and Back Cover




- Use a J0 screwdriver to remove the eight 3.5mm screws.

Step 2




- Use the plastic opening tool to open the top cover by carefully prying at each corner.

Step 3 — Screen Cover

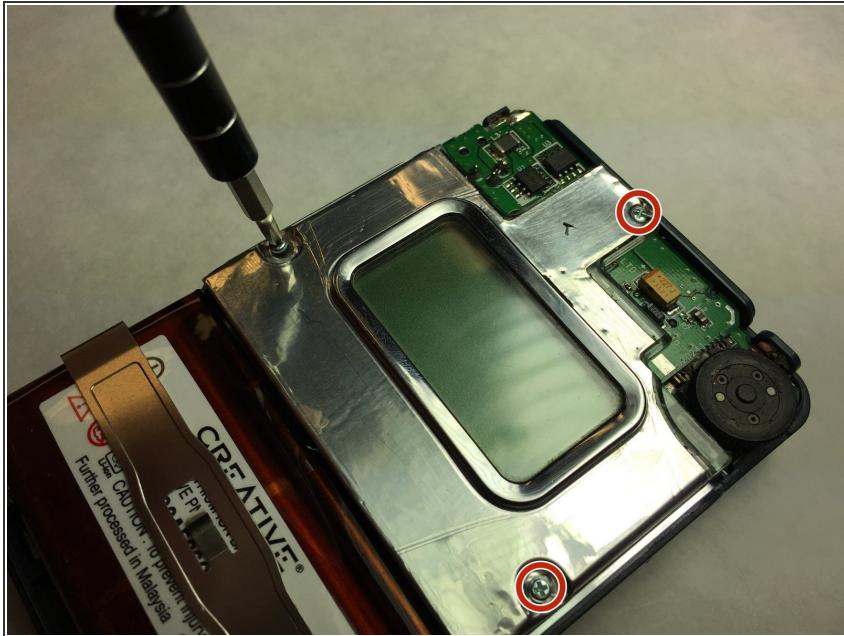

- Once the front face is removed, remove the three 6.8mm J0 screws from the metal cover and remove it.



Step 4 — Display Screen

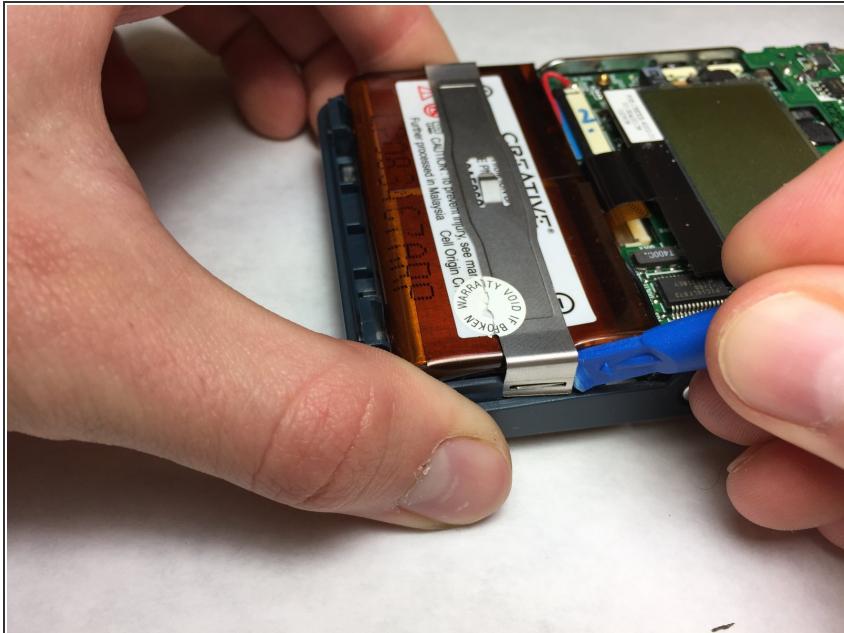

- Using the plastic opening tool to pop the metal tab holding the battery in place.

⚠️ By breaking the sticker, it could void your warranty

Step 5

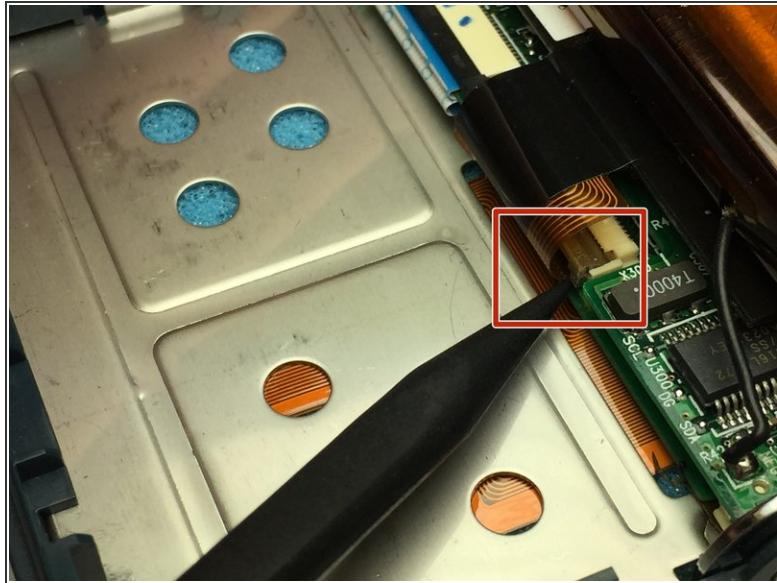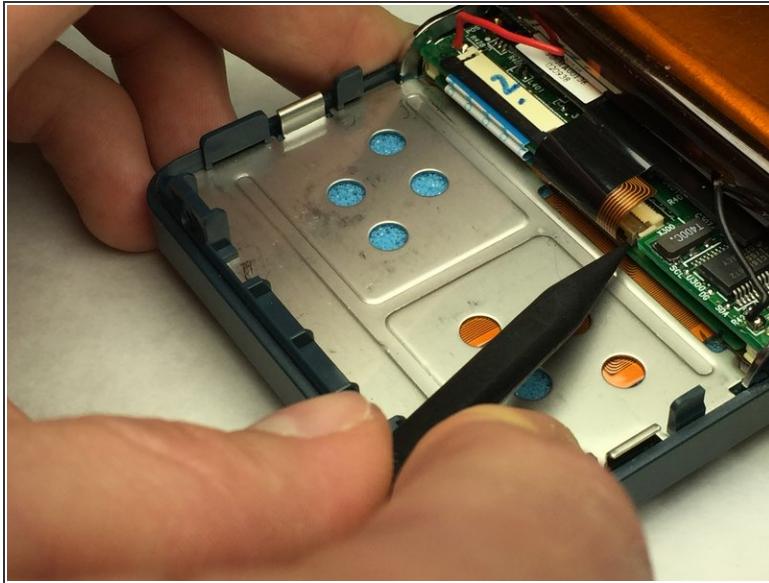

- Use the spudger tool to unclip the screens wiring pigtails clipped into the motherboard.


Step 6



- Use soldering iron to melt the solder used to hold the display screen to the motherboard.

⚠ Using soldering gun with care as it becomes extremely hot and can cause burns.

Step 7

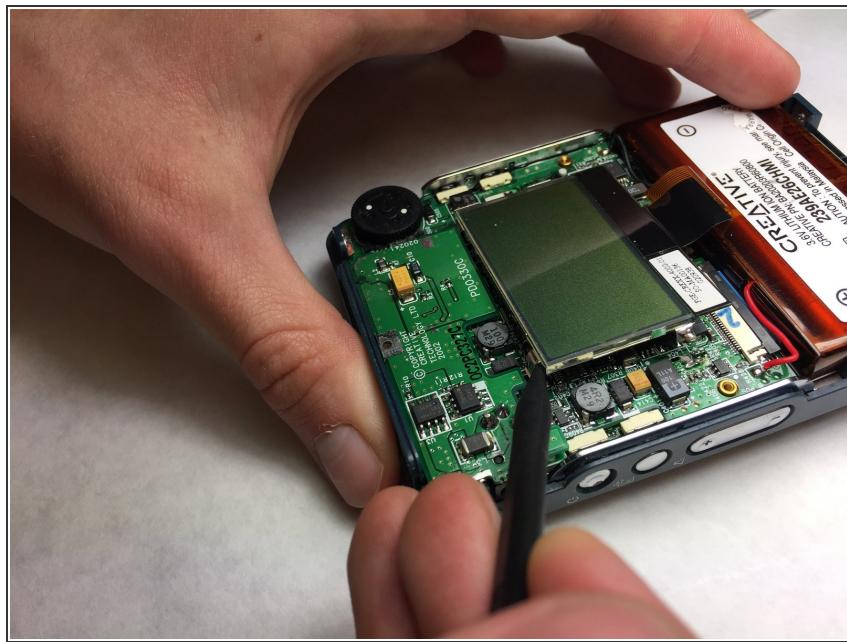

- Using the spudger tool, gently pry up the corners of the display screen to remove it.

To reassemble your device, follow these instructions in reverse order.