



Creative Nomad Jukebox Zen Front and Back Cover Replacement

Are either of your front or back cover damaged on your Creative Nomad Jukebox Zen? This guide will show you how to replace one or both of them.

Written By: Eli Richter



This document was generated on 2019-10-19 02:20:31 AM (MST).

INTRODUCTION

Hello! This guide will show you the steps to remove the front and back cover to your Creative Nomad Jukebox Zen Device.

TOOLS:

- [JIS Driver Set \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Front and Back Cover



- Use a J0 screwdriver to remove the eight 3.5mm screws.

Step 2



- Use the plastic opening tool to open the top cover by carefully prying at each corner.

To reassemble your device, follow these instructions in reverse order.