




Creative Nomad Jukebox Zen Screen Cover Replacement

Has your Creative Nomad Jukebox Zen screen cover cracked or been scratched? This guide will show you how to replace it.

Written By: Eli Richter

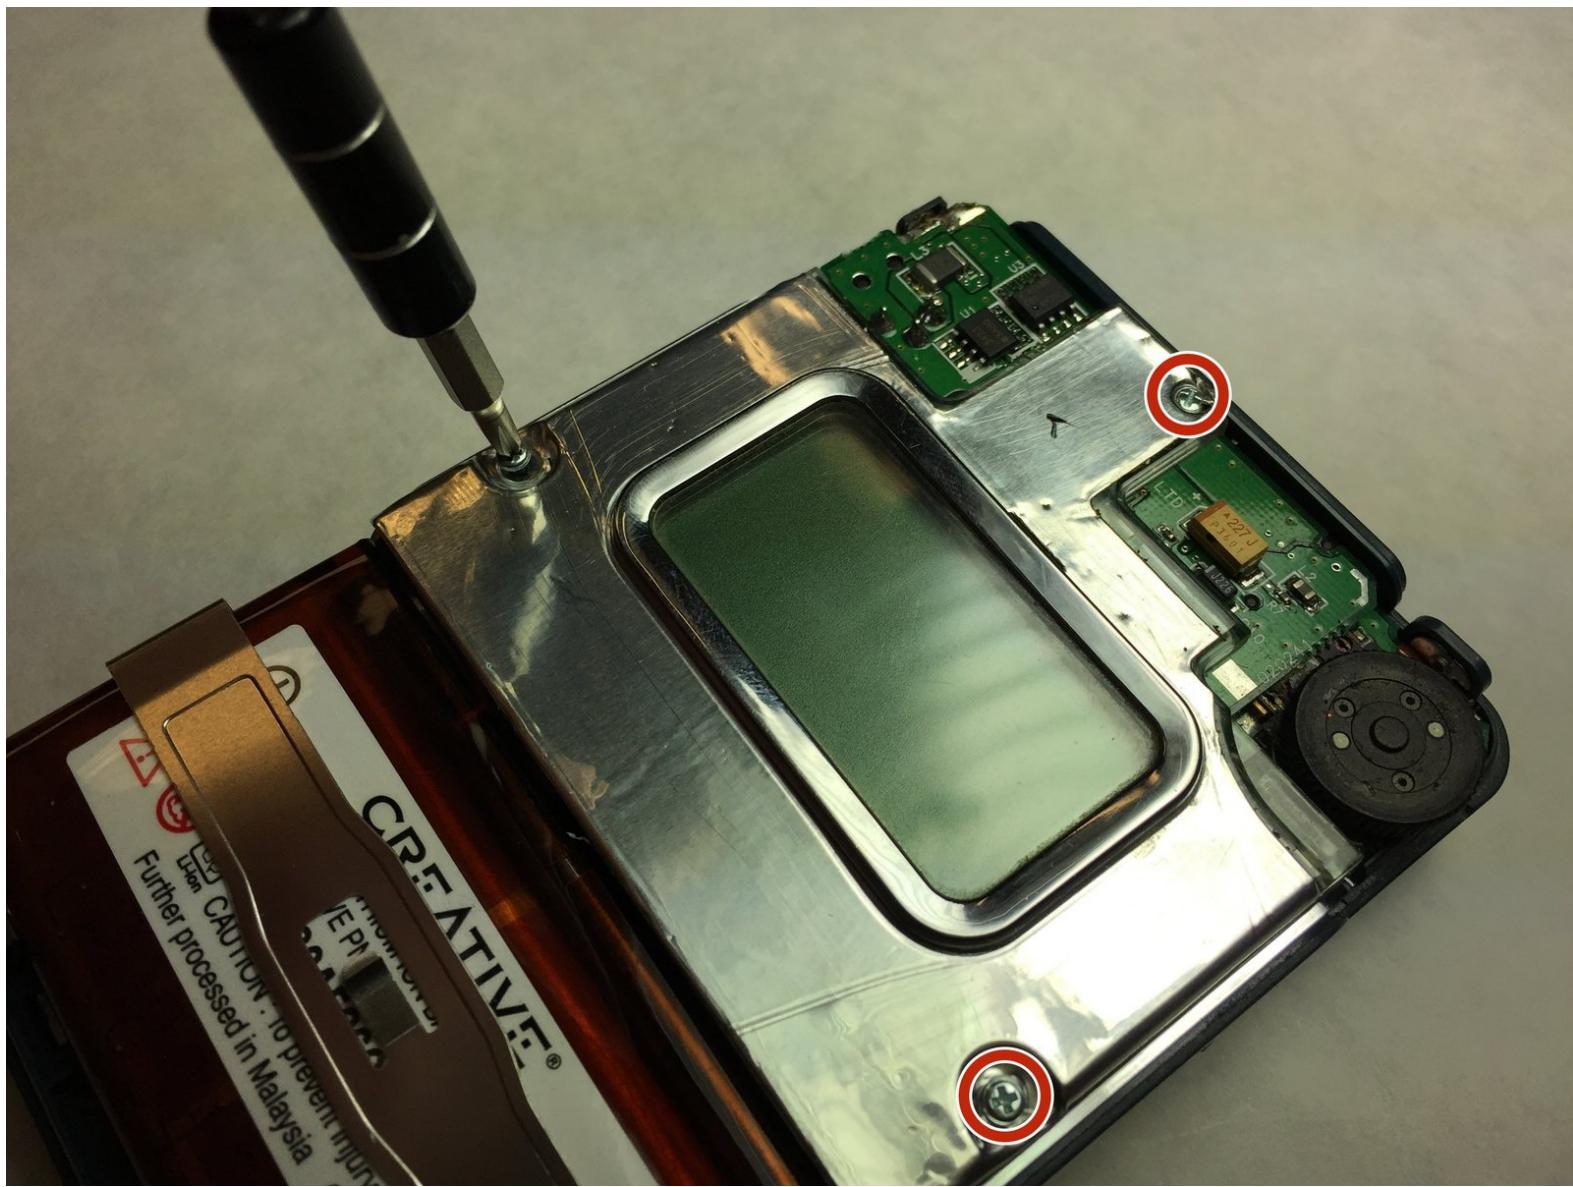

This document was generated on 2019-09-18 01:12:02 PM (MST).

INTRODUCTION

Hello! This guide will show you the steps to remove the screen cover in your Creative Nomad Jukebox Zen Device.

TOOLS:

- [JIS Driver Set \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Front and Back Cover




- Use a J0 screwdriver to remove the eight 3.5mm screws.

Step 2



- Use the plastic opening tool to open the top cover by carefully prying at each corner.

Step 3 — Screen Cover

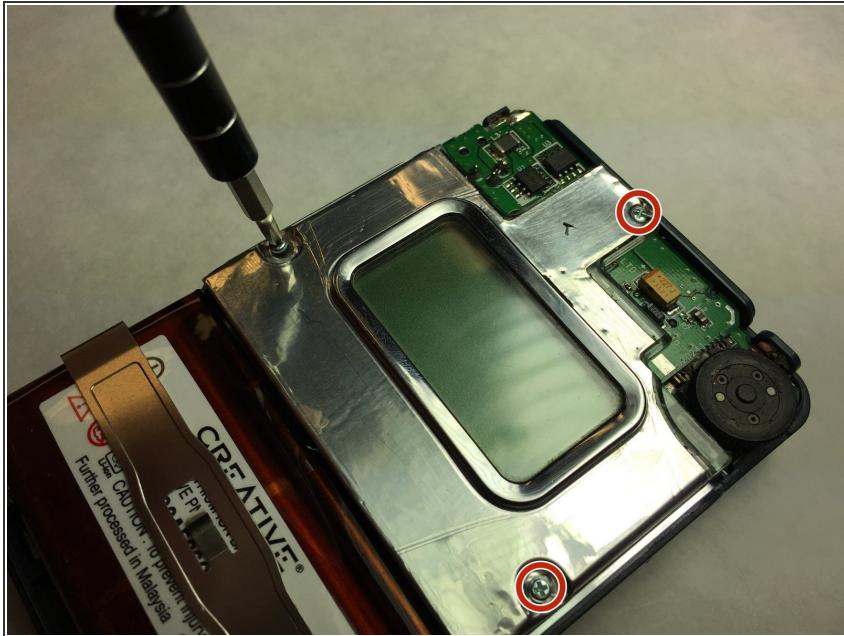

- Once the front face is removed, remove the three 6.8mm J0 screws from the metal cover and remove it.

To reassemble your device, follow these instructions in reverse order.