


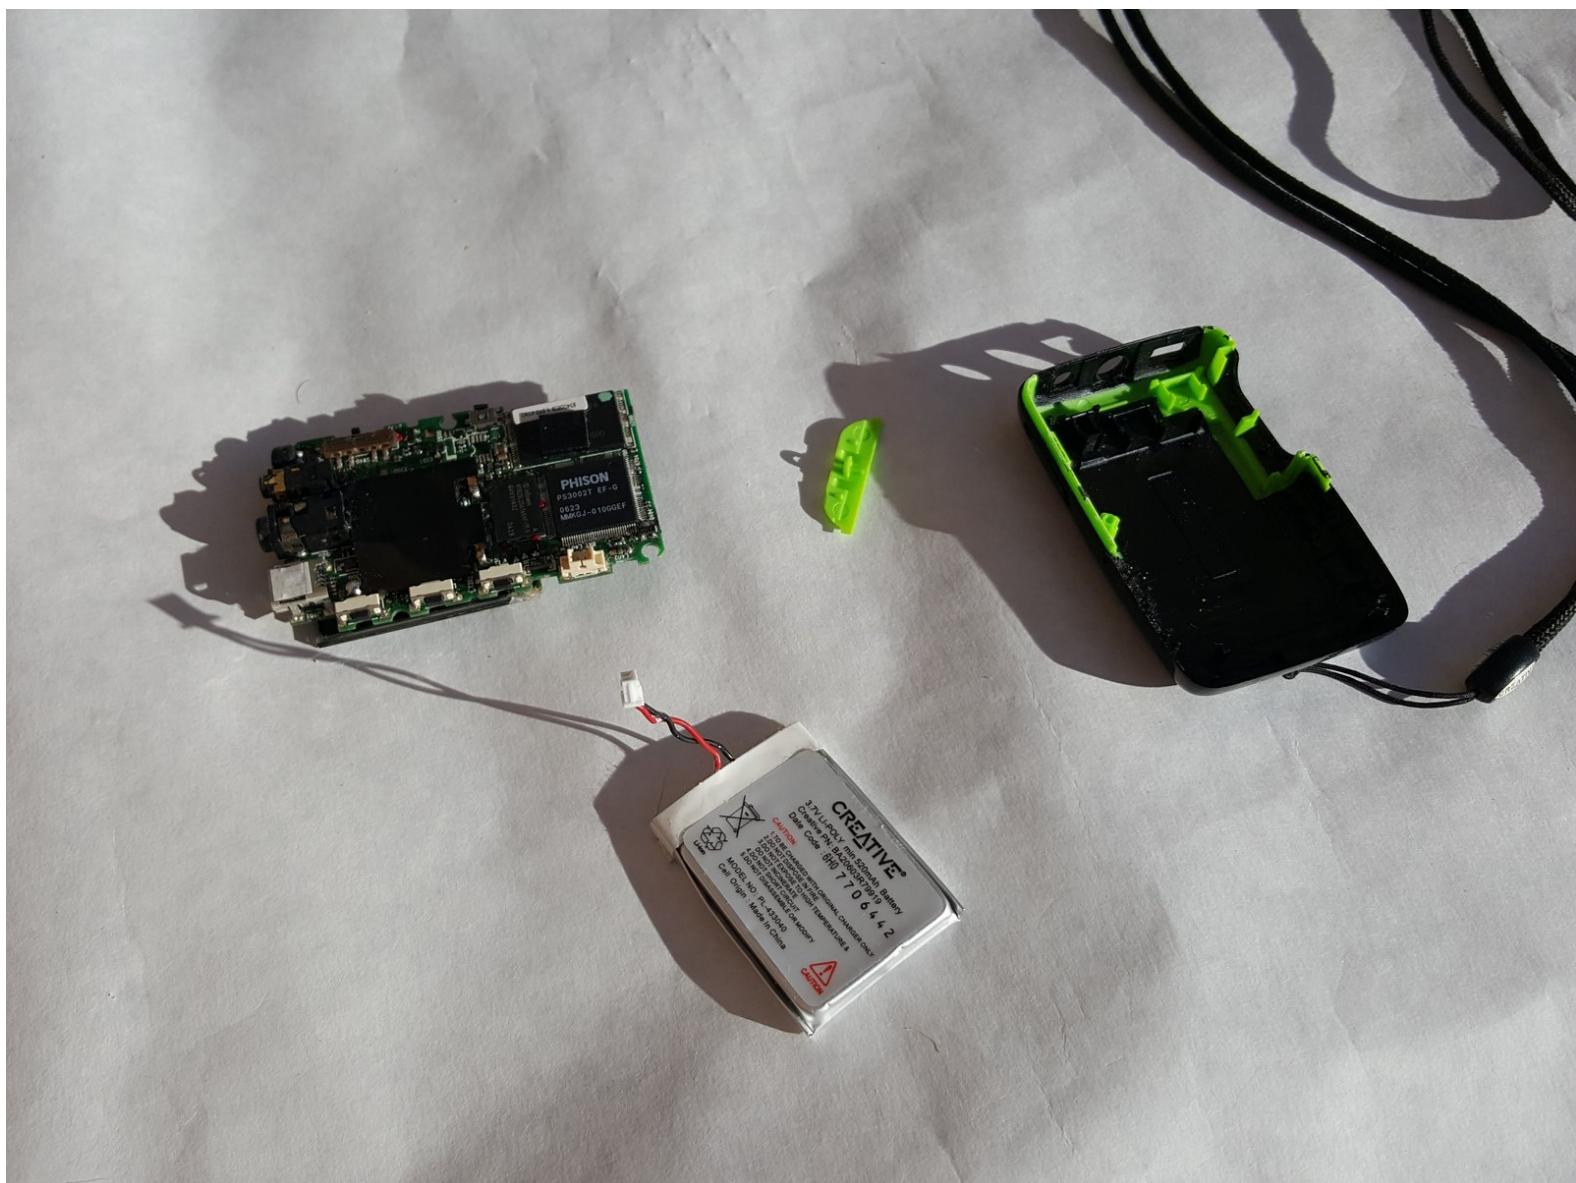

Creative Zen V Plus Battery Replacement

This guide is designed to give instructions on how to replace the battery for the Creative Zen V Plus.

Written By: Brock Schaffer



This document was generated on 2019-09-28 07:52:14 PM (MST).

INTRODUCTION

This guide is designed to give instructions on how to replace the battery for the Creative Zen V Plus.


TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Soldering Iron](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Anti-Static Wrist Strap](#) (1)

PARTS:

- [Creative ZEN replacement battery](#) (1)

Step 1 — Prerequisite Only

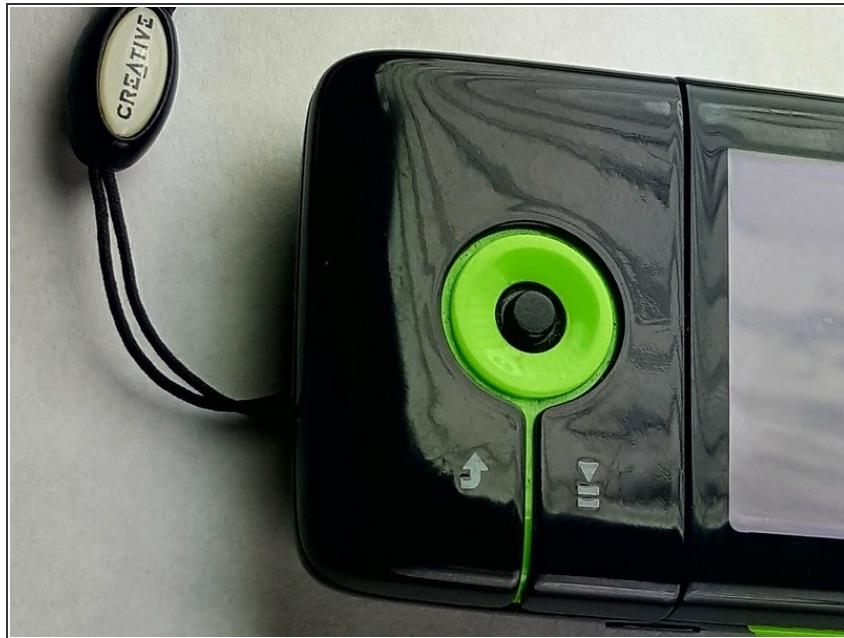

- Find the grooves around the buttons on the front and carefully remove the panel. This can be done without the use of any tools.

Step 2




- Using a plastic opening tool, place the skinny flat end between the groove running along side of the device.
- Using a twisting motion, detach the control panel from the device

Step 3




- Find the groove around the outside of the green section. Use an **ESD safe** spudger to slowly lift the plastic panel up.

Step 4

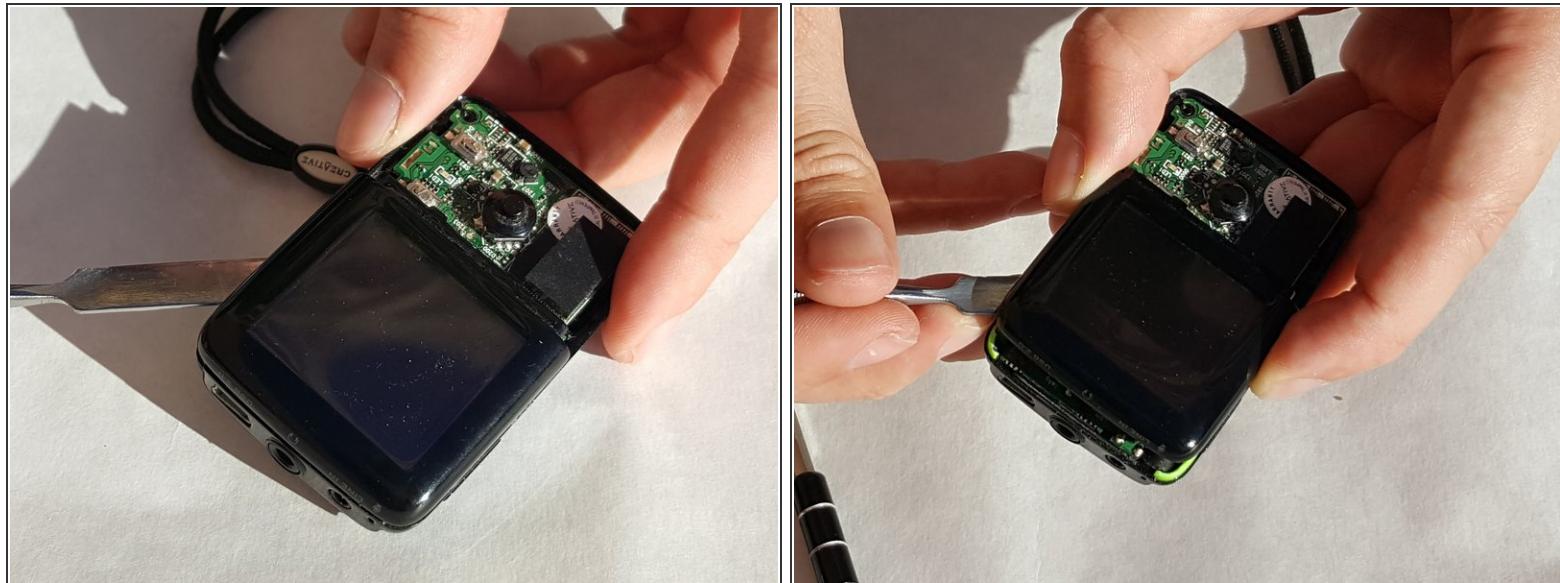


- After removing the green section, find the groove around the display. Insert a **ESD safe** spudger and carefully lift the display.

Step 5

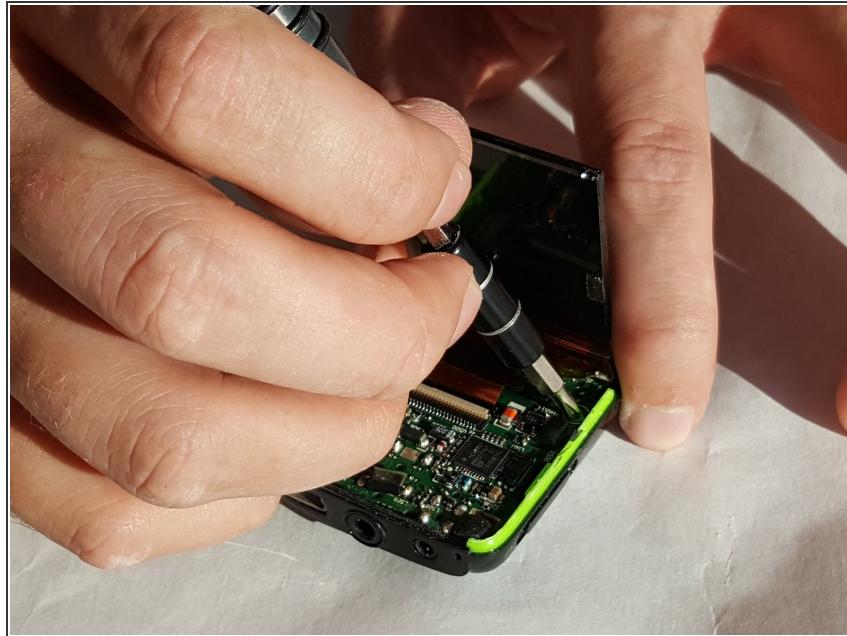


- The display can lift up the display but be sure not to damage any of the cables connecting it to the mother board.
- Remove the screw located under the display using the 00 Phillips head screwdriver.

Step 6

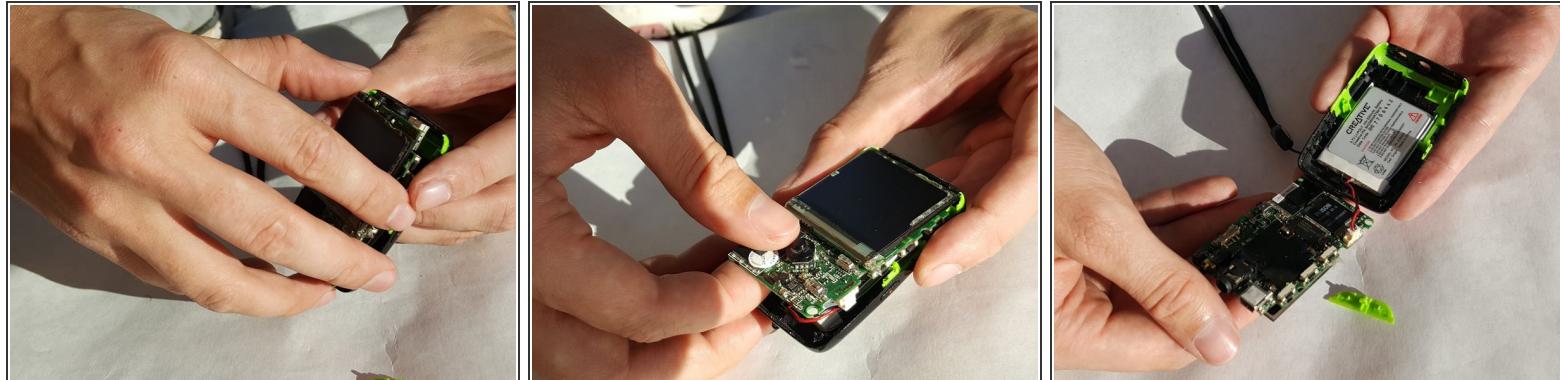

- Pull up on the motherboard and display. It is glued to the base so it will require a little force. Be careful though, as the board is fragile.

Step 7 — Battery

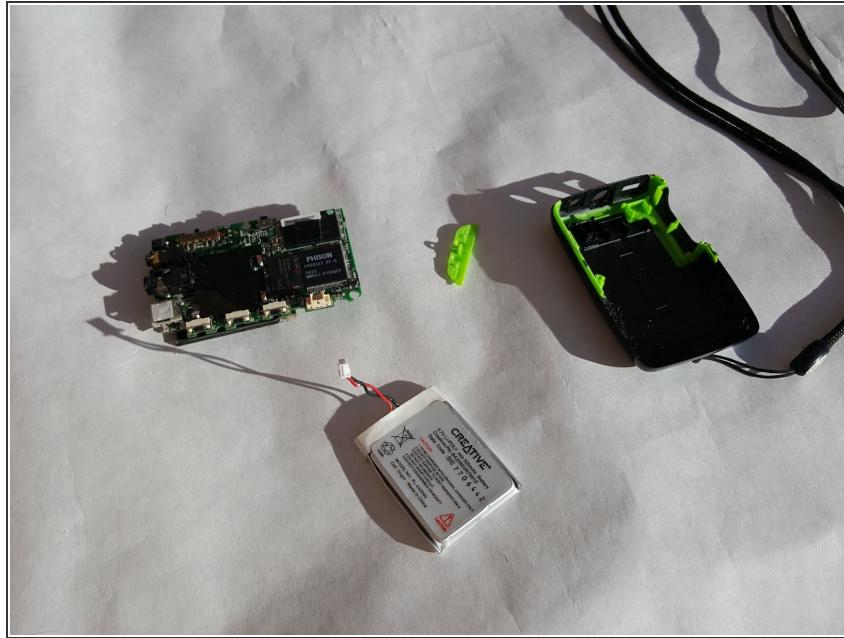

- Simply unplug the white colored battery from it's terminal and replace with the new battery.
- This completes the battery replacement process. Well done!

To reassemble your device, follow these instructions in reverse order.