



Creative Zen Vision W Front Cover Replacement

This guide will show you how to remove the front cover of your device.

Written By: Gabriele Pregadio



INTRODUCTION

This guide will show you how to remove the front cover of your device. Use this guide to gain access to the button pad and LCD screen.

TOOLS:

- **Spudger** (1)
- **Phillips #0 Screwdriver** (1)

Step 1 — Front Cover



- Remove 2 screws (2.5 mm) on the top of the device using Phillips #0.

Step 2



- Remove 2 screws (2.5 mm) on the bottom of the device using a Phillips #0.

Step 3



- Use a spudger to get between the cover and the screen. Carefully lift the cover off of the screen without putting too much pressure on the screen.
- When the cover has been lifted off the screen, use your hands to remove it from the device.
- The button pad may fall off when the cover is removed.

To reassemble your device, follow these instructions in reverse order.