




Creative ZiiO 7" LCD Screen Replacement

This guide will show you how to replace the LCD screen on the Creative ZiiO.

Written By: Kyle

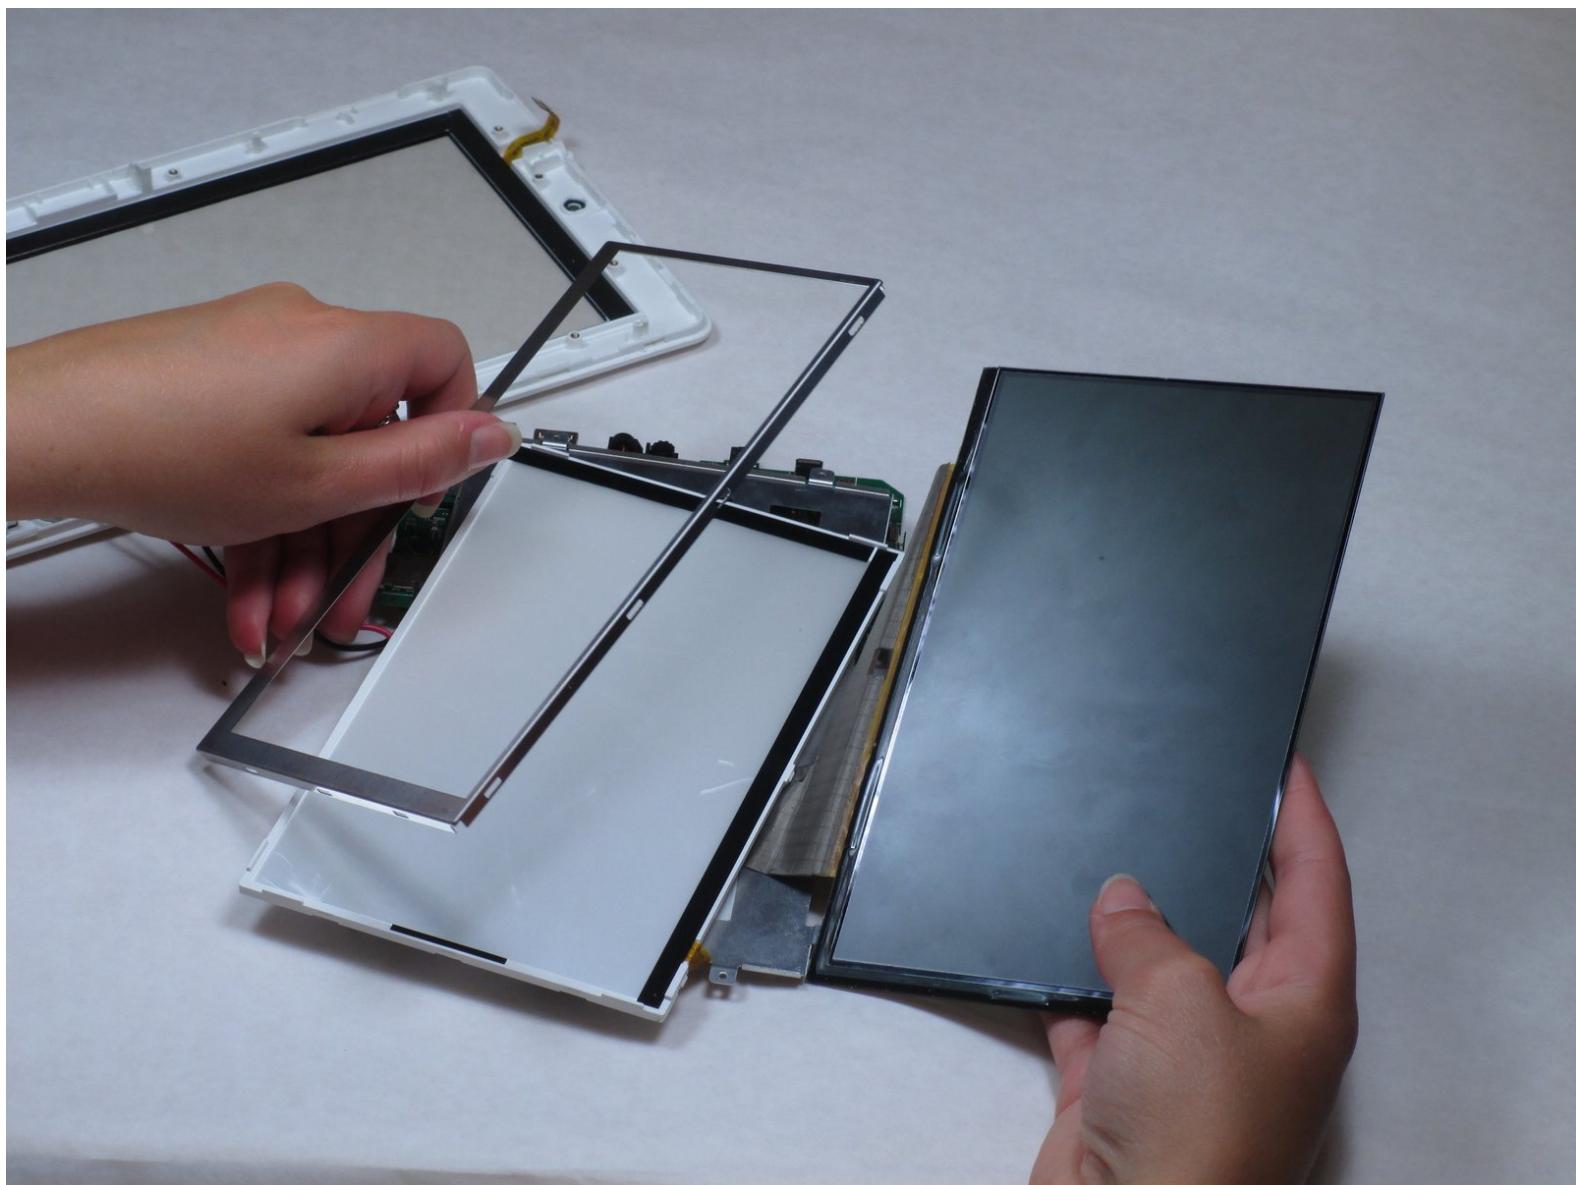


INTRODUCTION

The Creative ZiiO boasts excellent sound quality and usability. It uses a 7" LCD screen that cannot be replaced by a generic screen. Replacement screens may be provided by contacting Creative, depending on warranty details. Searching local tech stores or online tech supply sites may be helpful as well.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Back Panel

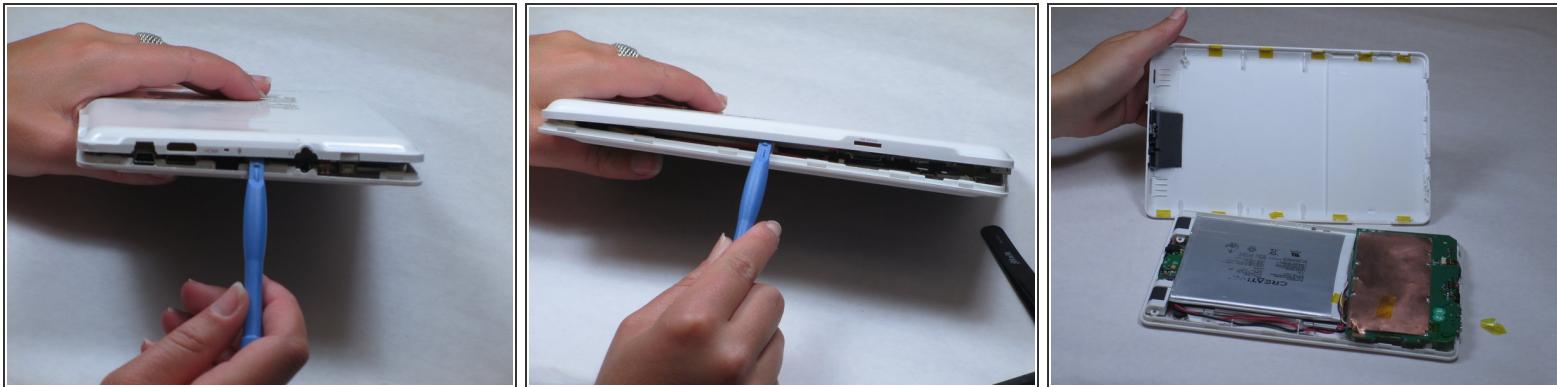

- Remove the back panel by using the plastic opening tool to carefully pry around the panel's edges.


 The volume control button and the top power button may fall out during this step.

Step 2 — LCD Screen



- Remove the four 3mm Philips #00 screws around the large silver battery.

Step 3

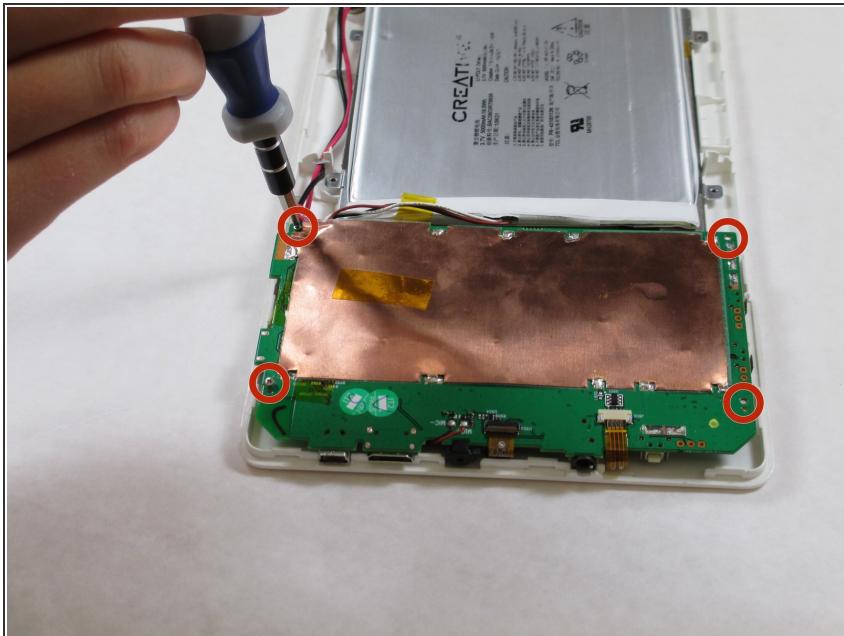

- Remove the four 4mm Philips #00 screws on the edges of the circuit board.

Step 4




- Remove the ribbon cable from the exposed side of circuit board near the headphone jack.
- Carefully lift up the circuit board on the detached side.

⚠ There is another ribbon cable attached to the underside of the circuit board.

- Disconnect the second ribbon cable by pulling the end of the ribbon from its housing on the circuit board with tweezers.


i The circuit board is extremely delicate. Move carefully and don't rush on this step!

Step 5

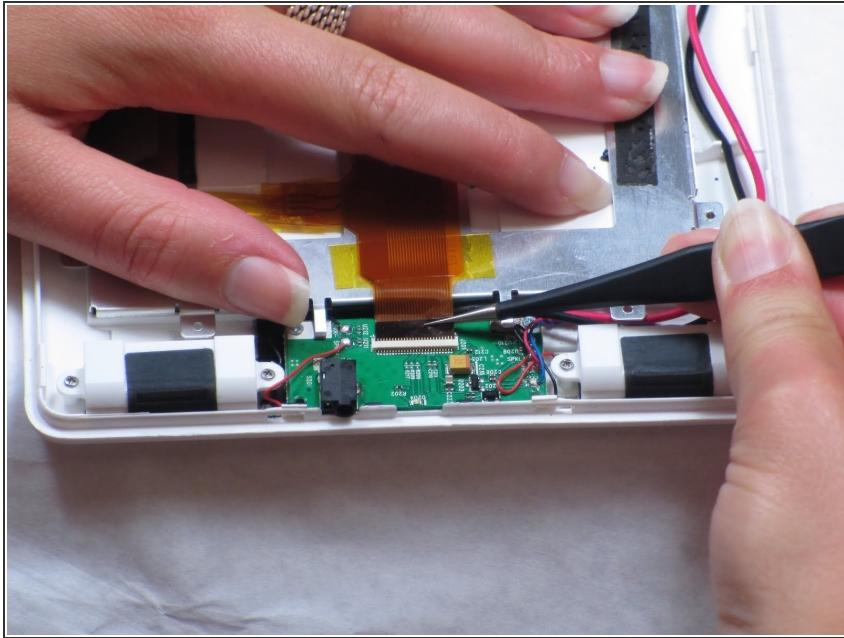



- On the opposite end of the device: Remove the ribbon cable in between the speakers at the end of the battery.

Step 6

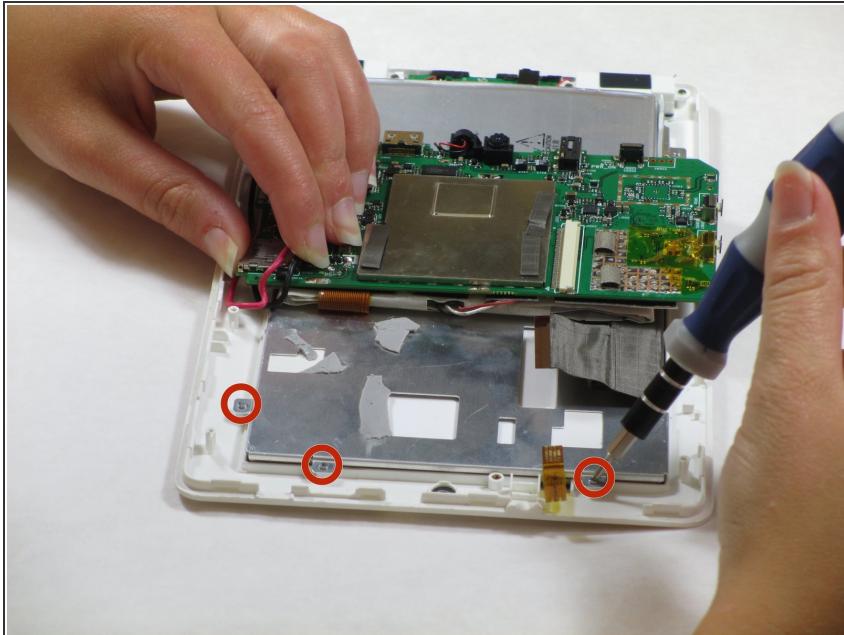

- There are three additional 3mm Philips #00 screws underneath the circuit board that need to be removed.
- Now, remove the battery and circuit board with the LCD attached and turn it over so the screen is facing upwards.


Step 7

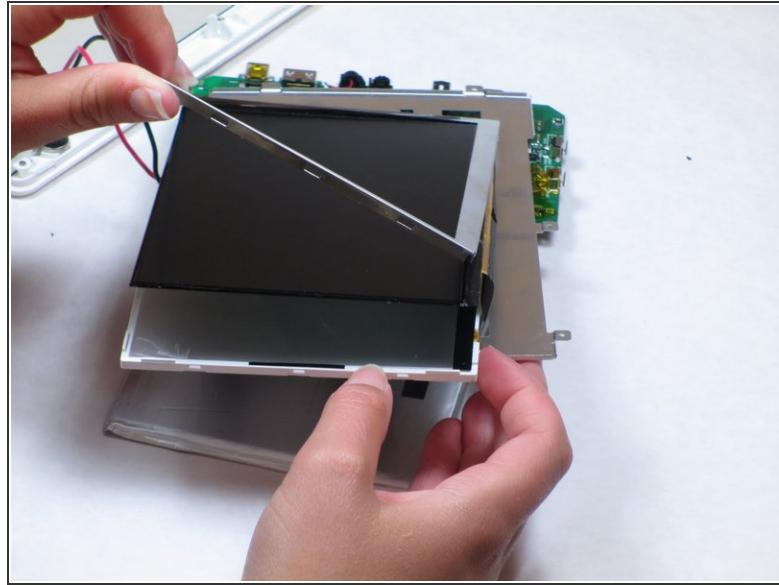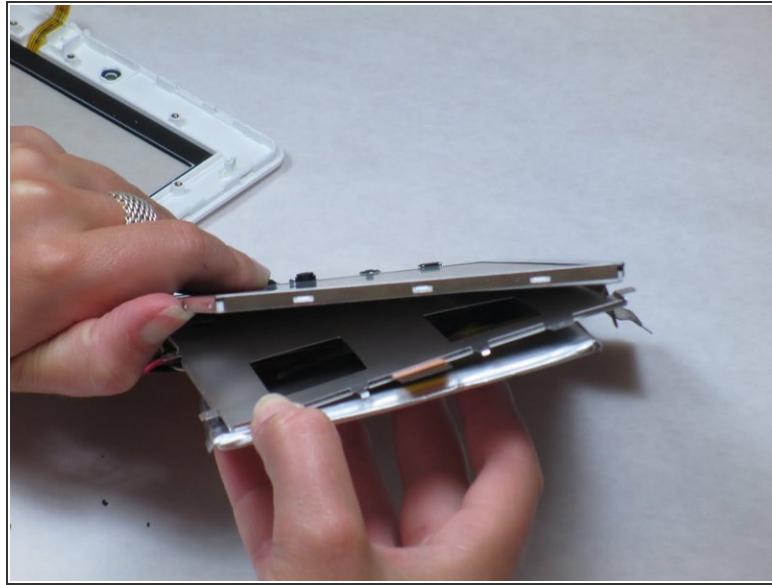

- Carefully pry the thin, metal frame from around the LCD screen.

⚠ The frame is extremely thin! Take your time when removing it to avoid bending or deforming it.

Step 8

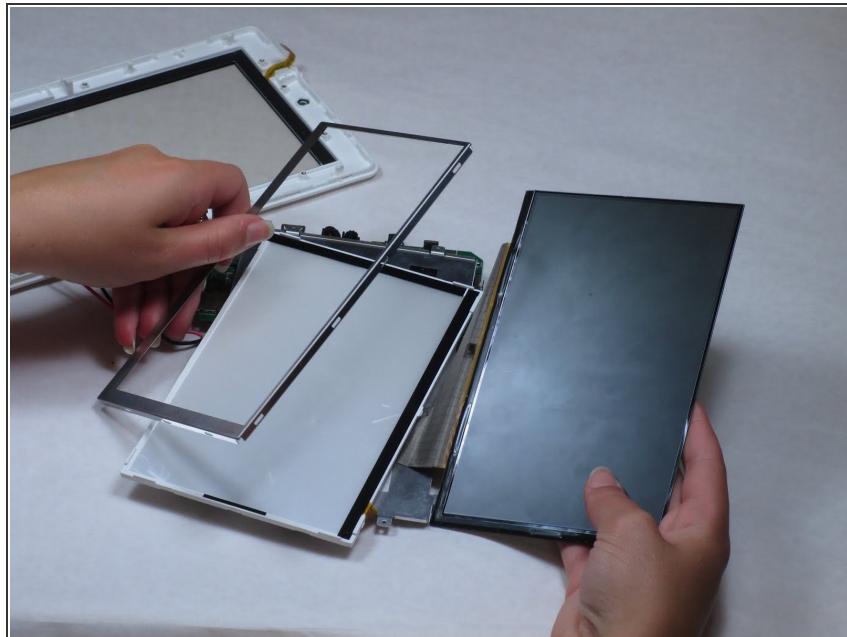

- Carefully remove the black LCD screen.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-27 10:55:15 PM (MST).

