




# Creative Zio 7" Left Speaker Replacement

In this guide, you will be able to uninstall the broken left speaker of the Creative ZiiO 7" and install a new, functioning speaker.


Written By: Kyle

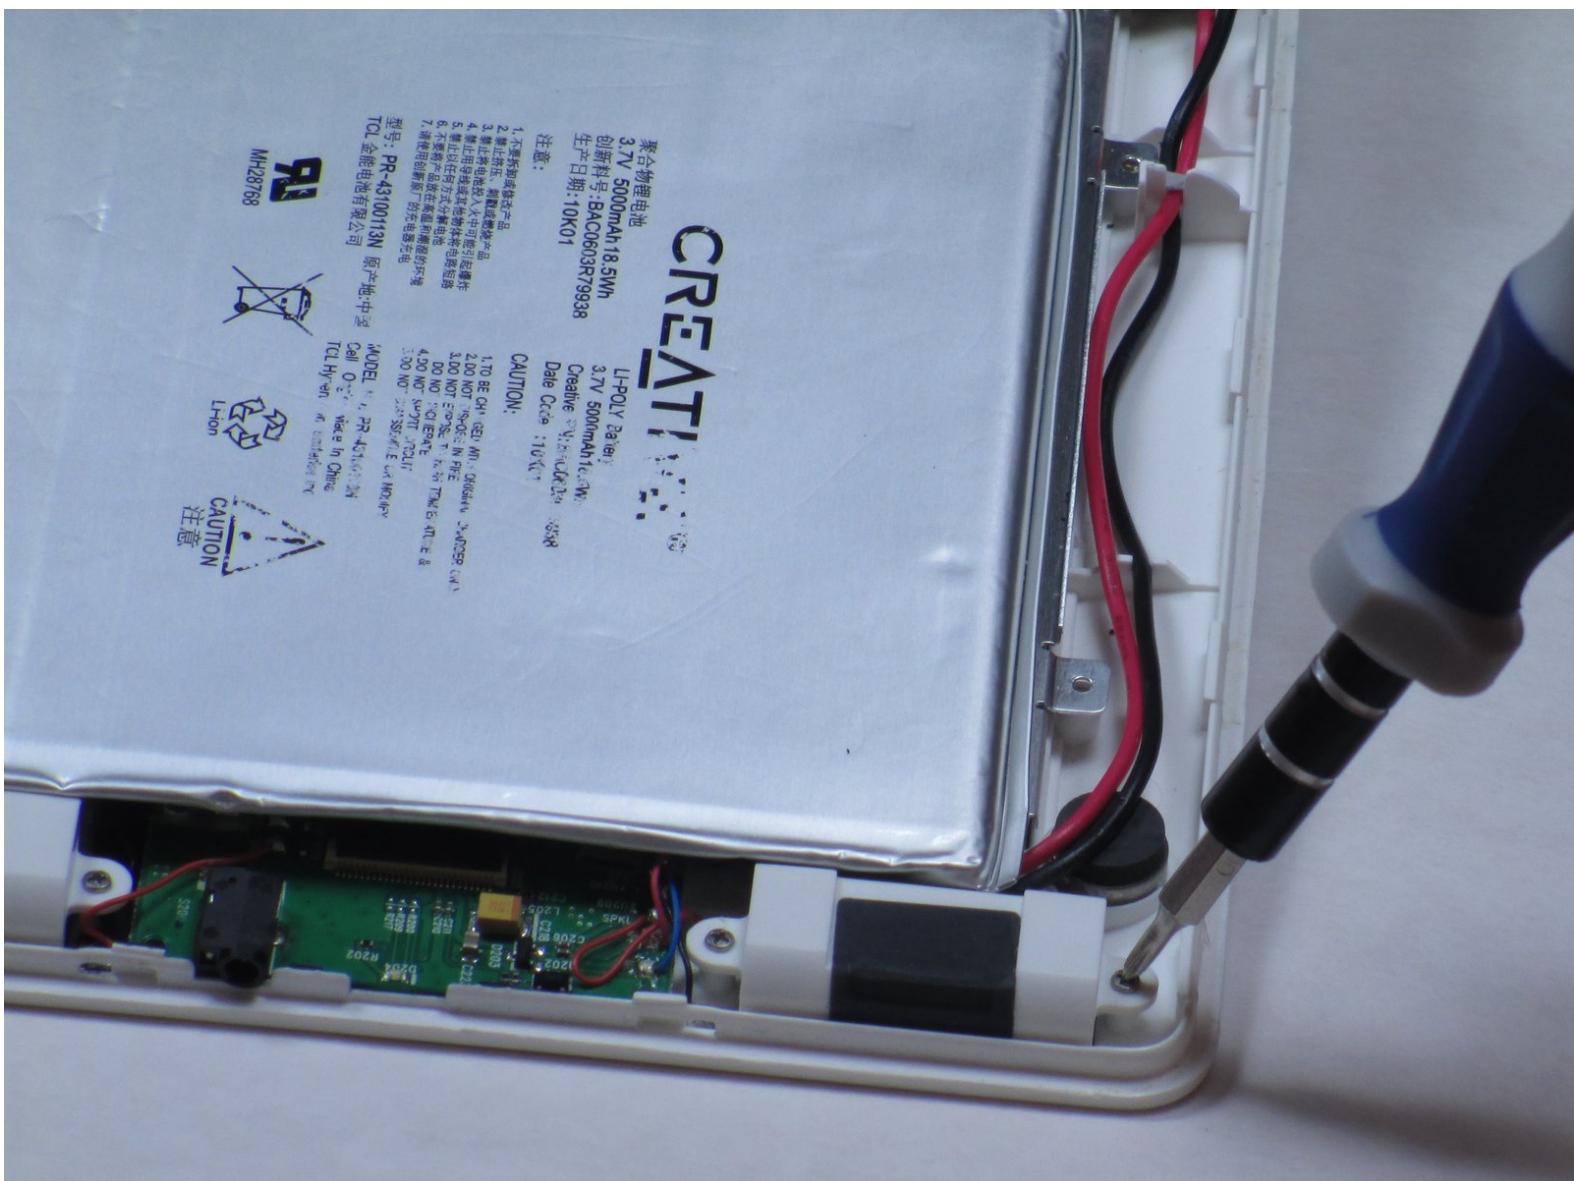

 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)


## Step 1 — Back Panel

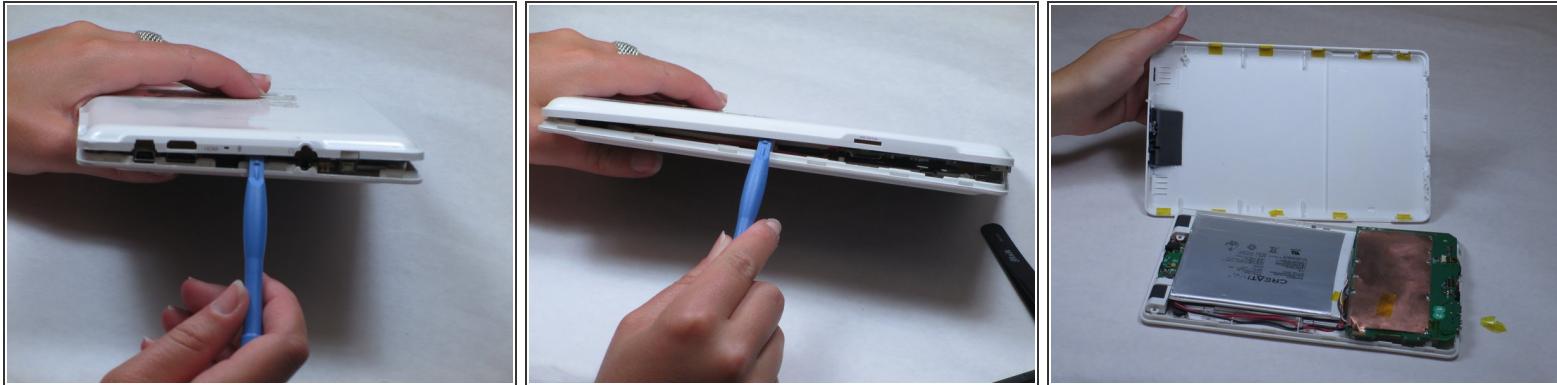

- Remove the back panel by using the plastic opening tool to carefully pry around the panel's edges.


 The volume control button and the top power button may fall out during this step.

## Step 2 — Left Speaker

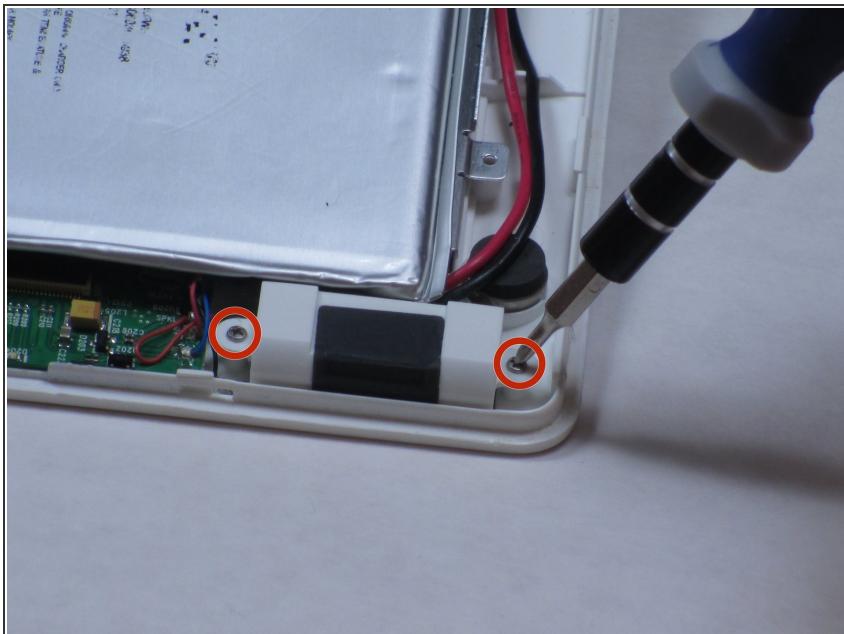

- The left speaker is directly below the battery and on the side with the main red and black wires.
- Unscrew the two 4mm Philips #00 screws using a Philips Screwdriver.

## Step 3

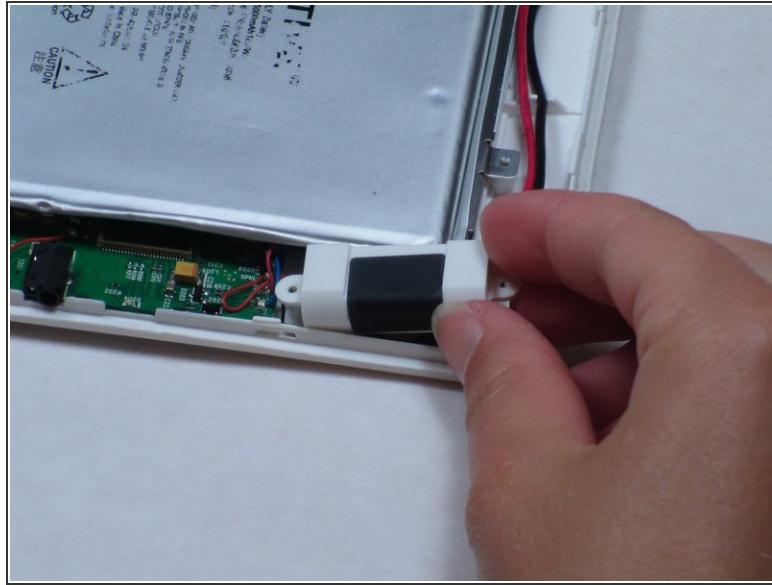

- Once the screws are removed, discard the broken speaker.
- Replace the broken speaker with new left speaker.

To reassemble your device, follow these instructions in reverse order.