



# Crosley CR42 Band Replacement

The replacement guide will break down the process of removing the turn table to access and replace the turning band properly.

Written By: Roberto Rosila



## INTRODUCTION

This guide is going to show you an easy way to replace the turning band in you Crosley CR42. So you can enjoy your LP sooner rather than later.



## PARTS:

- [New Belt for Crosley CR42 \(1\)](#)

## Step 1 — Band



- Check [troubleshooting wiki](#) to make sure you aren't doing way more work than you have to!
- If you believe the band may be broken or out of place, start by unplugging the record player.

## Step 2



- Make sure the needle is in its resting position off to the side.
- Gently remove the turntable from the device by lifting it directly upward.

## Step 3



- Find the band, it may have fallen into the inside of the record player as you removed the turntable.
- Inspect your band for any tears, rips, or obvious signs of stretching.

## Step 4



- Flip the turntable over.
- Locate the notch on the back side of the turntable.
- The notch will be on the outside edge of the turntable.

## Step 5



- Wrap the band around the inner circle of the turntable and gently pull the band until you get to the notch.
- Loop the band around the notch, the band should be taut.

## Step 6



- Place the turntable back onto the device.
- *(i)* Make sure to line up the band with the turning knob, to ensure the band is properly placed.

This document was generated on 2019-09-24 09:38:14 AM (MST).

## Step 7



- After the turntable is back on the device, gently turn it clockwise until you hear a 'click.'
- Job well done!