



# Crosley CR8005A Needle Replacement

Are your speakers experiencing unintended variation in volume? If so, your needle may need to be replaced. You will need to order a replacement NP6 needle.

Written By: Austin Davenport



## Step 1 — Needle




- Pick up the needle arm and locate the needle.

## Step 2



- Carefully pull down on the front edge of the needle.

## Step 3

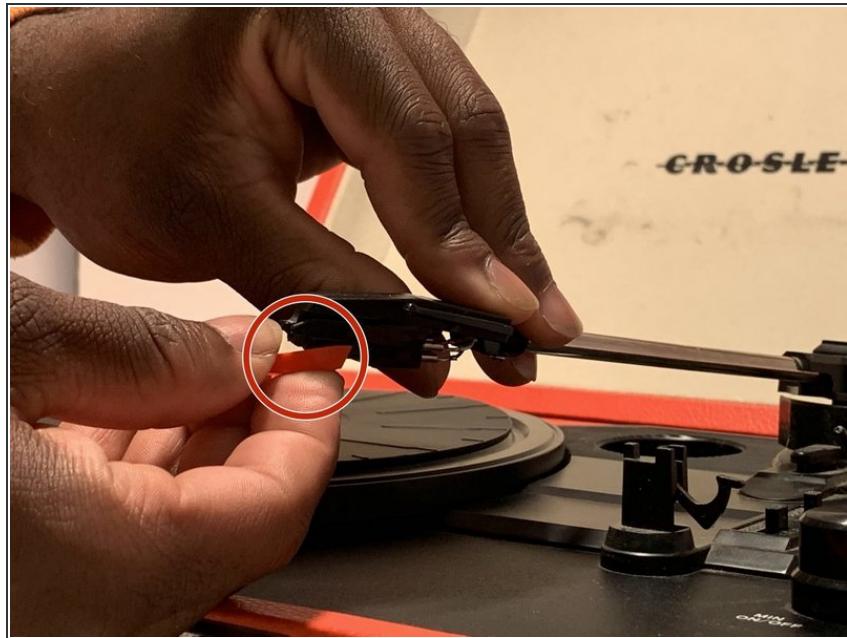

- Slide the needle towards you then pull outwards and remove the needle.

To reassemble your device, follow these steps in reverse order.