



Cuisinart CHW-12 Removable Drip Tray Replacement

Replacing your drip tray to keep your coffee from leaking from the tray.

Written By: Abraham Maldonado



INTRODUCTION

Coffee keeps leaking out the drip tray? It may be time to replace it. This guide will show you the steps to replace your drip tray.

Step 1 — Removable Drip Tray



- Locate the removable drip tray.
- Remove drip tray.

Step 2



- Remove the drip tray plate.

To reassemble your device, follow these instructions in reverse order.