



Cuisinart CPB-380 Disassembly

This guide will assist a user in disassembling the Cuisinart CPB-380 to access the internal components.

Written By: William Hesse



 **TOOLS:**

- Metal Spudger (1)
- Utility Scissors (1)
- Phillips #2 Screwdriver (1)

Step 1 — Cuisinart CPB-380 Disassembly




- Turn the device upside down.
- Remove all four rubber feet by prying them out using the metal spudger.
- Once the rubber feet have been removed, use the Phillips #2 screwdriver to remove all four 13mm screws.

Step 2




- Remove the base from the body of the blender.

Step 3

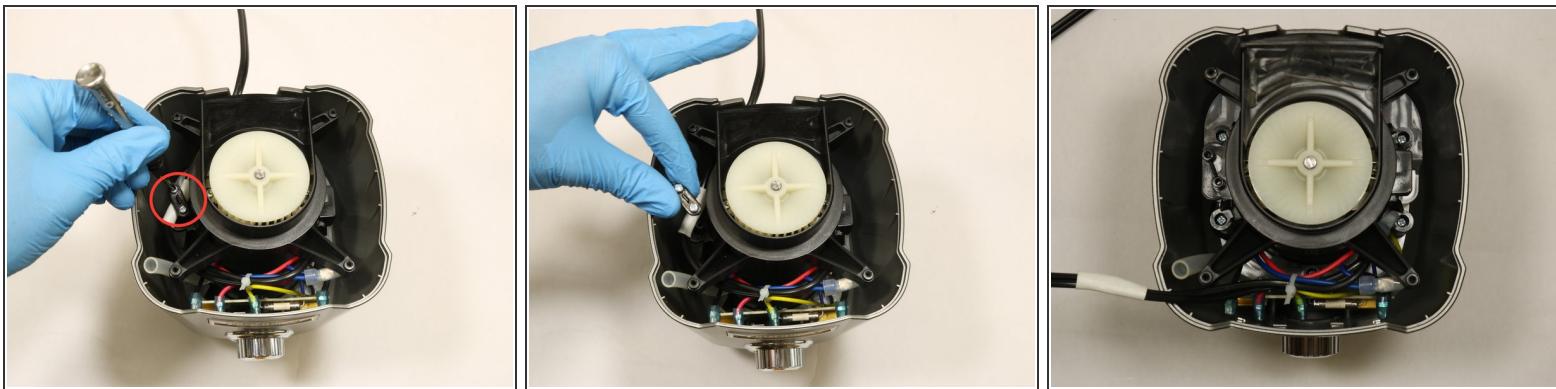


- Remove the two 11mm screws securing the power cord using the Phillips #2 screwdriver.
- Gently move the wire aside so that it is not in the way.

Step 4

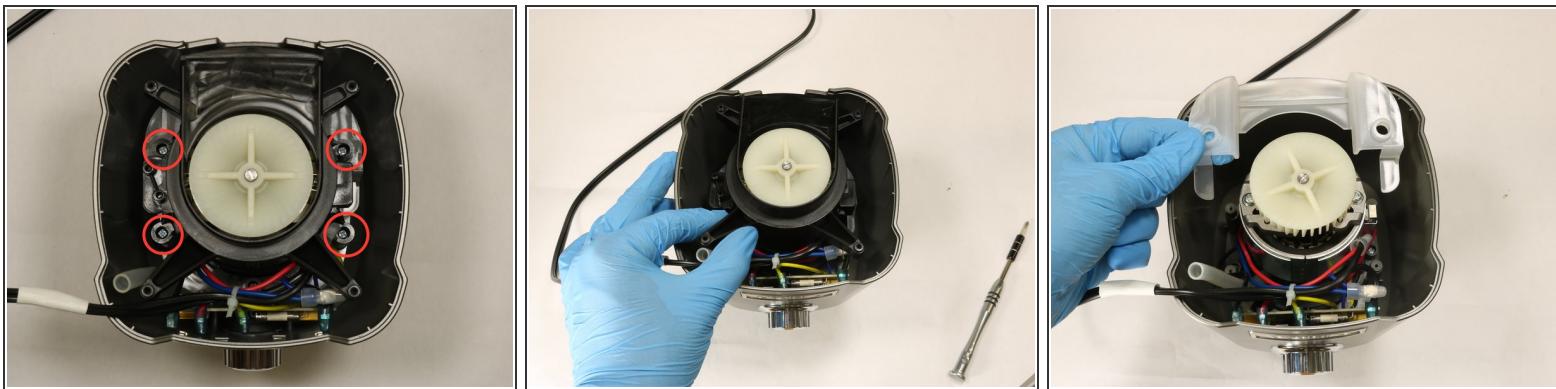

- Remove the four 13mm screws that hold the black plastic cover using the Phillips #2 screwdriver.
- Gently remove the black cover. Underneath you will see a clear plastic cover that should be removed as well.

Step 5

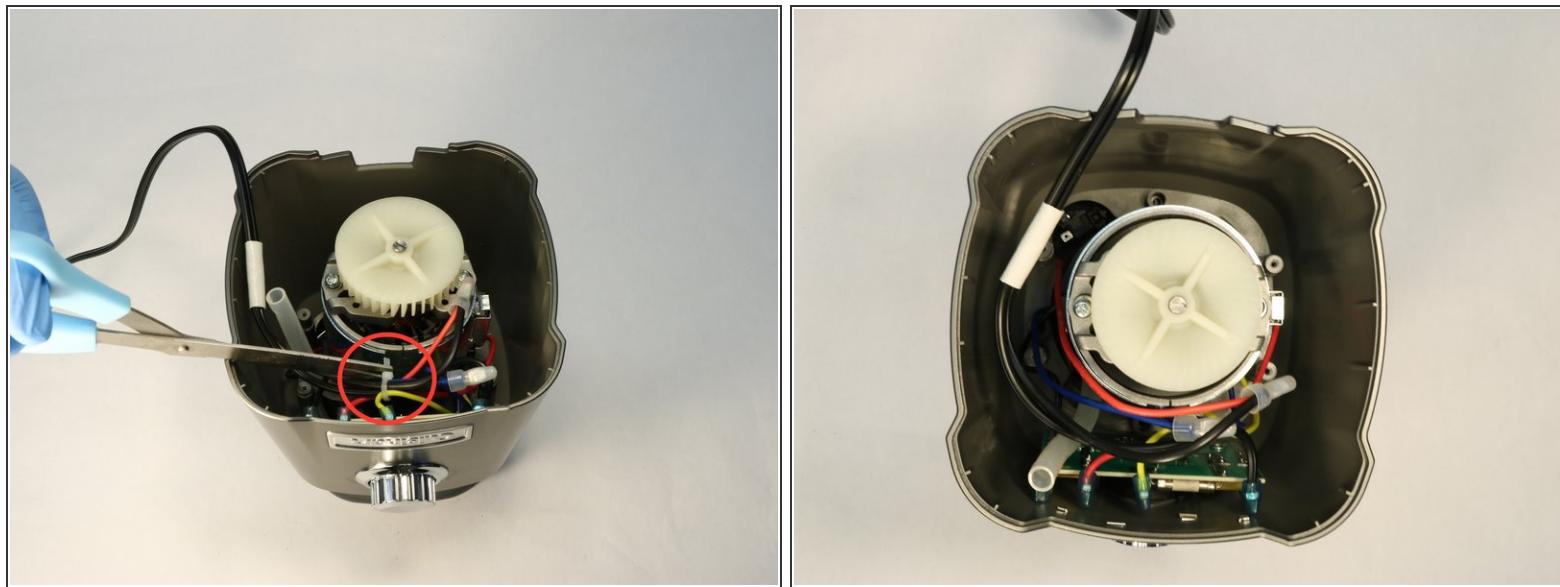

- Cut the zip tie that holds the black, blue, red, and yellow wires together.

 Take care not to cut the wires.

To reassemble your device, follow these instructions in reverse order.