



Cuisinart DCC-1100 Heating Element Replacement

This guide will instruct you about how to replace the Cuisinart DCC-1100 Heating Element.

Written By: Tanvirul Arafin



INTRODUCTION

In this guide you will learn how to replace the Cuisinart DCC-1100 Heating Element if you are having issues with the device heating up. Please have a replacement heating element ready and potentially extra thermal paste. Also unplug the machine before beginning work.

TOOLS:

- Phillips #0 Screwdriver (1)
- Phillips #1 Screwdriver (1)

Step 1 — Heating Element



- Remove the coffee pot and unplug the maker.
- Flip the coffee maker over so that way the bottom is facing you.

Step 2





- Remove the five 1.6mm Phillips #1 screws from the bottom.
- Remove the bottom cover.

Step 3



- Remove the two 1.6mm Phillips #0 screws from the heating element.
- Lift up the heating element and remove the hot plate.

Step 4

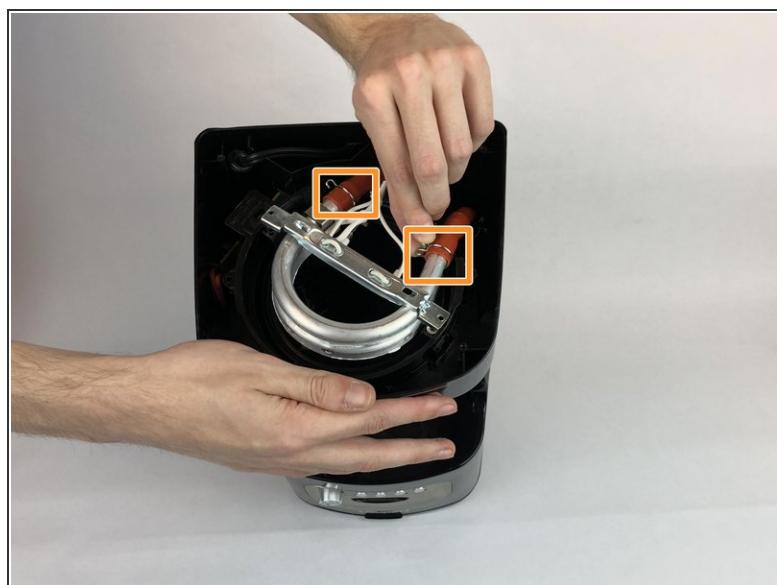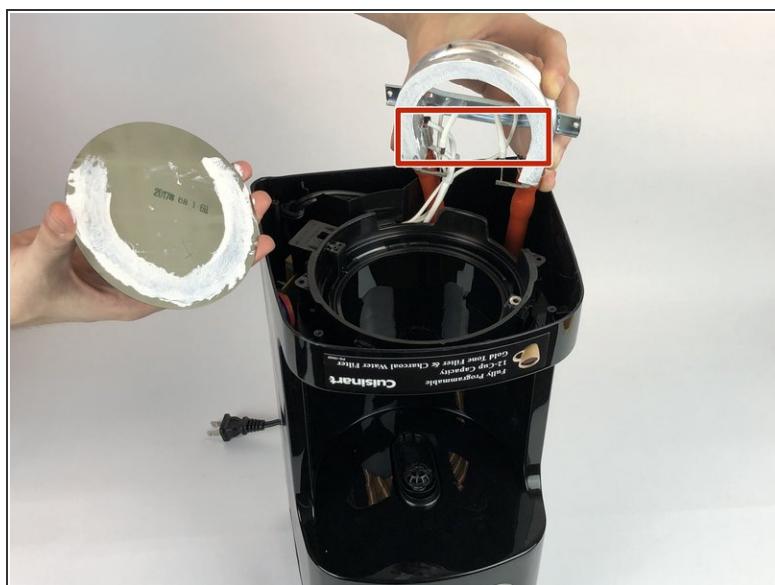

- Disconnect the heating element.
- Pinch the tube clips and remove from tubes from the heating element.

To reassemble your device, follow these instructions in reverse order.