




# Cuisinart DFP-14BCN Buttons Replacement

Replace the "on" and "off/pulse" buttons of your device to get your blades spinning again.

Written By: Sonya Dick

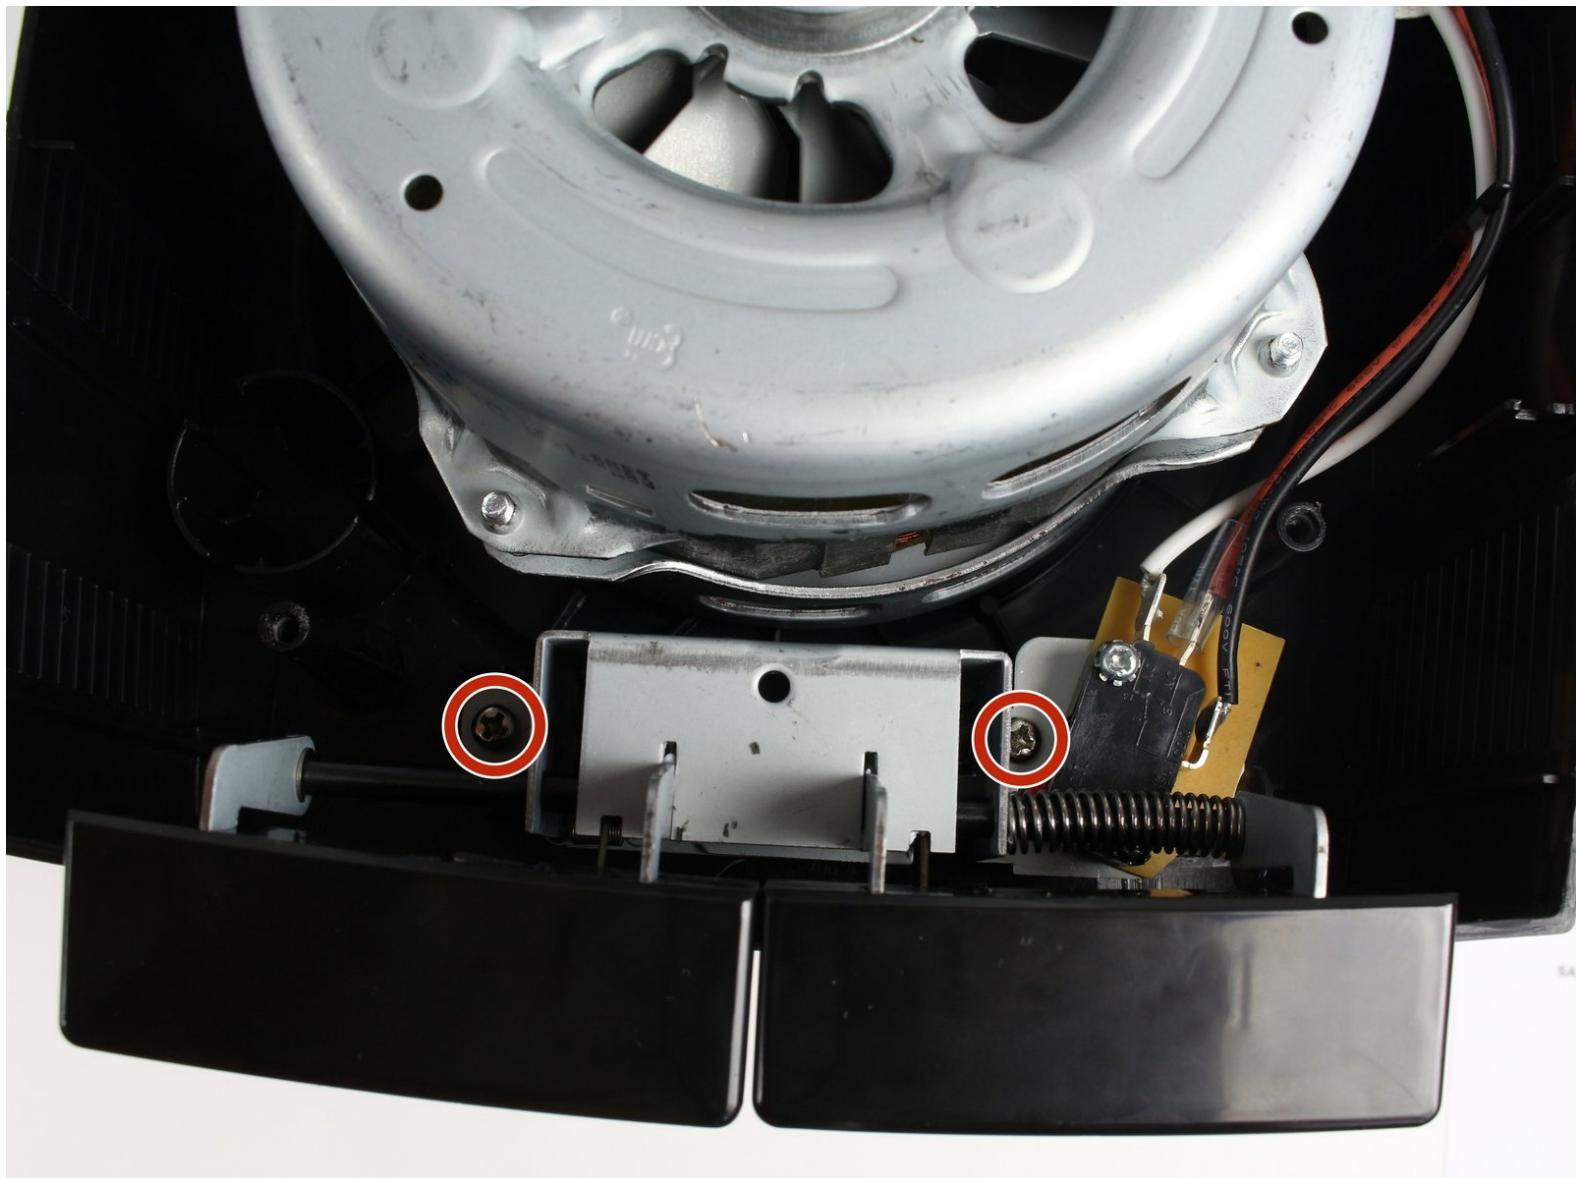

## INTRODUCTION

This guide will show you how to remove the buttons on your food processor and replace them if they are damaged. This guide only requires the use of a screwdriver and nut driver, but gives you a look at the inside of your food processor.

### TOOLS:

- Phillips #2 Screwdriver (1)
- 64 Bit Driver Kit (1)

## Step 1 — Bowl



*(i)* Unplug your food processor before starting any disassembly.

- Remove the small pusher by rotating it clockwise and lifting up.

## Step 2



- Remove the large pusher by grabbing its sides and pulling up.

*(i)* There may be a clicking sound from the safety feature being disengaged in this step.

## Step 3



- Remove the lid from the bowl by turning it clockwise and lifting.

## Step 4



- Take out the blades by grabbing the plastic center piece and lifting up.

 Avoid contact with blades as they are extremely sharp.

## Step 5




- Position the handle of the bowl so that it is on your left.
- Grab the handle and push clockwise. Lift up the bowl to remove it.

## Step 6 — Back Casing




- Turn the food processor's base upside down by lifting it up and turning it over.
- Position the base so that the on and pulse buttons are facing you.
- Place the base on top of the food processor's bowl to keep the base from wobbling while you work on it.

## Step 7

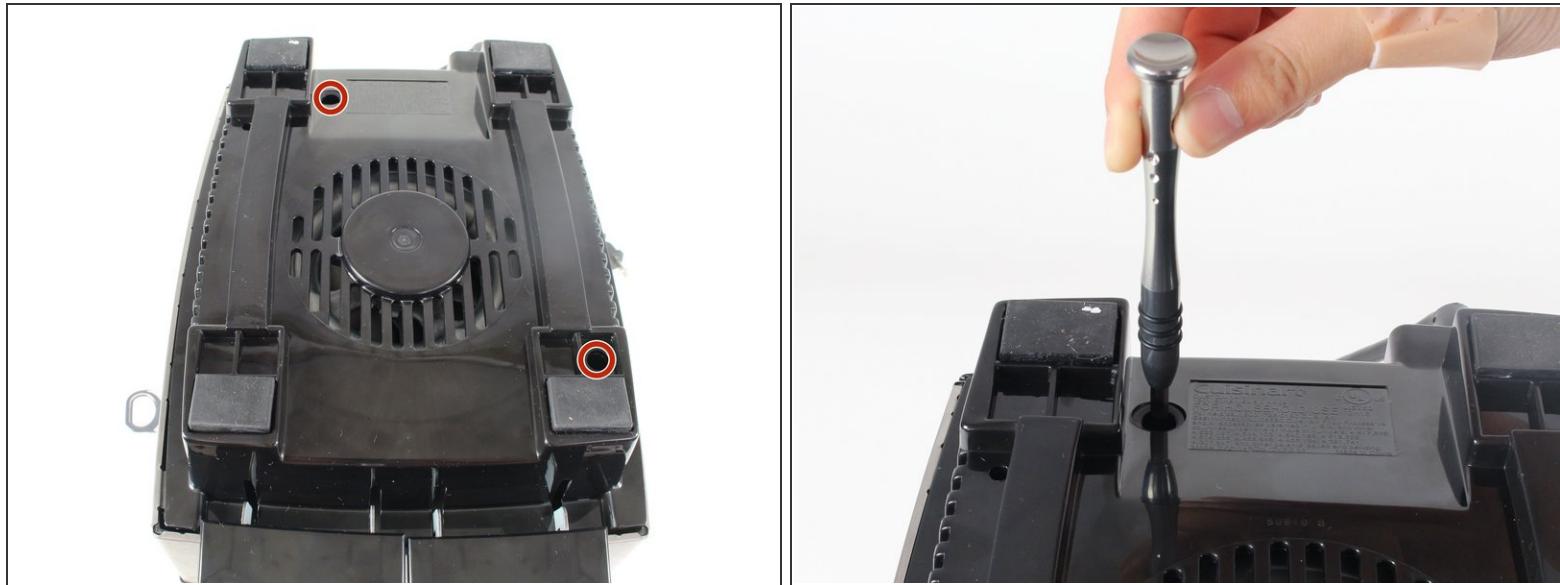


- Remove the two 13.0mm screws that hold down the casing with a Phillips #2 screwdriver.

## Step 8

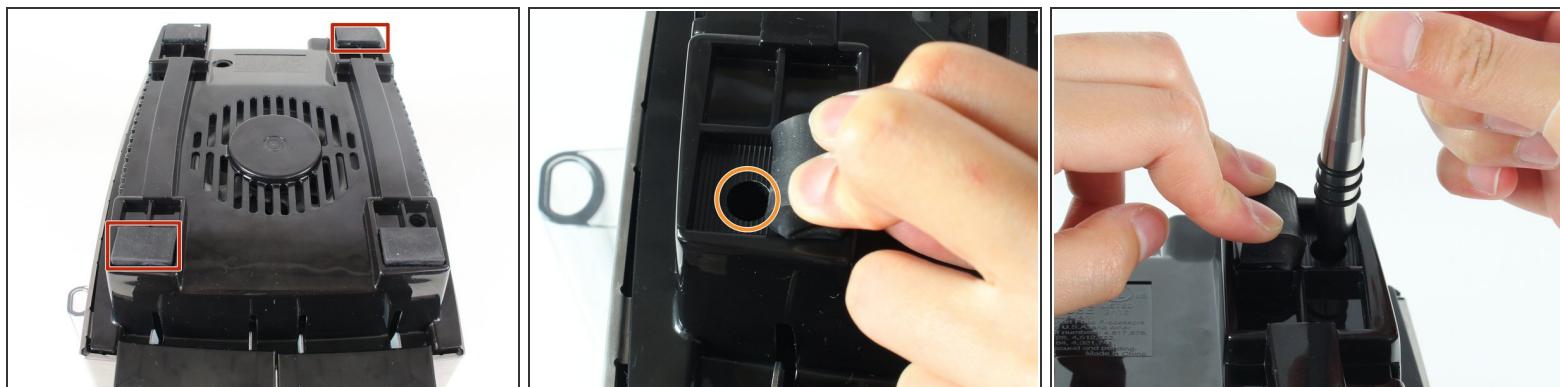


- Lift up the front left and the back right rubber feet by pulling back the rubber with your fingers.
- Remove the 13.0mm screw under each rubber foot with a Phillips #2 screwdriver.

## Step 9

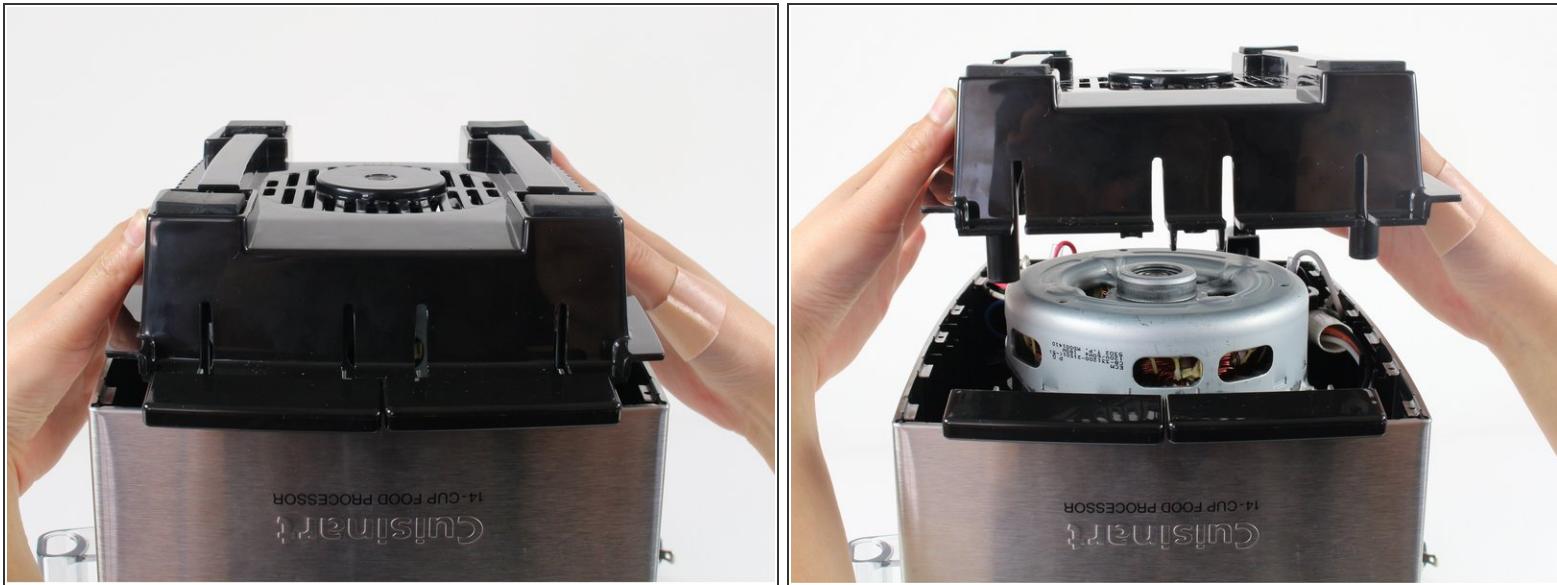



- Lift off the back casing by raising it upward.

## Step 10 — Buttons

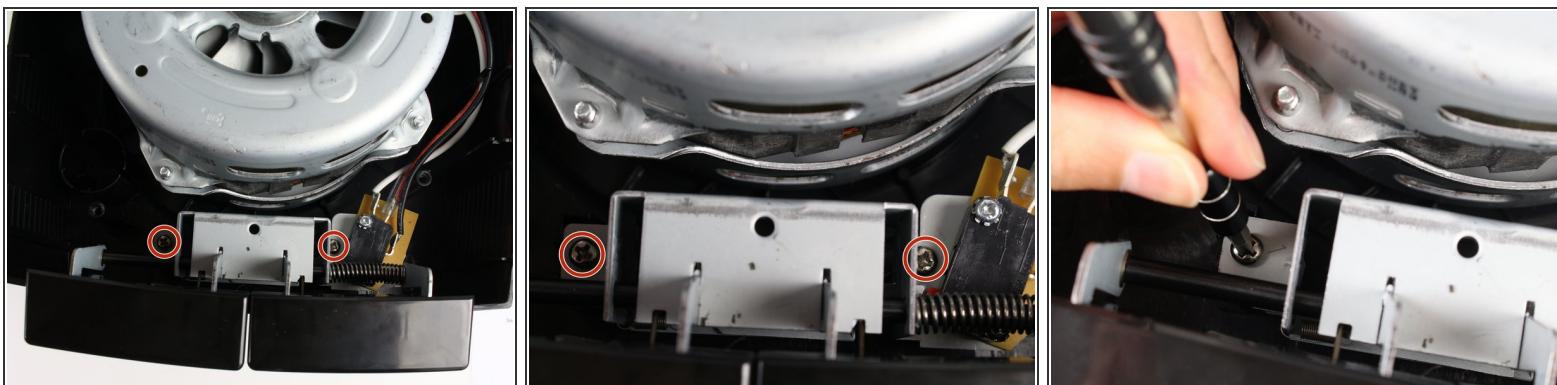


- Remove the two 13.0mm screws that are holding down the button assembly using the Phillips #2 screwdriver.

## Step 11

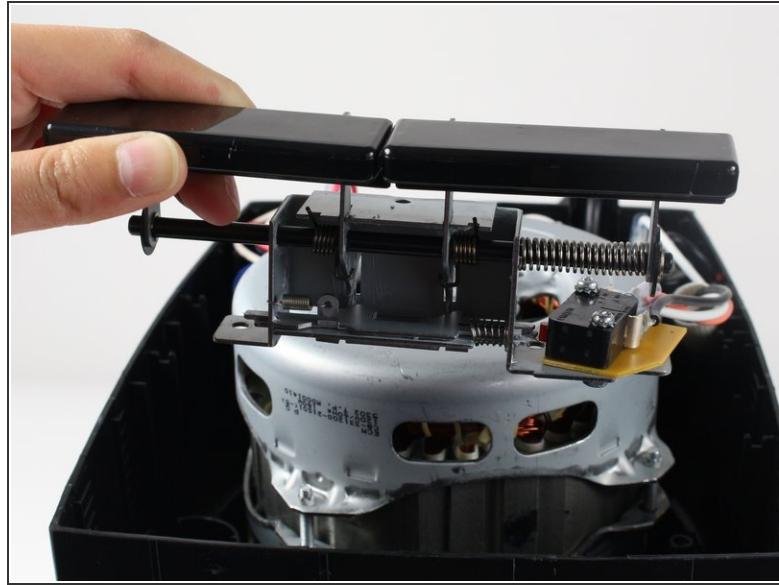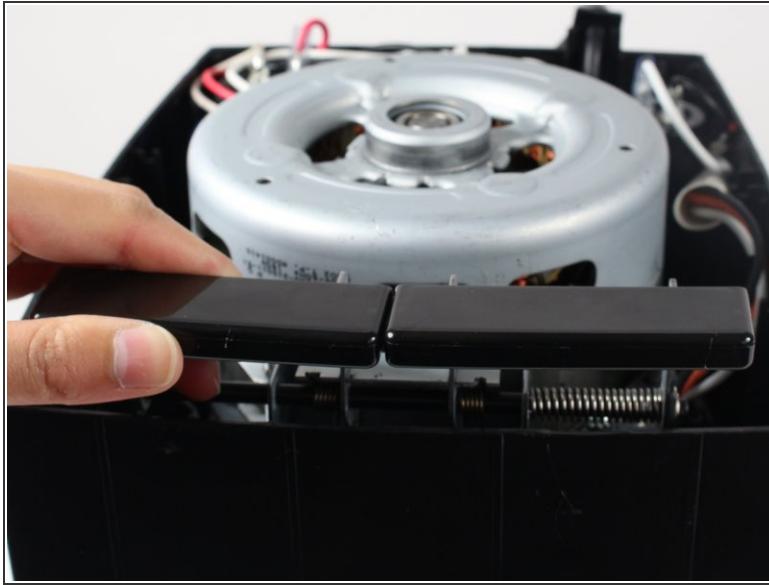


- Lift out the button assembly by pulling up.

## Step 12

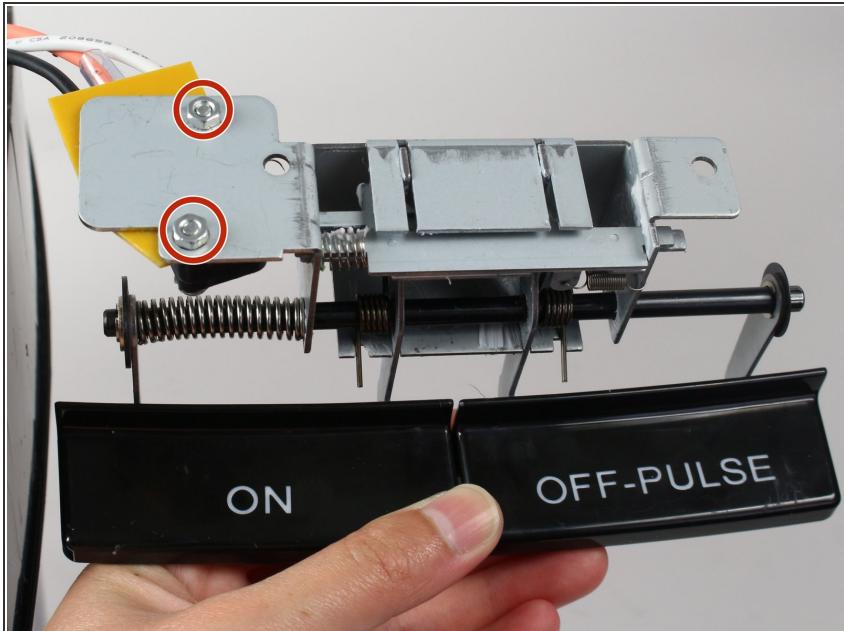

- Remove the two 5.5mm nuts with a 5.5mm nut driver.

## Step 13

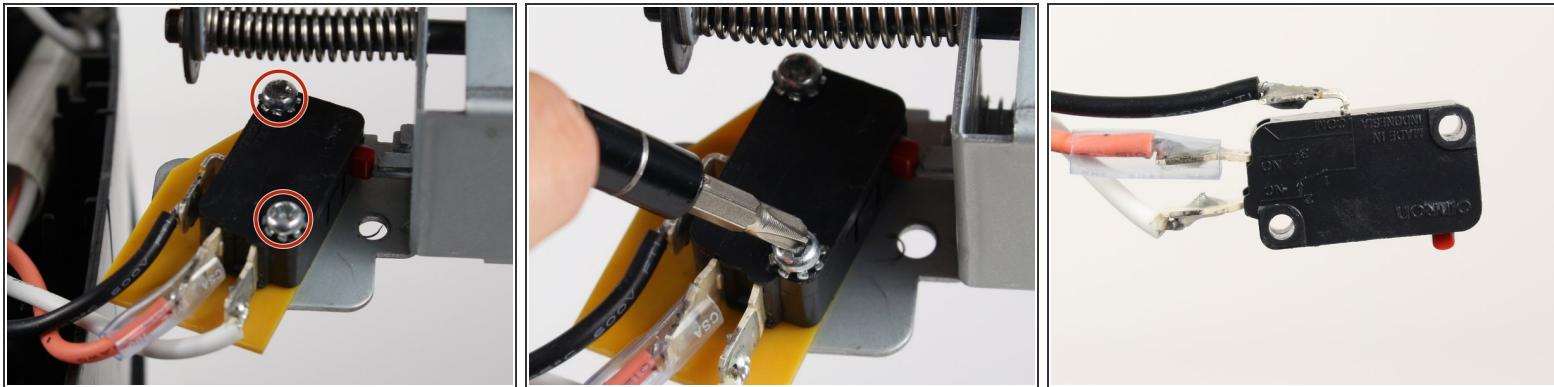

- Remove the two 13.0mm screws that hold the switch to the button assembly with a Phillips #2 screwdriver.  
*(i)* The screws have glue in their threads, so this step might require a little extra force.
- Slide off the switch and yellow plastic to remove the button assembly.

To reassemble your device, follow these instructions in reverse order.