




Cuisinart DFP-14BCN Switch Replacement

Replace your faulty switch so your device can turn on.

Written By: Sonya Dick

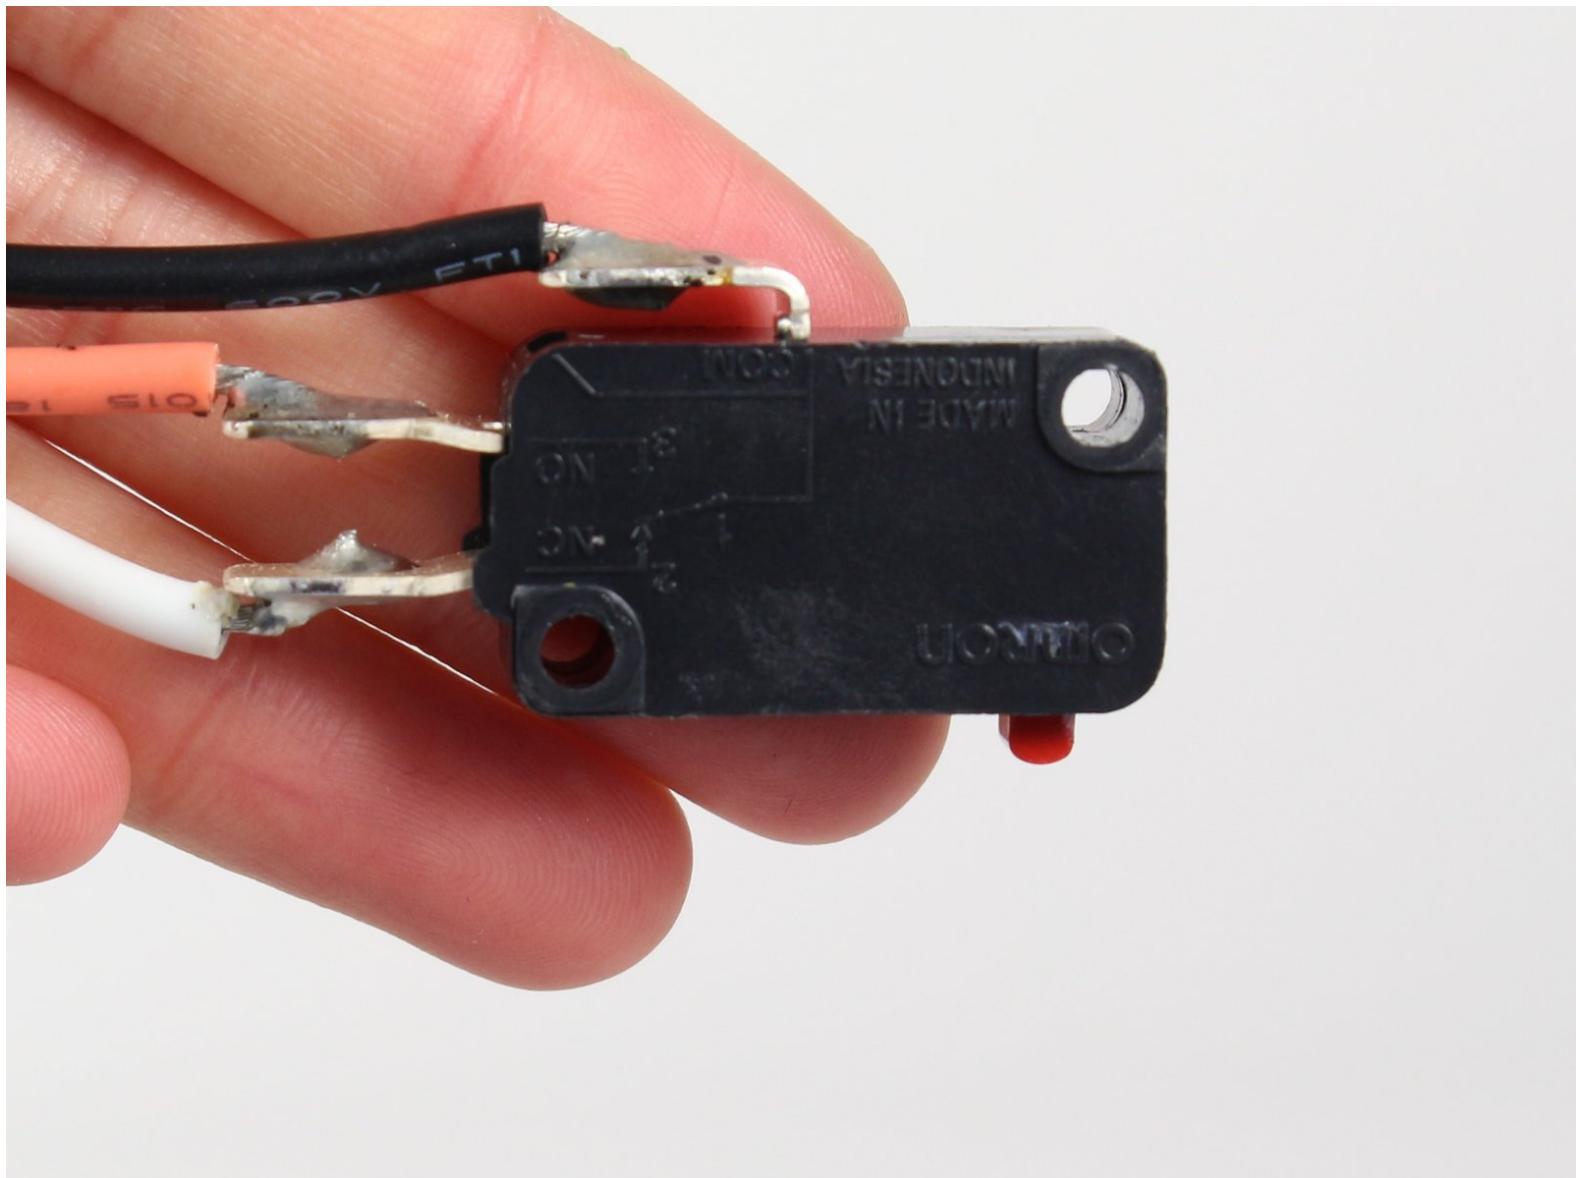

INTRODUCTION

A broken switch means electricity is not flowing through your device. Removing and replacing this component requires soldering. Check out this [soldering guide](#) for instructions.

TOOLS:

- 64 Bit Driver Kit (1)
- Phillips #2 Screwdriver (1)
- Portable Soldering Iron (1)
- 5mm Nut Driver (1)

Step 1 — Bowl



(i) Unplug your food processor before starting any disassembly.

- Remove the small pusher by rotating it clockwise and lifting up.

Step 2



- Remove the large pusher by grabbing its sides and pulling up.

(i) There may be a clicking sound from the safety feature being disengaged in this step.

Step 3



- Remove the lid from the bowl by turning it clockwise and lifting.

Step 4



- Take out the blades by grabbing the plastic center piece and lifting up.


⚠ Avoid contact with blades as they are extremely sharp.

Step 5




- Position the handle of the bowl so that it is on your left.
- Grab the handle and push clockwise. Lift up the bowl to remove it.

Step 6 — Back Casing

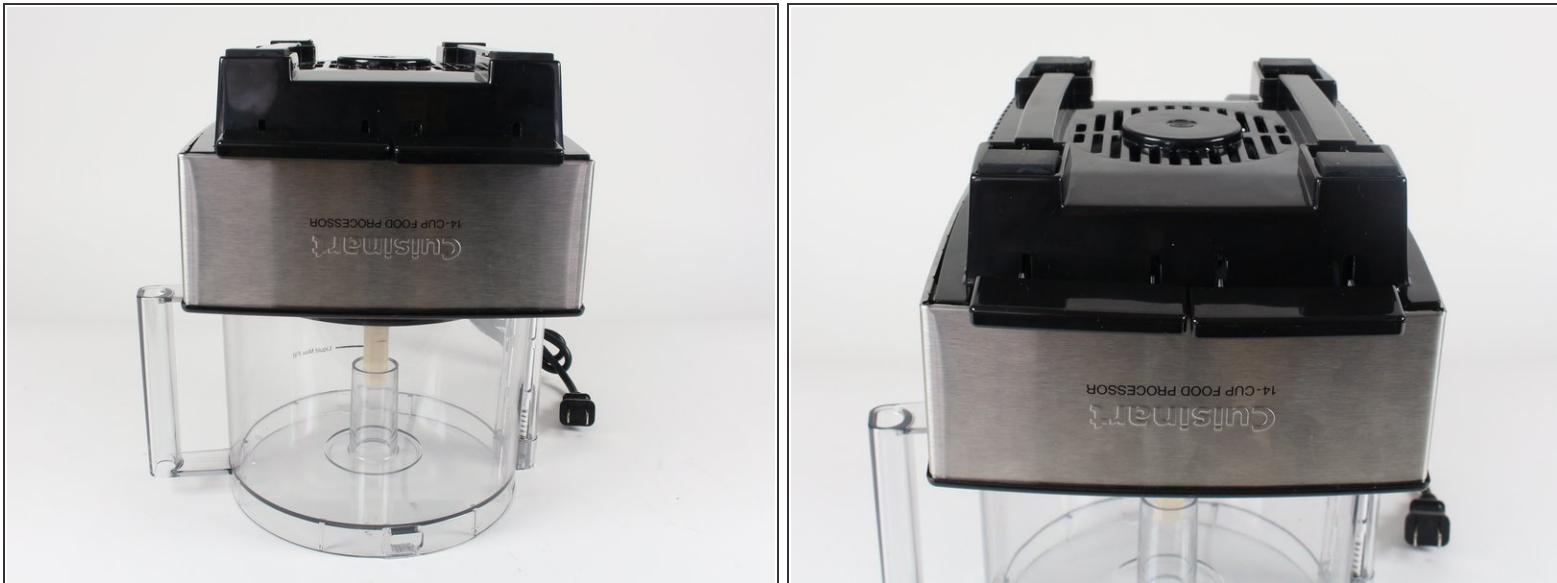


- Turn the food processor's base upside down by lifting it up and turning it over.
- Position the base so that the on and pulse buttons are facing you.
- Place the base on top of the food processor's bowl to keep the base from wobbling while you work on it.

Step 7

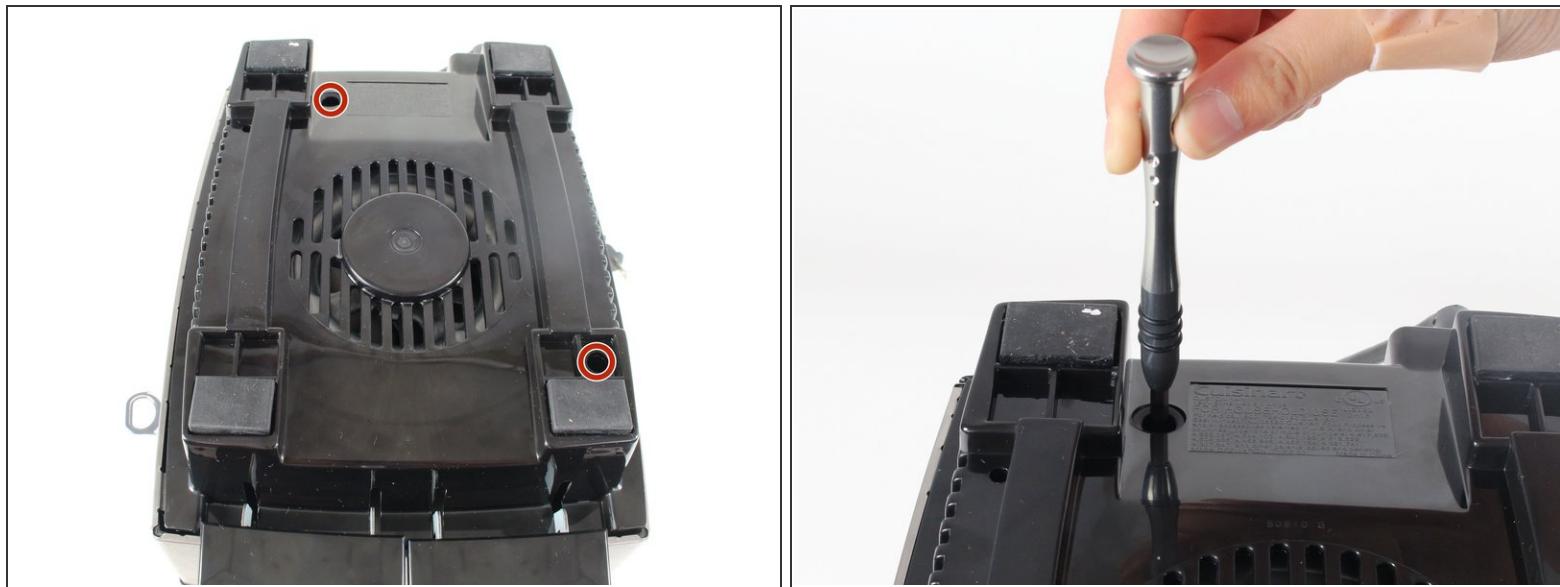


- Remove the two 13.0mm screws that hold down the casing with a Phillips #2 screwdriver.

Step 8

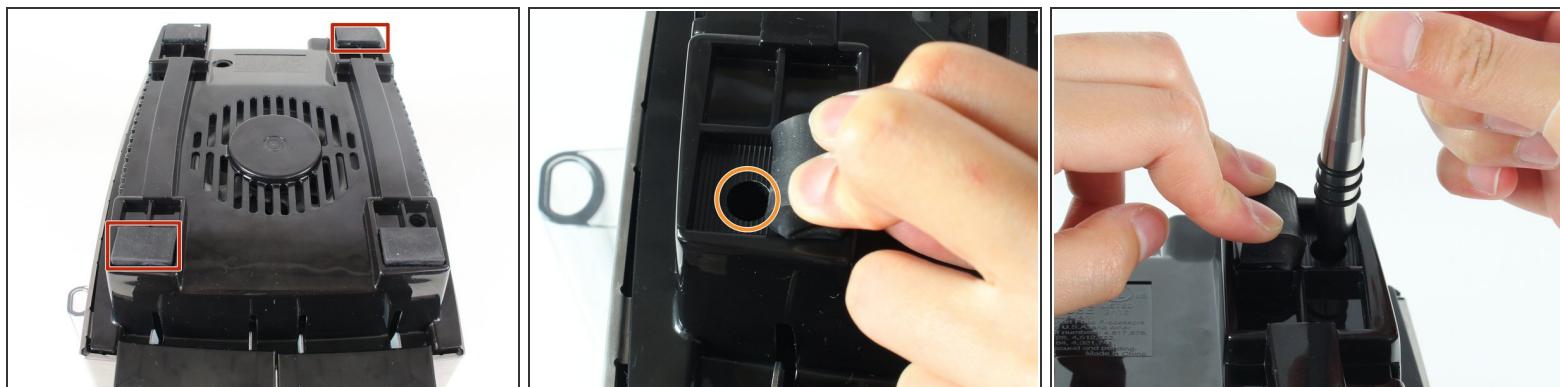


- Lift up the front left and the back right rubber feet by pulling back the rubber with your fingers.
- Remove the 13.0mm screw under each rubber foot with a Phillips #2 screwdriver.

Step 9

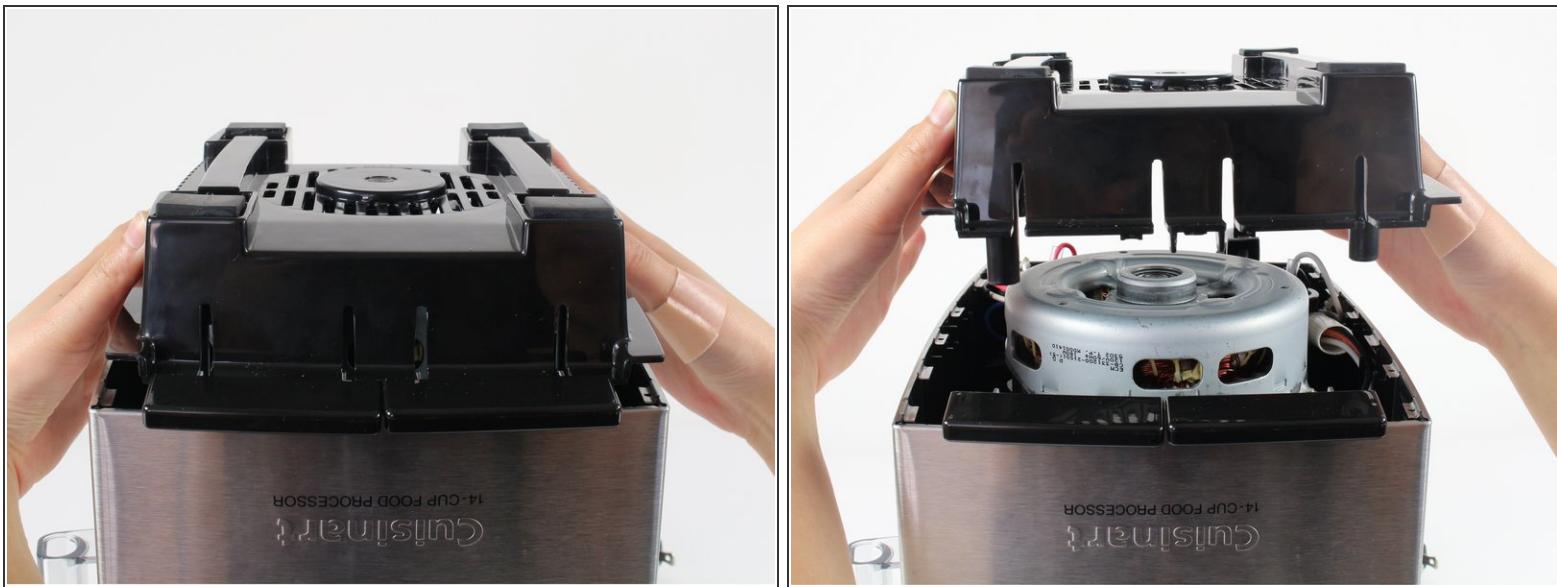



- Lift off the back casing by raising it upward.

Step 10 — Buttons

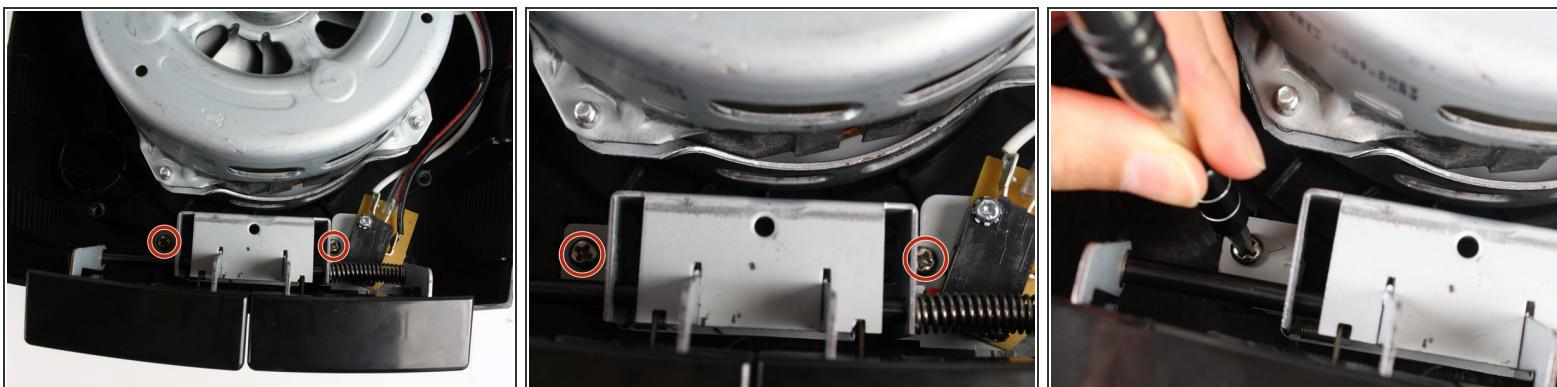


- Remove the two 13.0mm screws that are holding down the button assembly using the Phillips #2 screwdriver.

Step 11

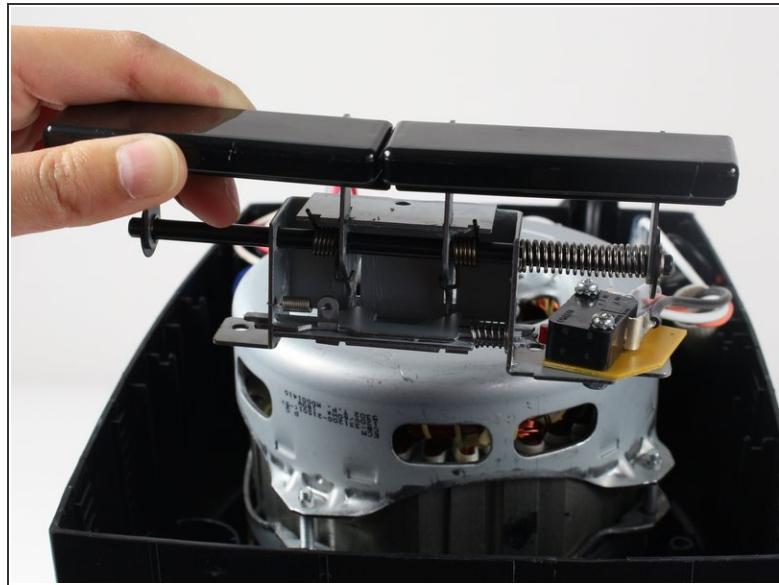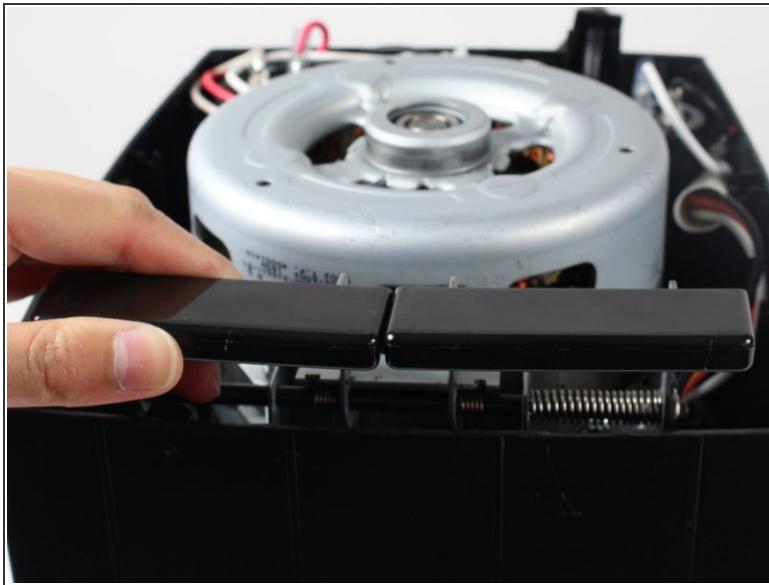


- Lift out the button assembly by pulling up.

Step 12

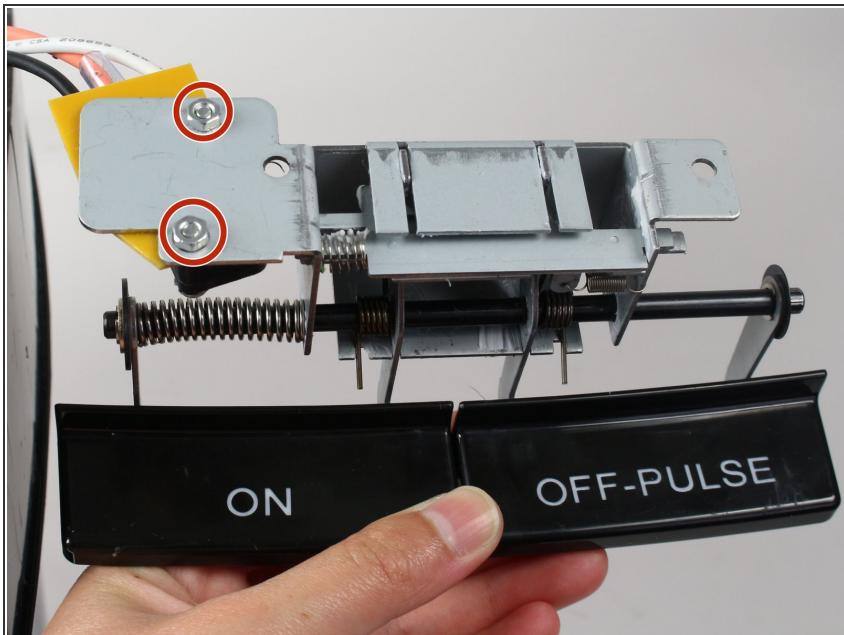


- Remove the two 5.5mm nuts with a 5.5mm nut driver.

Step 13

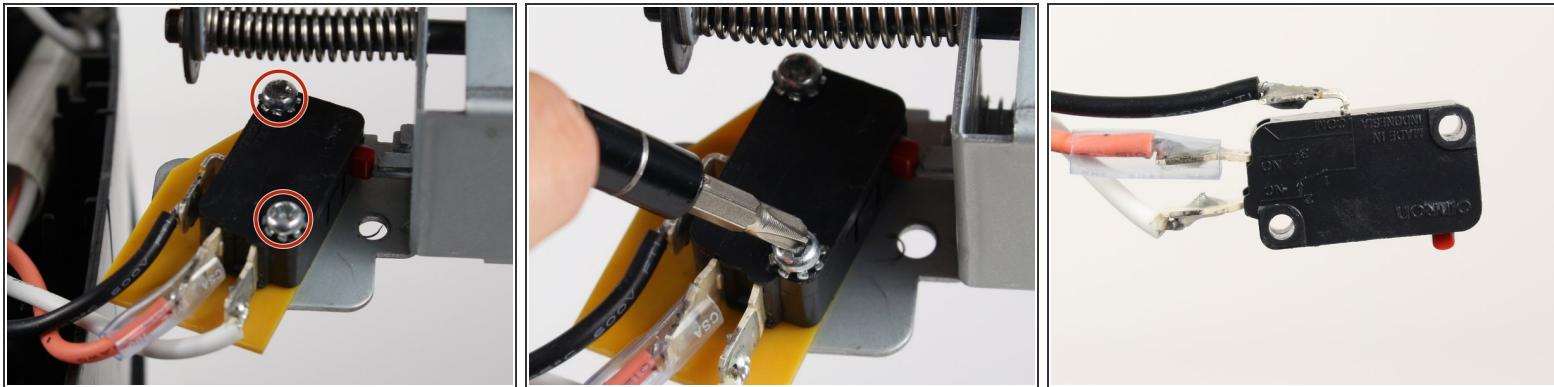

- Remove the two 13.0mm screws that hold the switch to the button assembly with a Phillips #2 screwdriver.
- *(i)* The screws have glue in their threads, so this step might require a little extra force.
- Slide off the switch and yellow plastic to remove the button assembly.

Step 14 — Switch

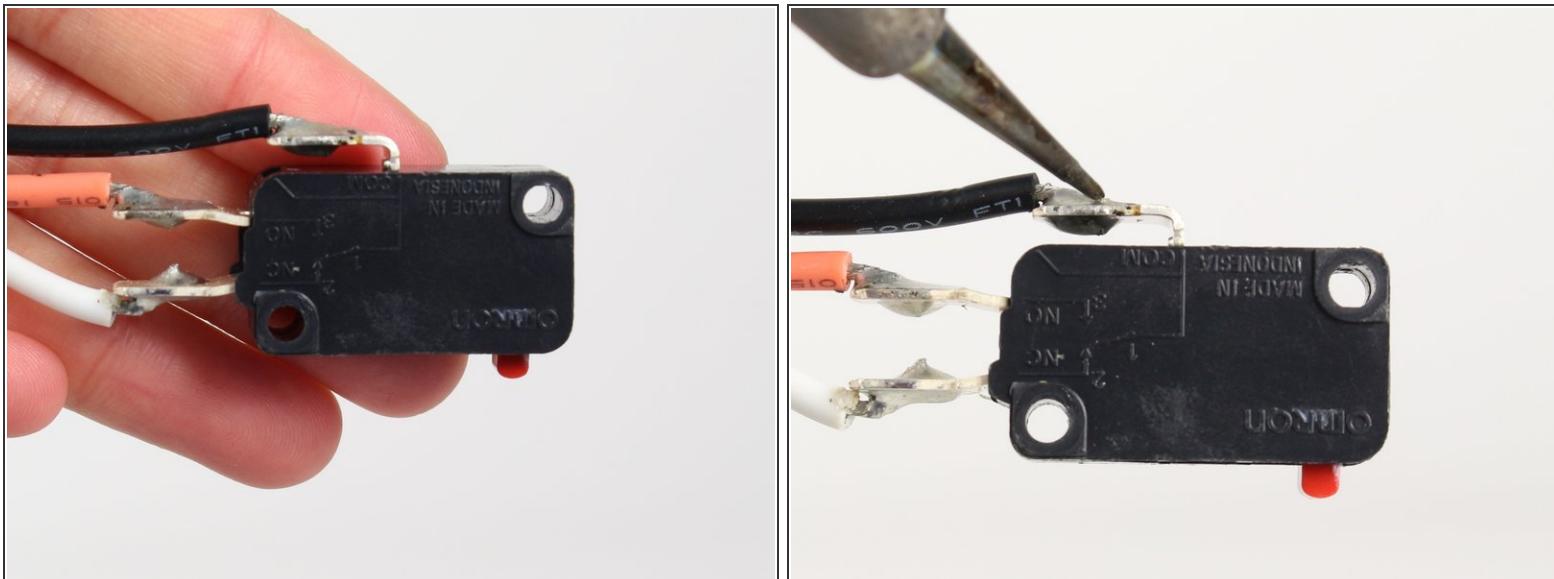

- Desolder the white, black and red connections from the switch by using a soldering iron.
- *(i)* Refer to the [soldering guide](#) for extra help.
-  For reassembly, the new switch's connections will have to be soldered on.

To reassemble your device, follow these instructions in reverse order.