




# Cuisinart DLC-10S Pro Classic 7-Cup Food Processor Power Cord Replacement

This guide will explain how to replace the power cord.


Written By: Reagan Burns

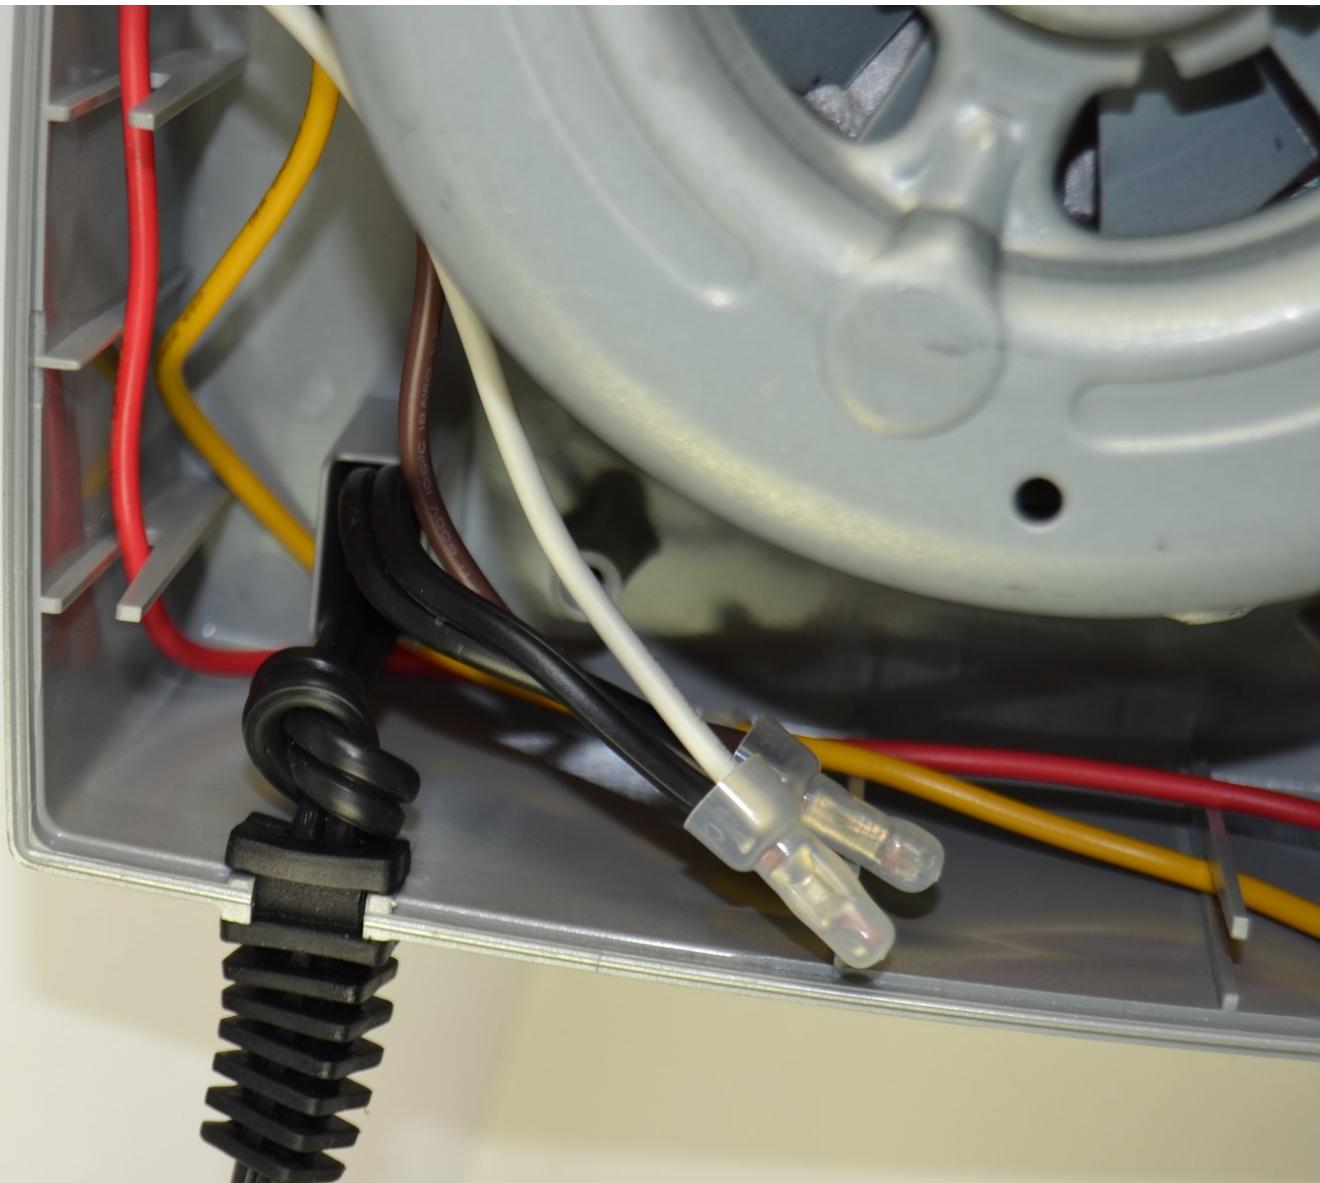

 **TOOLS:**

- [Soldering Iron \(1\)](#)
- [Solder \(1\)](#)
- [Wire Stripper \(1\)](#)
- [Screwdriver \(1\)](#)
- [Flush Wire Cutters \(1\)](#)

## Step 1 — Power Cord

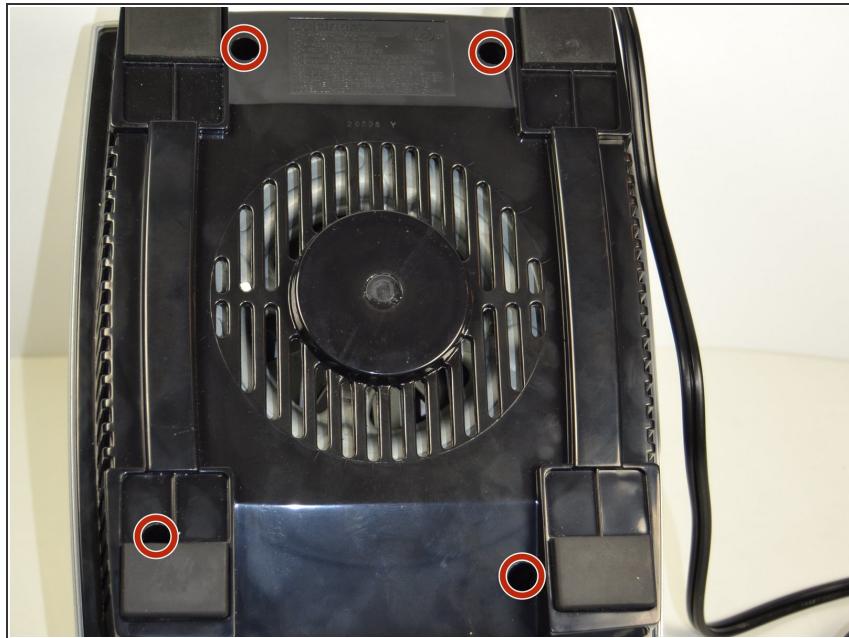


- Use a screwdriver to remove the four screws that are next to the grip pads on the bottom of the motor base.

## Step 2




- Remove the black plastic covering from the motor base.

## Step 3

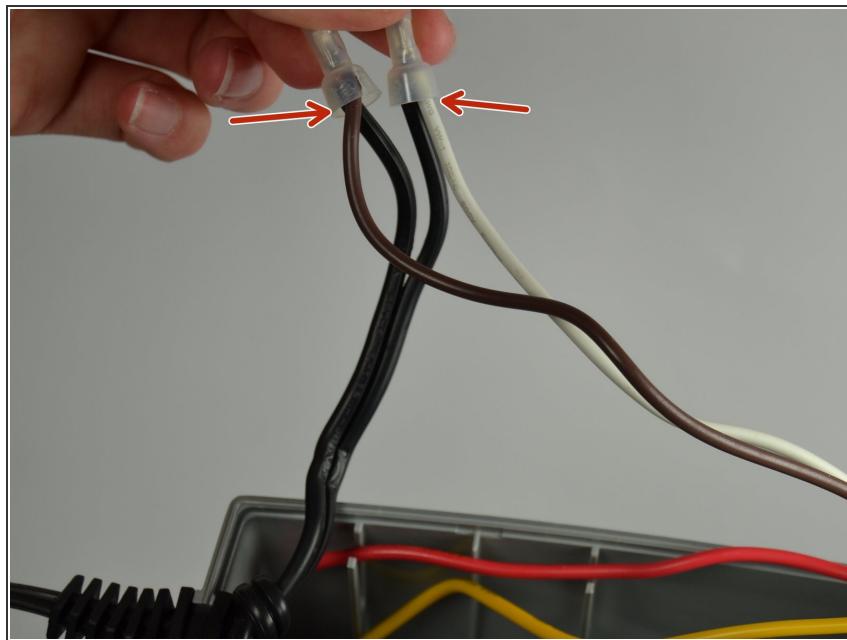


- Locate the connections between the power cord and the brown and white wires. Cut off these connections.

## Step 4

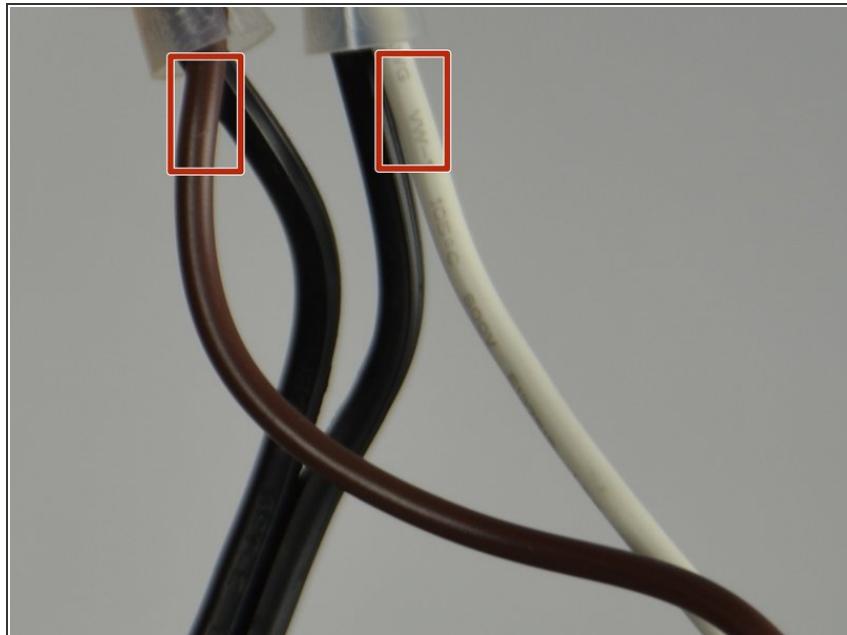


- Strip the plastic coating off the edge of the brown and white wires using a wire stripper.

## Step 5

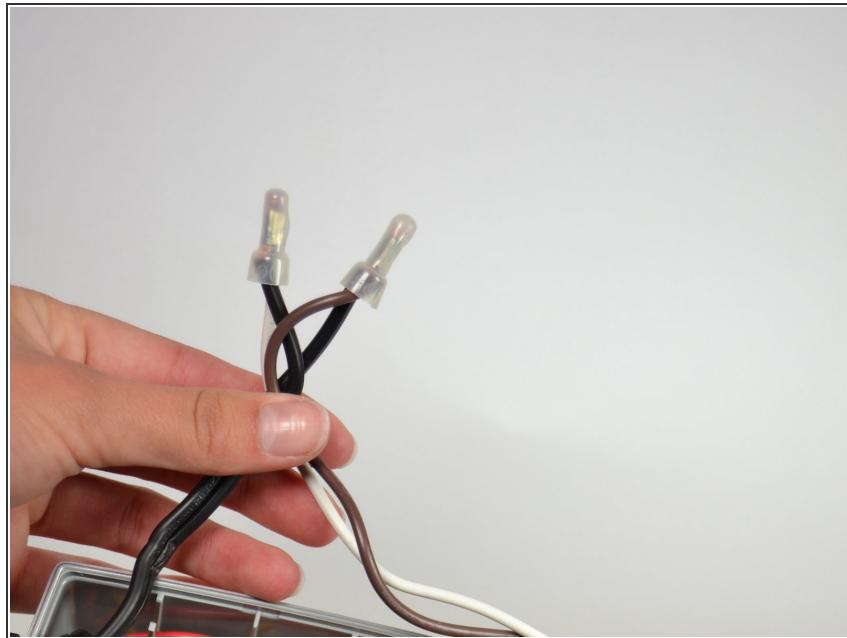

- Create a connection between the brown and white wires and the wires of the new power cord by [soldering](#) them together.

## Step 6

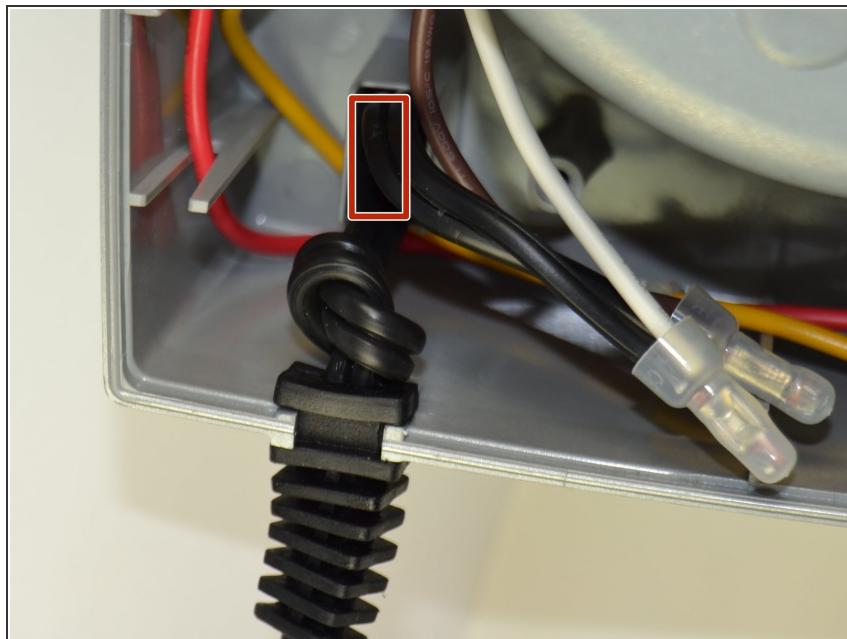

- Fit the wires back into the motor base and place the new power cord in the slot.

By the end of this guide< you will have successfully replaced the power cord to your device.