


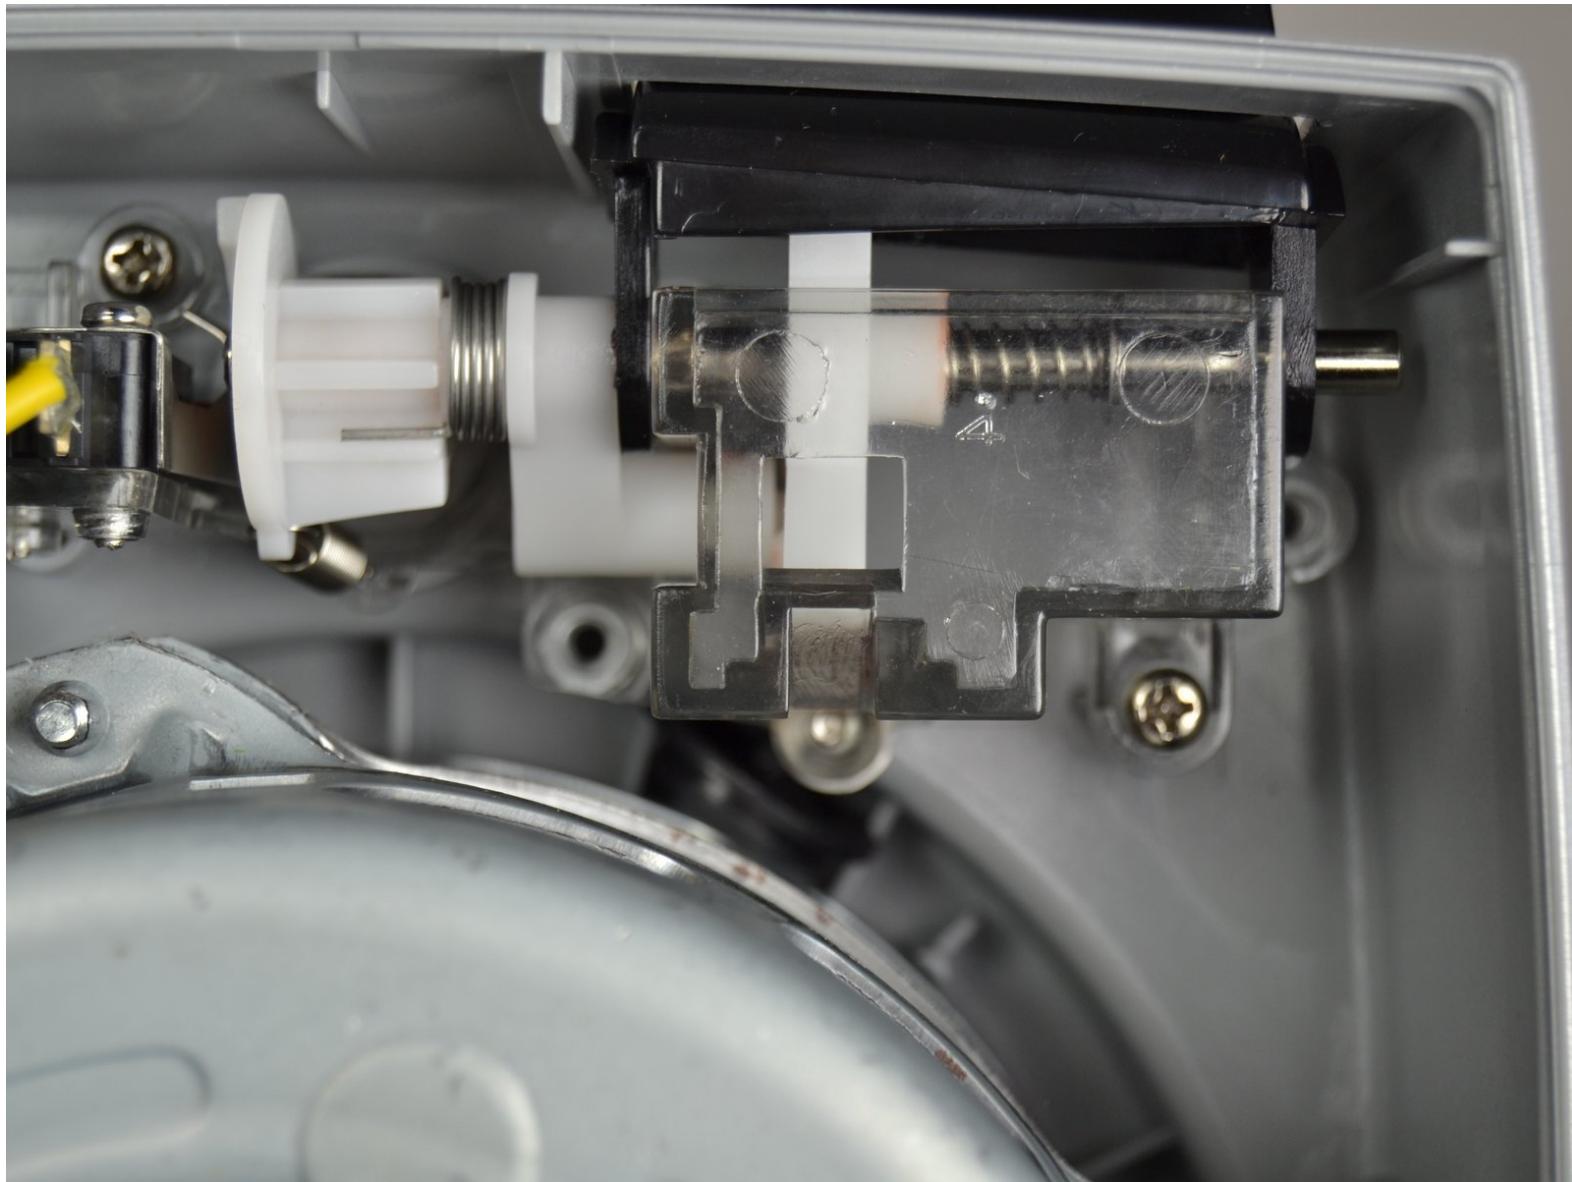

Cuisinart DLC-10S Pro Classic 7-Cup Food Processor Switch Replacement

This guide will help you successfully replace the switch and allow you to continue using your device.

Written By: Riley Carns



This document was generated on 2019-09-20 07:17:20 PM (MST).


INTRODUCTION

This guide's purpose is to show you how to remove the switch from this type of food processor.

TOOLS:

- Phillips #2 Screwdriver (1)

Step 1 — Switch

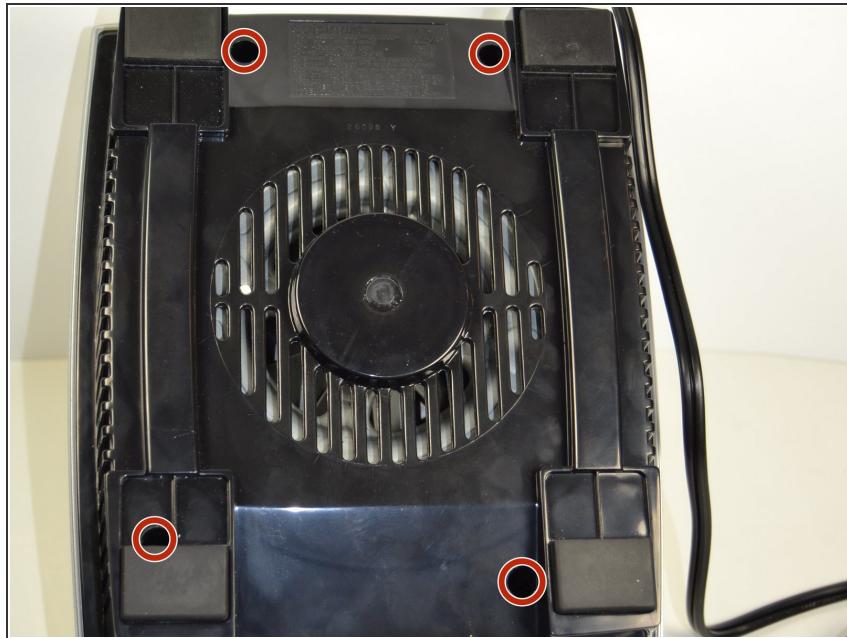


- Remove the four screws (circled in red) out of the bottom of the processor using a Philips #2 Screwdriver.

Step 2




- Remove the bottom casing of the food processor and set aside.

Step 3

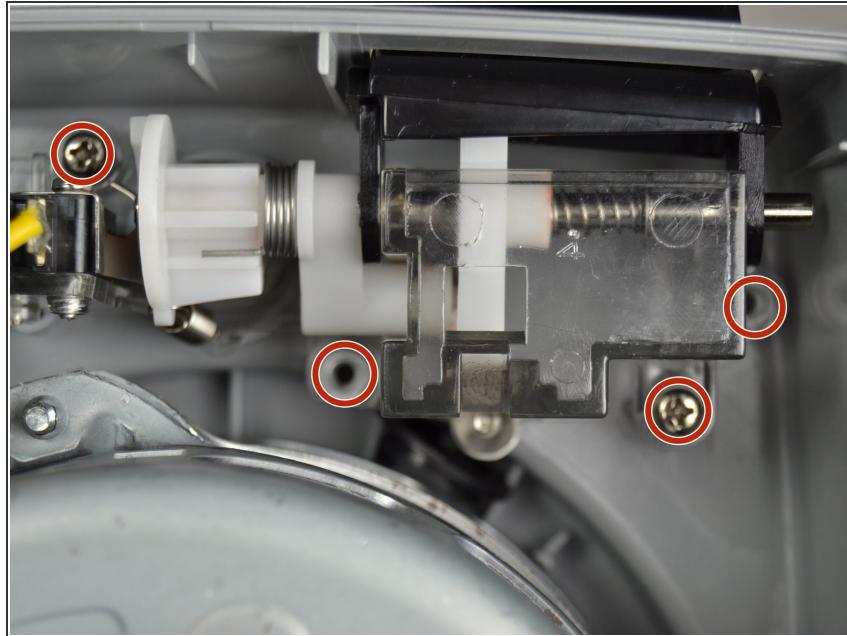


- Remove the four screws (circled in red) holding the switch down.

Step 4

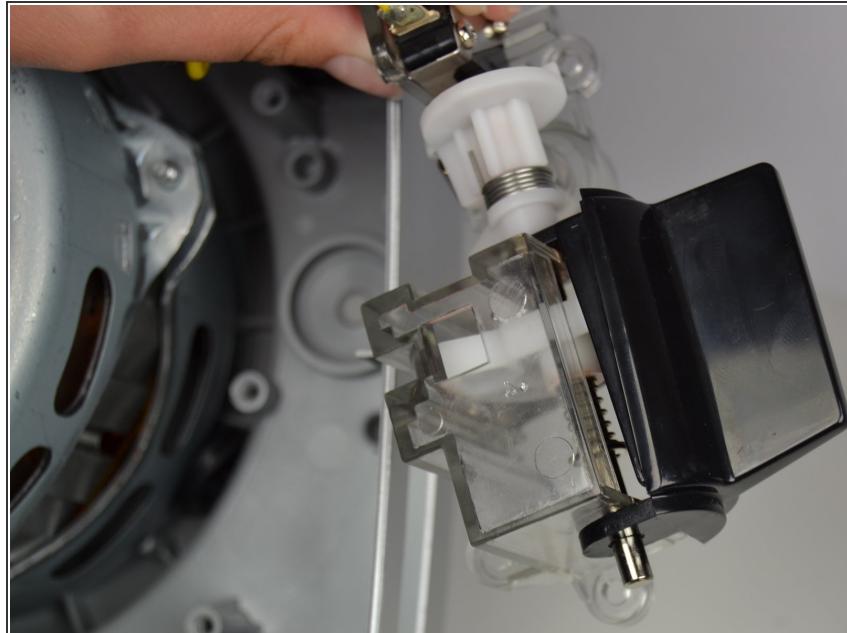


- Carefully pull the switch out of the device.
- This step may take some time.

Step 5

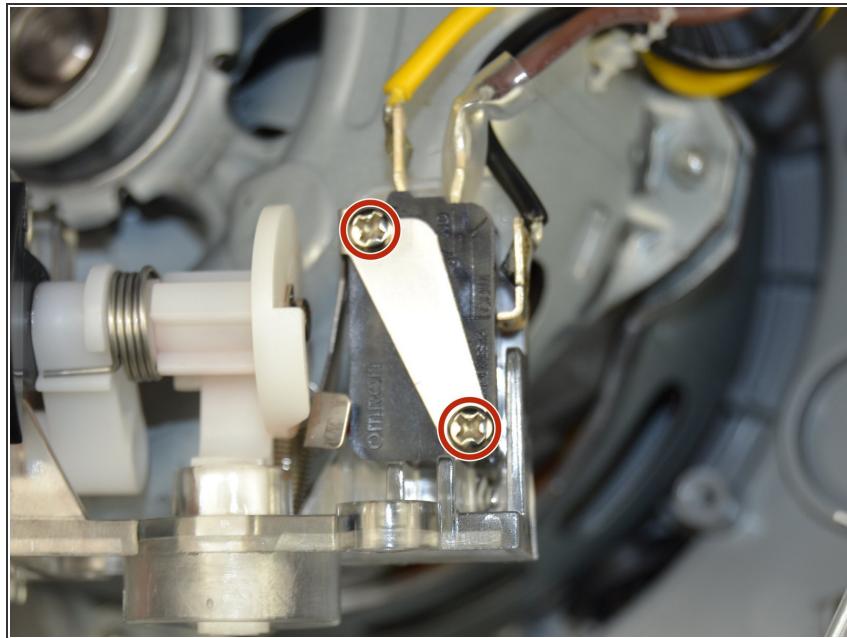


- Remove the two screws from the switch (circled in red) attached by wires.

Step 6

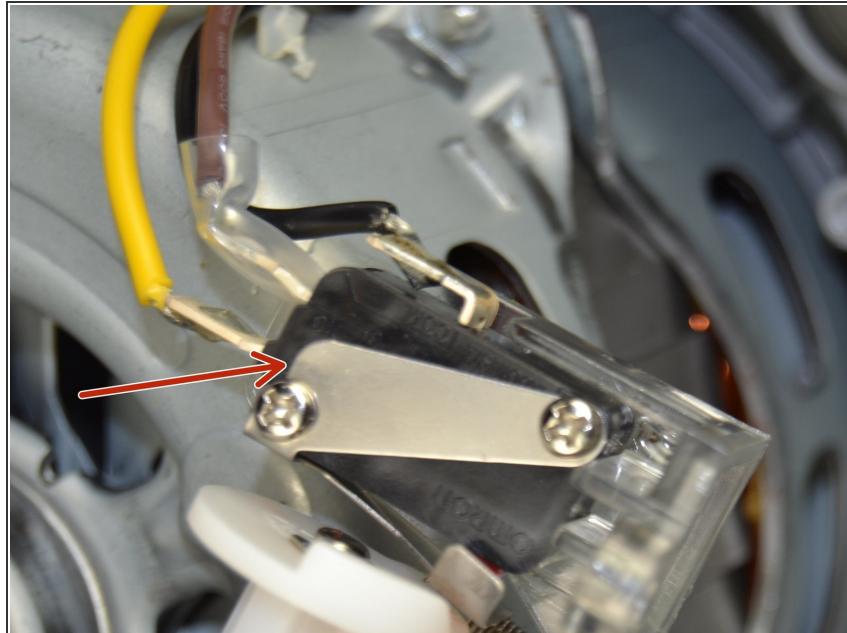

- Remove the component (shown by the arrow in the picture to the left) attached to wires from the switch.

Step 7

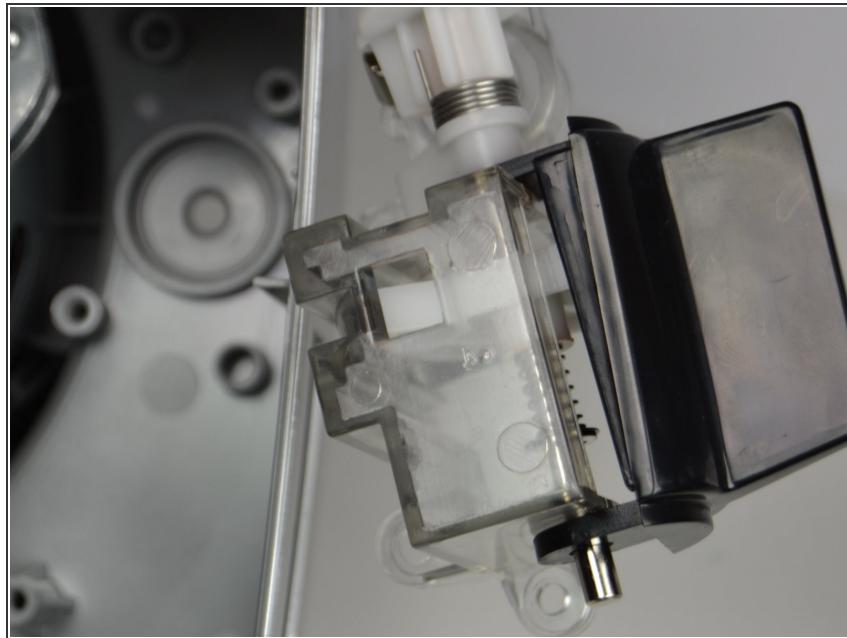

- Carefully remove and replace the switch, now that the wires are detached.

To reassemble your device, follow these instructions in reverse order.