




Cuisinart DLC-8F Safety Switch Replacement

Use this guide to replace the safety switch in your Cuisinart DLC-8F.

Written By: David Colman

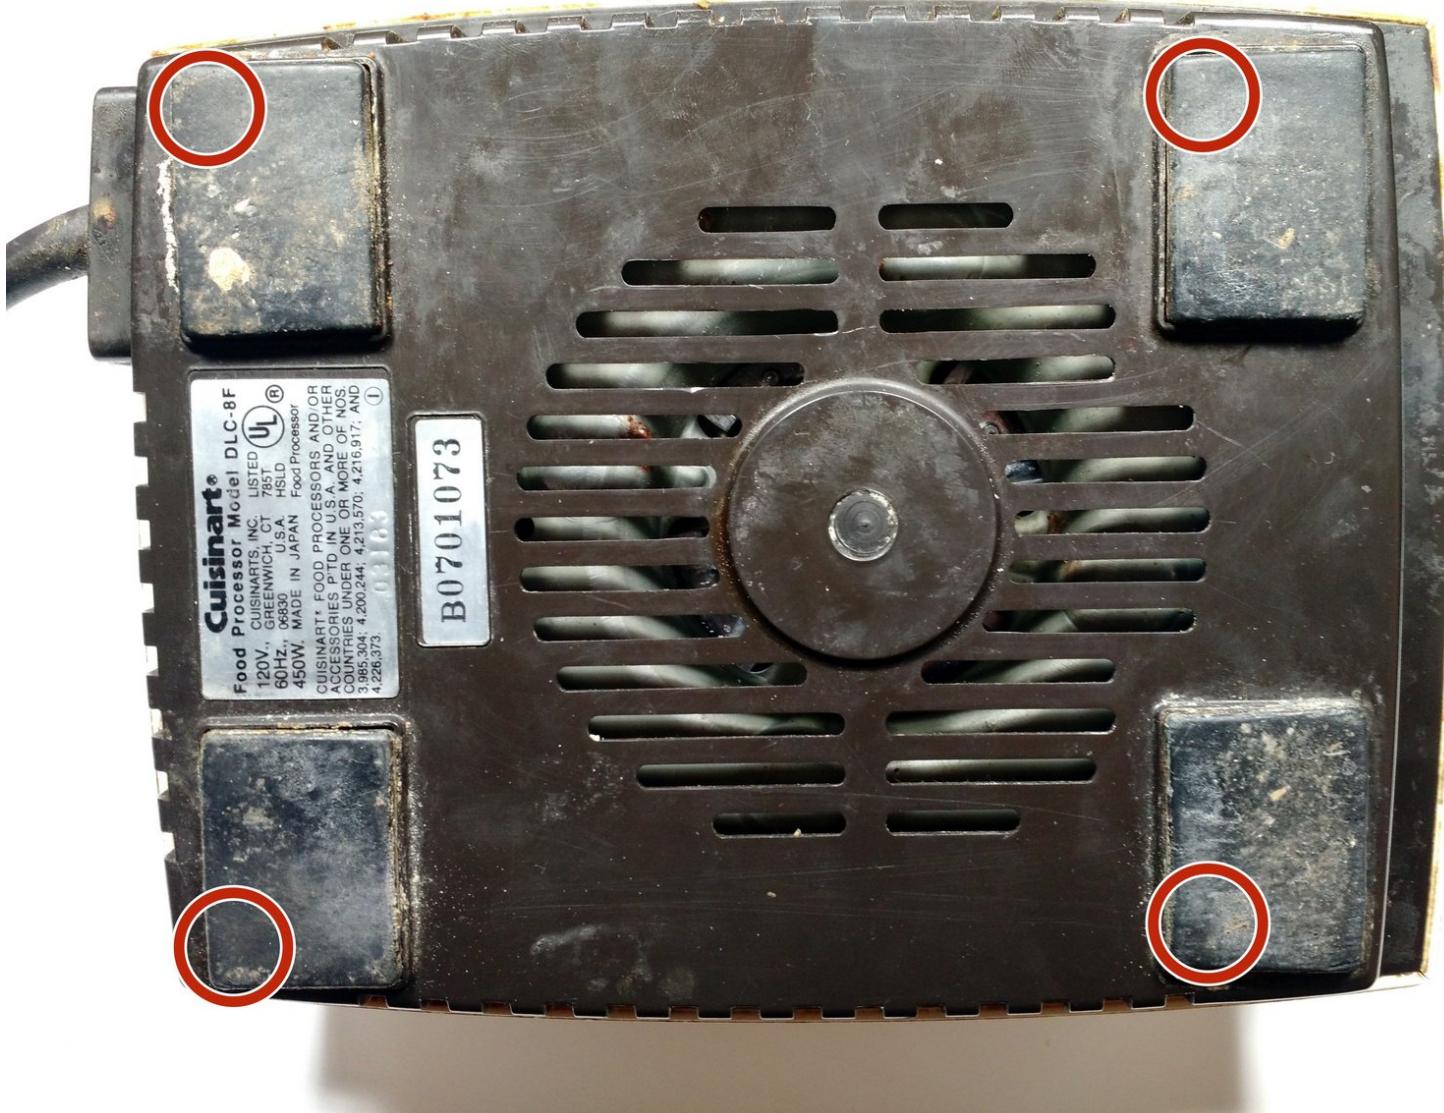

INTRODUCTION

This guide teaches the user how to replace the safety switch in your Cuisinart DLC-8F. The removal of the safety switch first requires the removal of the bottom hood and all of this can be done with just a Phillips #2 screwdriver. This is an easy process and should only take about 10 minutes.

TOOLS:


- Phillips #2 Screwdriver (1)

Step 1 — Safety Switch





- Remove the four 18 mm Phillips #2 screws from the bottom by prying up the rubber feet to access the screw hole.

Step 2

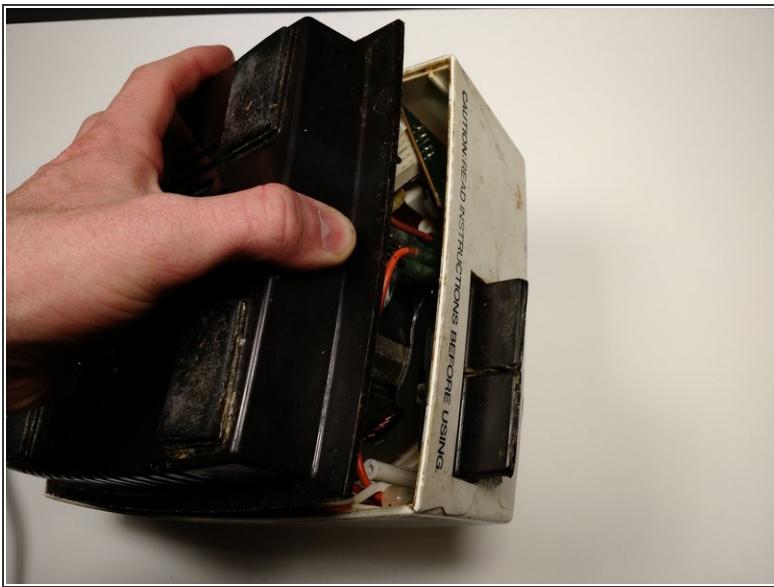



- Gently lift the bottom cover from the main body.

Step 3

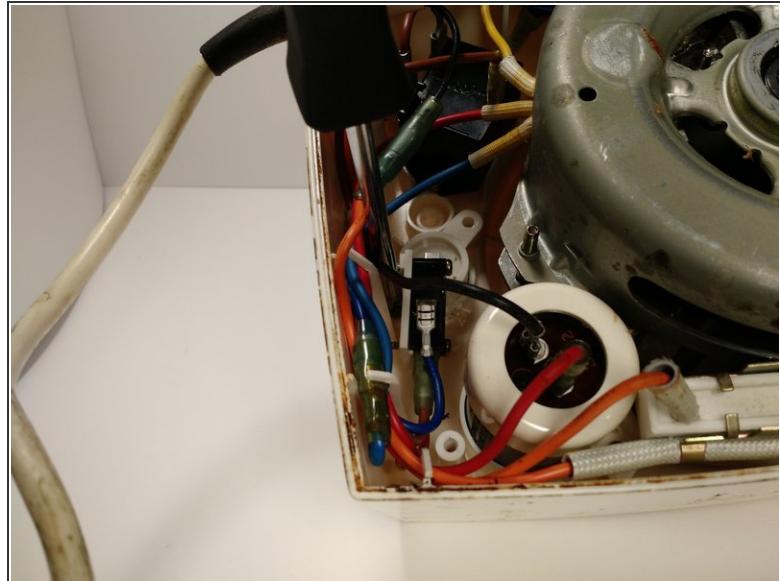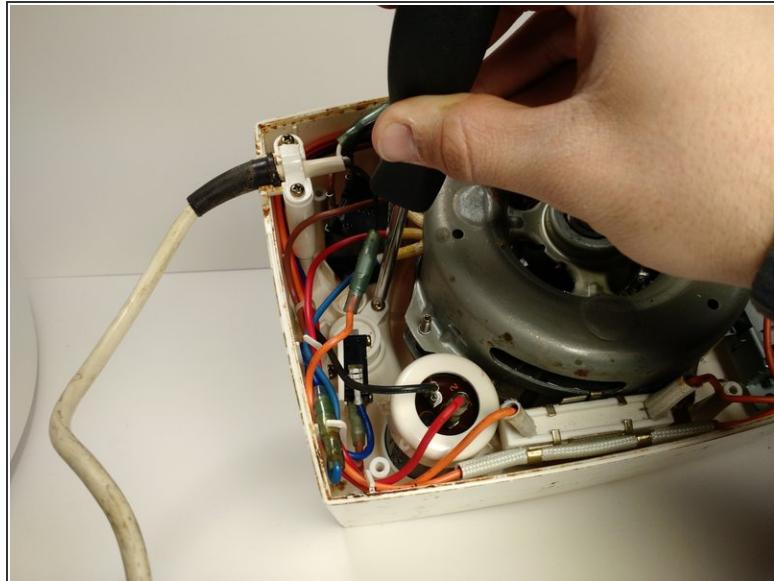



- Remove the two 14 mm Phillips #2 screws holding in the safety switch bracket.

Step 4

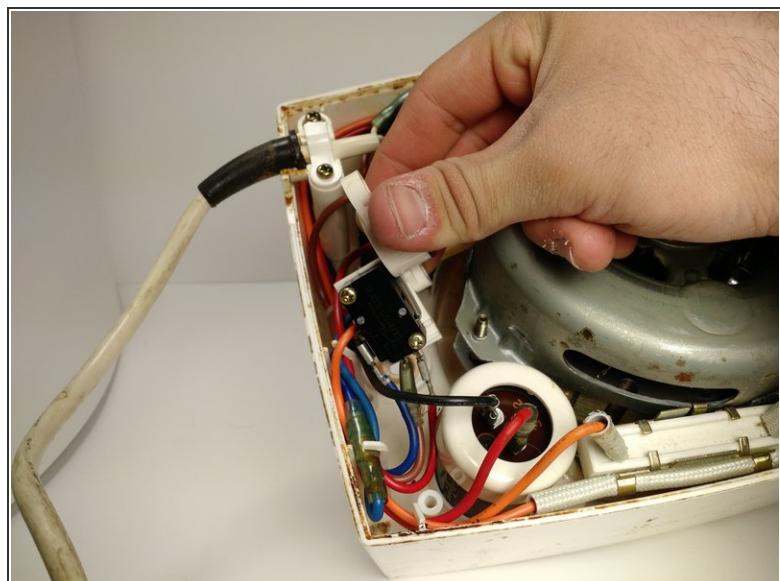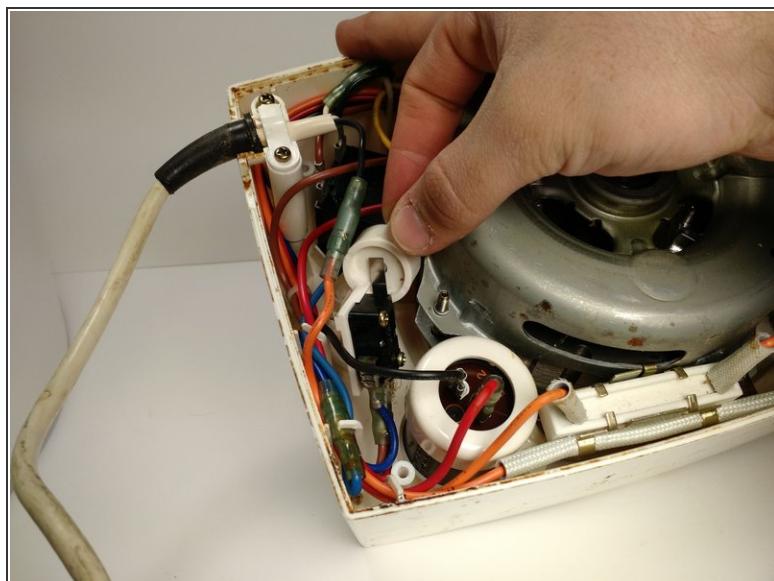



- Pull out the safety switch bracket with your hand.

Step 5

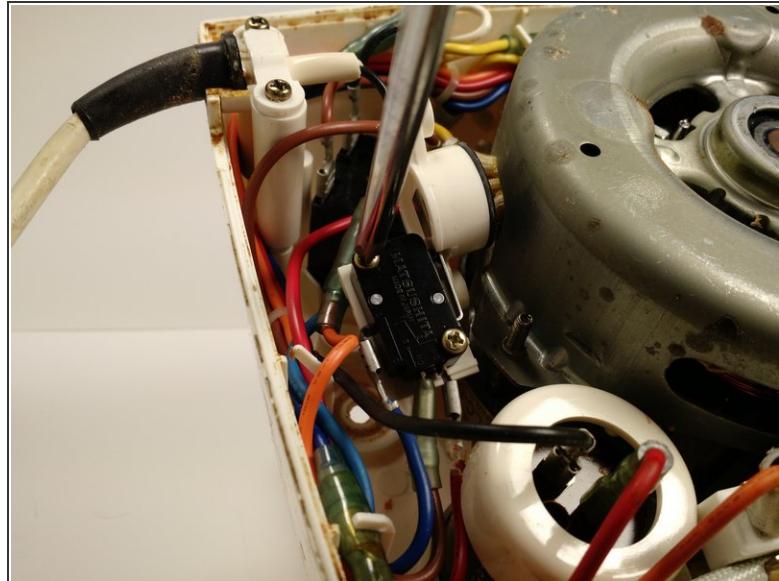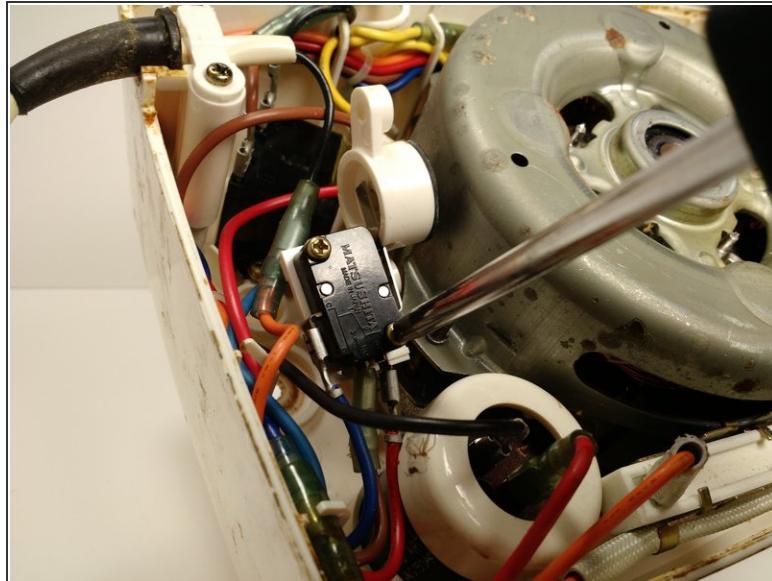

- Remove the two 19 mm Phillips #2 screws holding the safety switch in the bracket.

Step 6

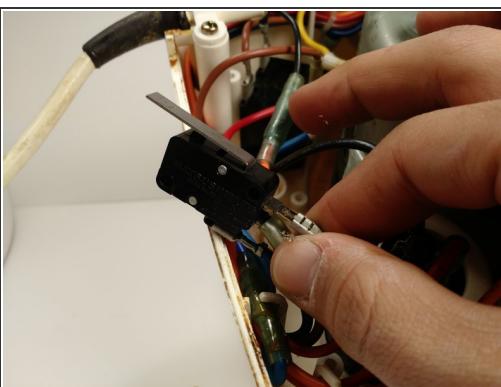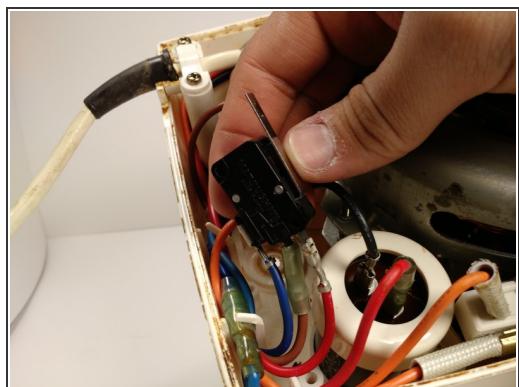

- Pull off the three wires on the safety switch with your hand by firmly grabbing the wires at the base.

To reassemble your device, follow these instructions in reverse order.