


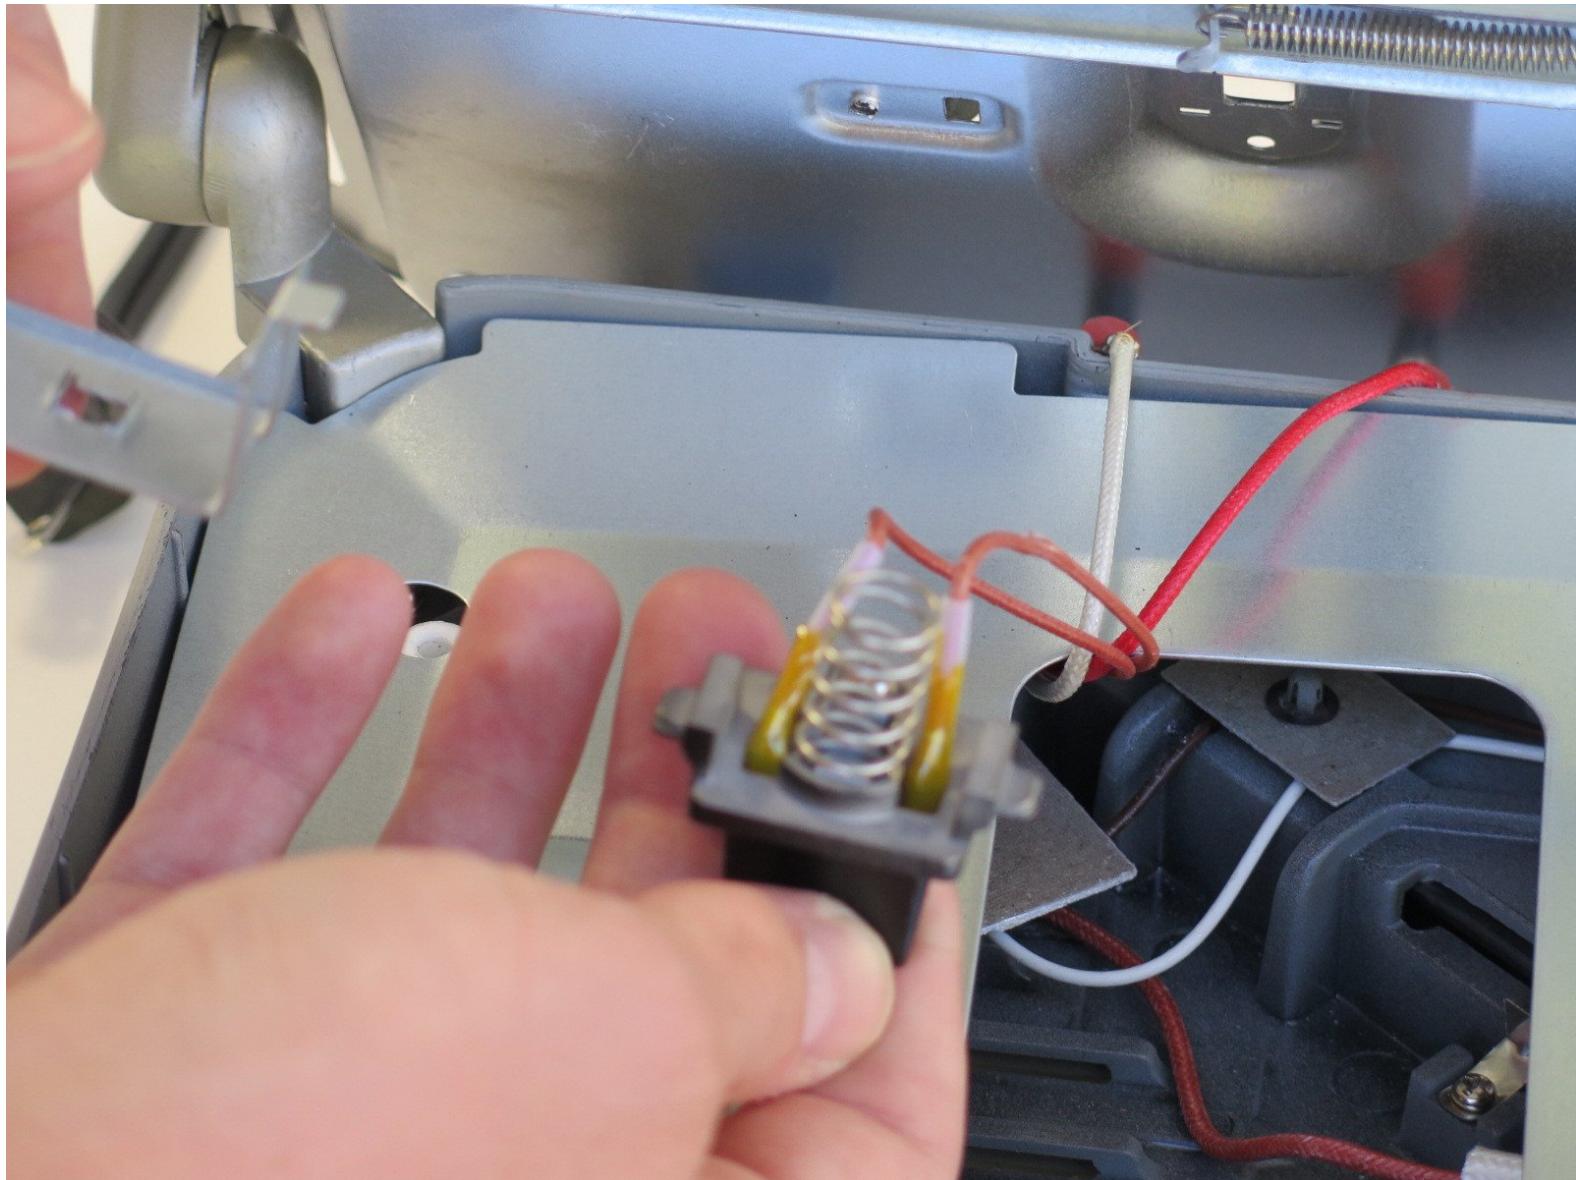

Cuisinart Griddler GR- 4N Button Spring Replacement

This guide will help you replace the button springs which are used to hold the cooking plates in place.

Written By: Laine Aro



This document was generated on 2019-09-22 06:30:04 AM (MST).

INTRODUCTION

If your cooking surface isn't turning on or is being pushed up you may need to replace a spring, a process which will be explained in this guide.

TOOLS:

- Phillips #2 Screwdriver (1)


Step 1 — Cooking Surfaces



⚠ Ensure device is turned unplugged, cooled down and clean before attempting any replacements.

- Remove cooking plates by pushing in the tabs on each side of the plate at the same time.

Step 2

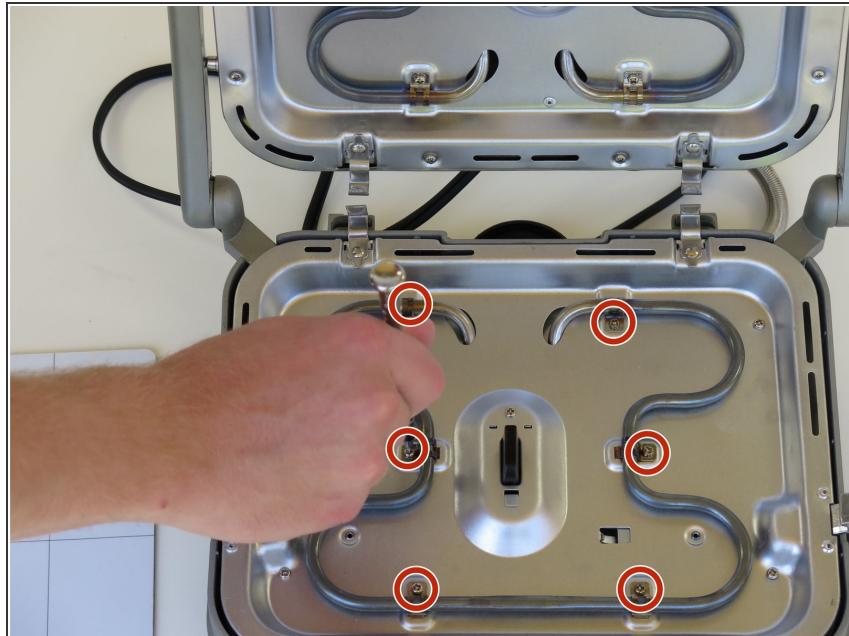


- Remove the six 5.5mm Phillips #2 screws that secure the bottom heating coil to the device.

Step 3



- Remove the four 30 mm Phillips #2 screws that secure the bottom heating apparatus.

Step 4

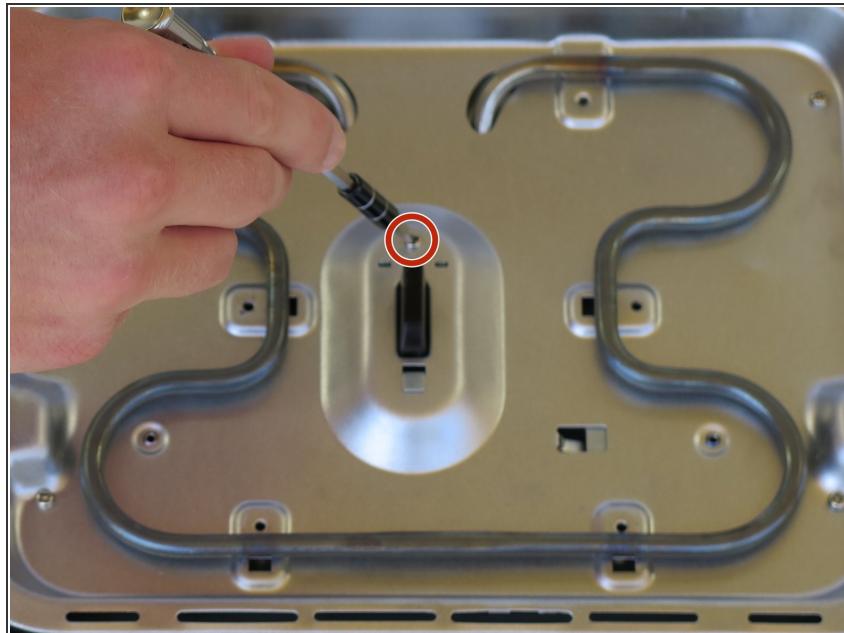


- Remove the single 5.5 mm Phillips #2 screw next to center black button.
- After removing the center screw the metal plate should be free to remove.

Step 5




- Lift the bottom heating apparatus up and remove large black center piece by pushing down on black button while sliding out.
- Realign all surface and put device back together making sure all parts are lined up and heating surfaces are making contact.
- The aligned parts will allow the cooking surfaces to work properly.

Step 6 — Button Spring

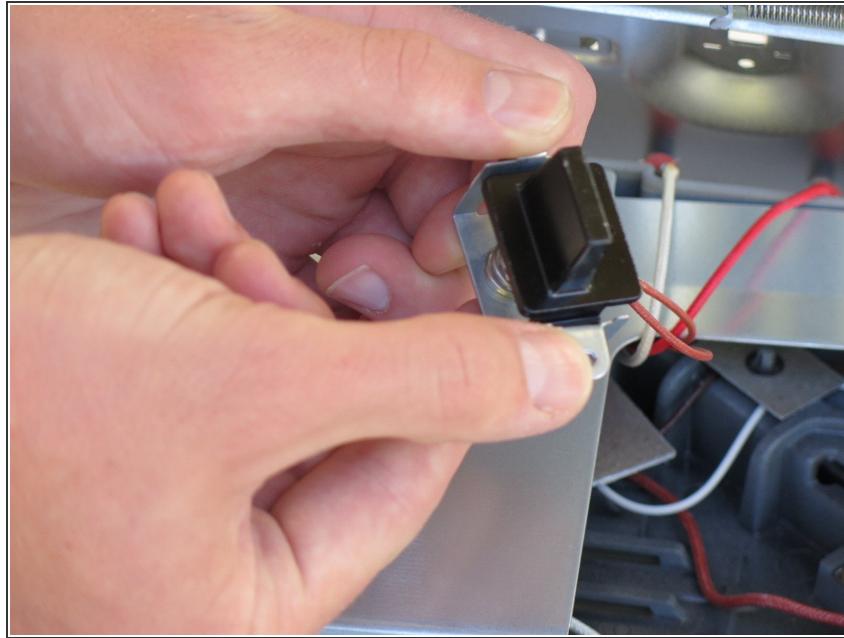


- Depress one of the gray tabs on the side of the housing.

Step 7

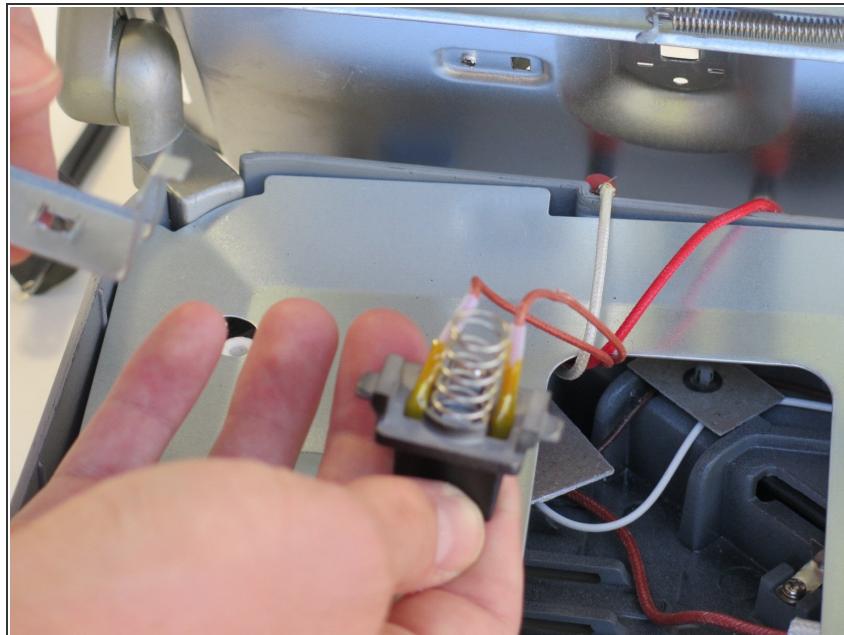

- Pull out the black button and the spring will also come out within it.

Step 8

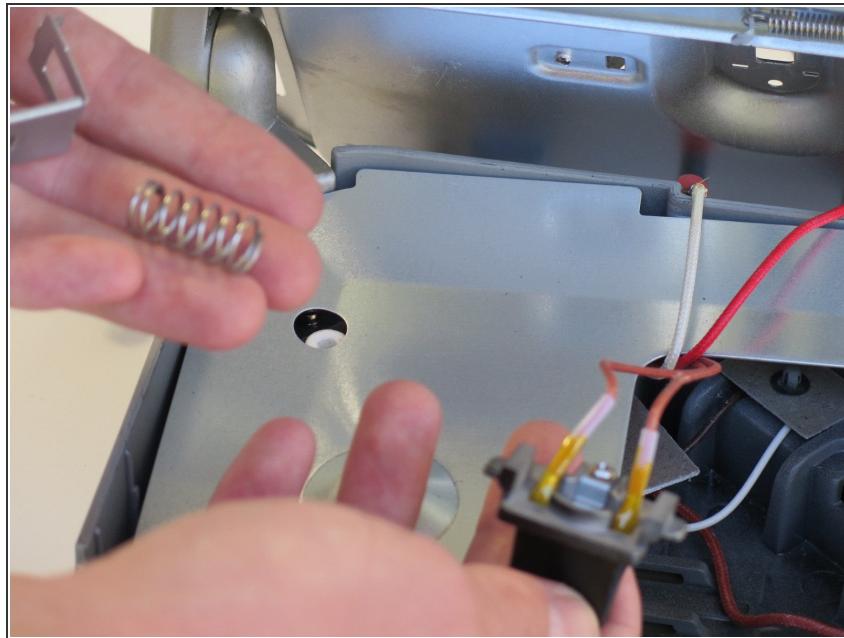

- Pull out the spring, and insert the replacement spring making sure it is correctly aligned.

To reassemble your device, follow these instructions in reverse order.