



Cuisinart Mini-Prep DLC-2A Blade Replacement

How to replace the blade of the Cuisinart Mini-Prep Plus.

Written By: Brendan Paxton



Step 1 — Blade



- Remove the electrical cord from any electrical outlet for safety purposes.

Step 2



- Remove the base container by rotating it counter clockwise, and do the same to the lid.

Step 3



- Grab the plastic part of the blade and safely remove it.

To reassemble your device, follow these instructions in reverse order.