



Cuisinart-140BK Knob Replacement

This guide will help you replace the knobs on your Cuisinart-140BK toaster.

Written By: Alora Saxton



INTRODUCTION

This guide will instruct you on how to properly disassemble your Cuisinart-140BK toaster. It will also help you properly replace the knobs on your toaster, while further preventing any damage to the device.

TOOLS:



- Phillips #2 Screwdriver (1)

Step 1 — Circuit Board



 Unplug the toaster before disassembly.

Step 2

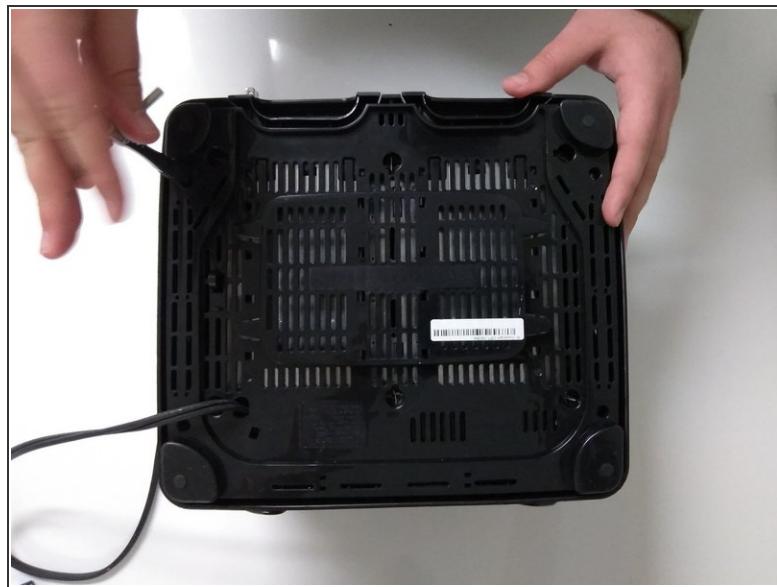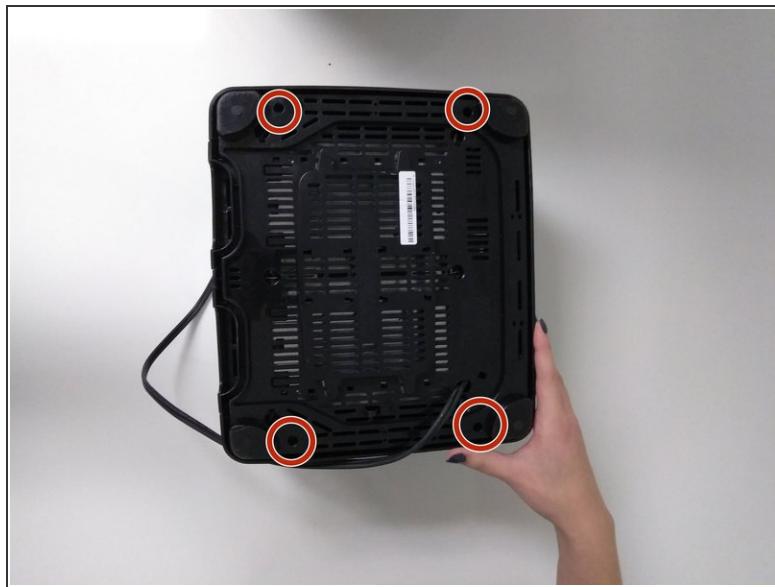

- Turn the toaster upside down.
- Unscrew all 4mm screws using Phillips #2 screwdriver.

Step 3



- Turn the toaster right side up.
- ⚠ Lift up the front cover carefully because the cables can be damaged.
- Pull out the toaster lever knobs by pulling it away from the toaster before removing the top cover.

Step 4





- Detach the cable that connects the toaster to the circuit board, in both control panels.

Step 5



- Carefully lift up the top cover.

Step 6

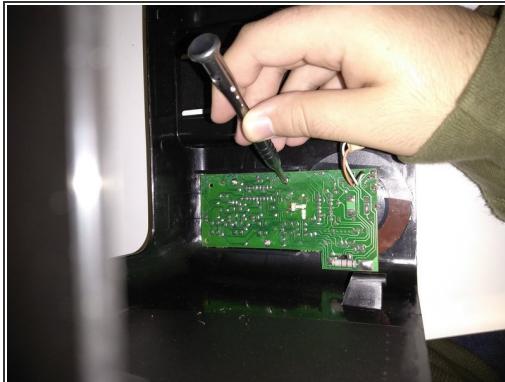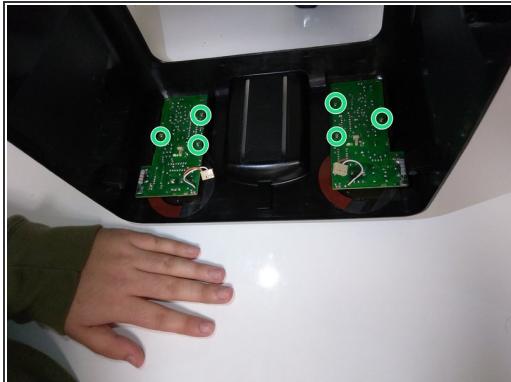

- The circuit board is located inside the front cover.


- Unscrew total of six 4mm screws that attach each circuit board to the top cover, using Phillips #2 screwdriver.
- Remove and replace the circuit board.

Step 7 — Knob




- Lift the clear plastic backing off the knob, under the circuit board.

Step 8

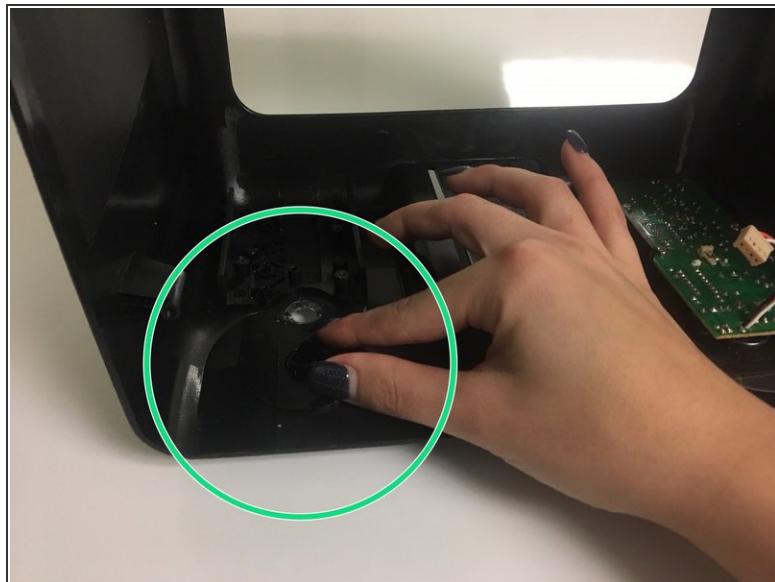

- Pinch the back side of the knob to detach it from the toaster.

Step 9

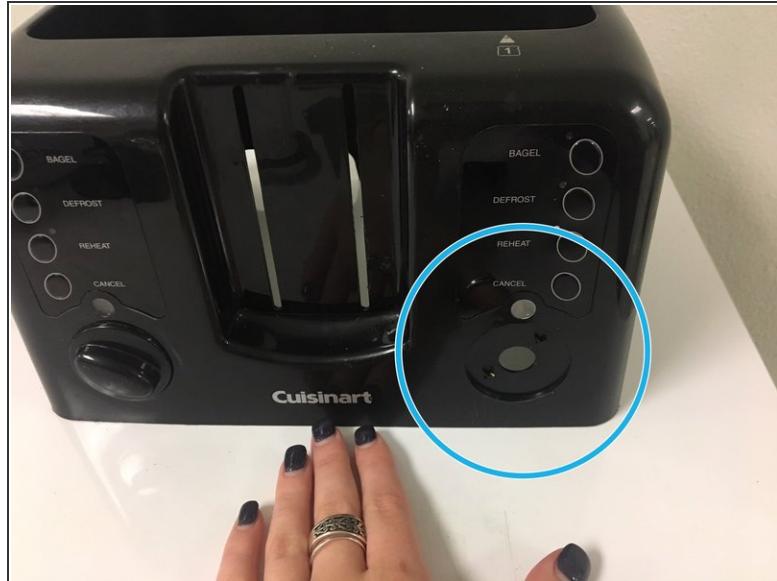

- This is how the device should look without the knob.
- Repeat the process on the opposite side of the toaster to remove the second knob.

To reassemble your device, follow these instructions in reverse order.