



CyberPowerPC Fangbook MS-1763 Battery Replacement

This guide will instruct you on how to remove and replace the battery in a CyberPower Fangbook MS-1763.

Written By: Dorcas Oduntan



This document was generated on 2019-09-21 02:37:36 PM (MST).

Step 1 — Battery



i Save all of your work and turn off the laptop before beginning.

- Close the laptop and flip it so that the bottom side is facing up.
- Locate the battery compartment.

Step 2



- Pull the latches away from the battery compartment. The lid of the compartment should pop out of place.

Step 3



- Tilt the lid so that it leans away from the laptop and exposes the battery below.
- Remove the battery from the newly opened compartment.

Insert a new battery and close the compartment lid to complete.