




CyberPowerPC Fangbook MS-1763 Key Replacement

This guide will teach you how to replace individual keys on your CyberPowerPC Fangbook MS-1763 keyboard.

Written By: Terrias

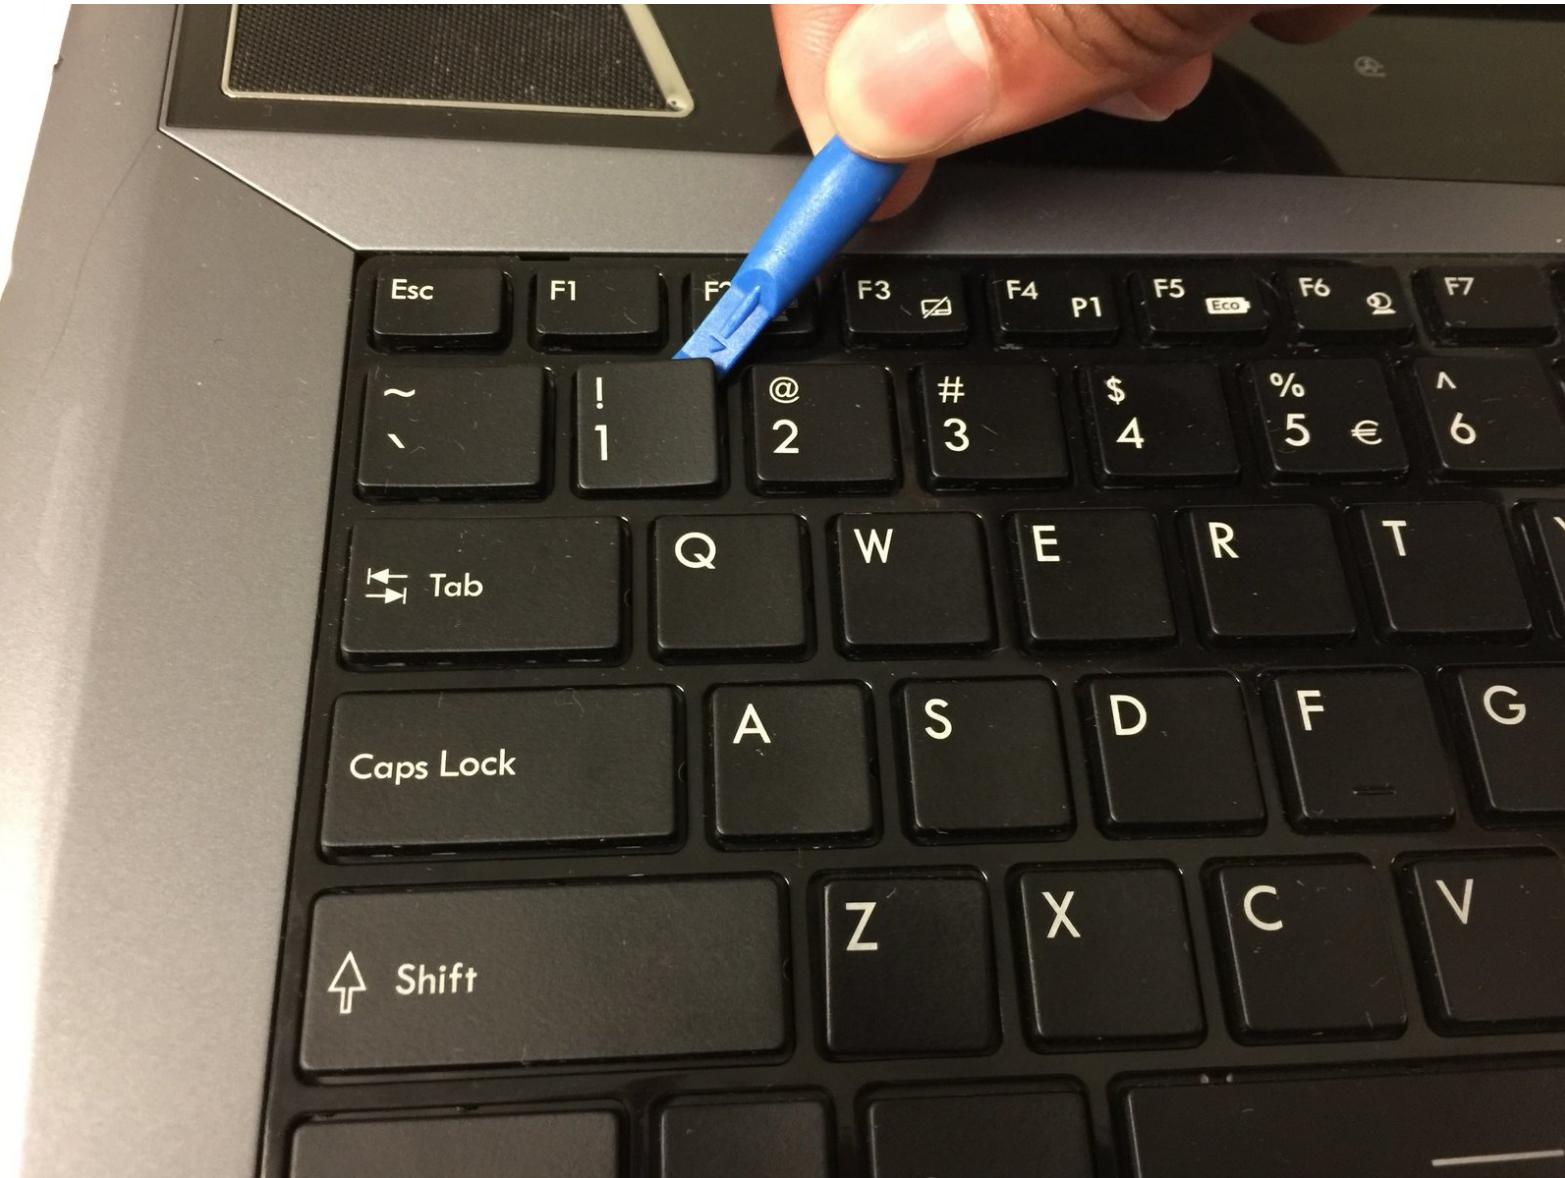

This document was generated on 2019-09-21 02:38:00 PM (MST).


INTRODUCTION

This guide requires delicate care as the keys are susceptible to damage if the procedure is completed incorrectly. Some of the keys have different sizes and shapes however the general procedure for key replacement is the same for all keys.

TOOLS:


- **Spudger** (1)

Step 1 — Key

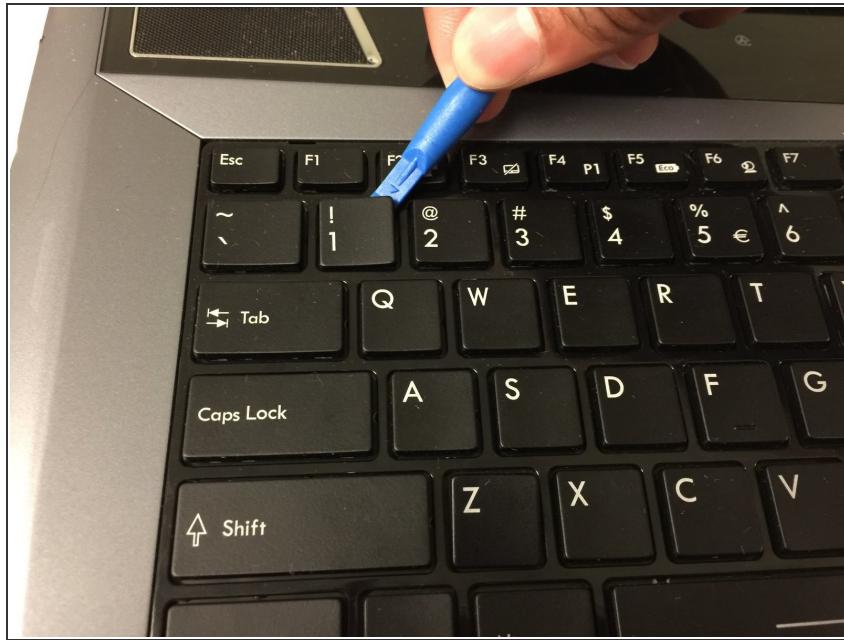


- Lift up the corner of your desired key using a spudging tool to create leverage.

Step 2

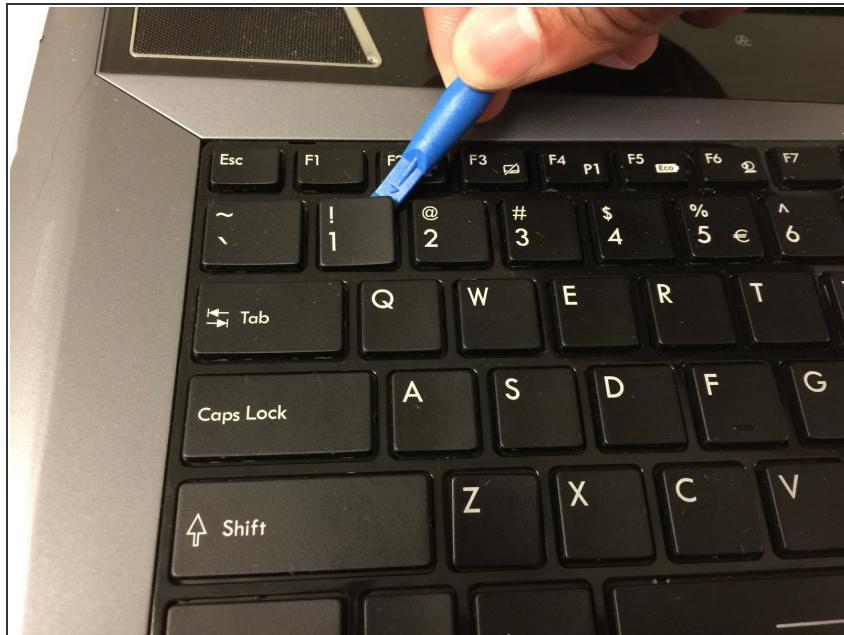


- Apply lifting force to the corner until a portion of the inner key clips are detached.

Step 3

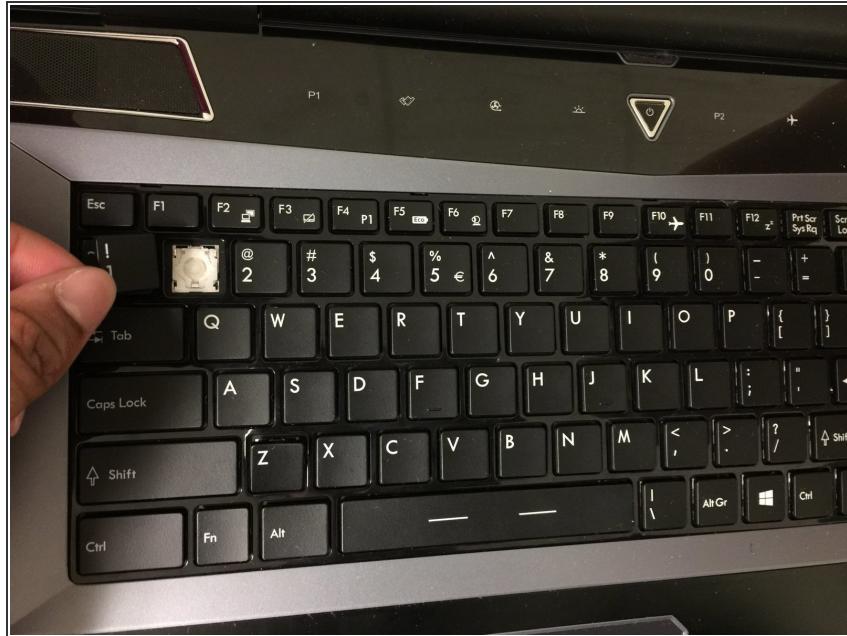


- Repeat the previous step on all the keys corners and remove the key from its socket.

Step 4

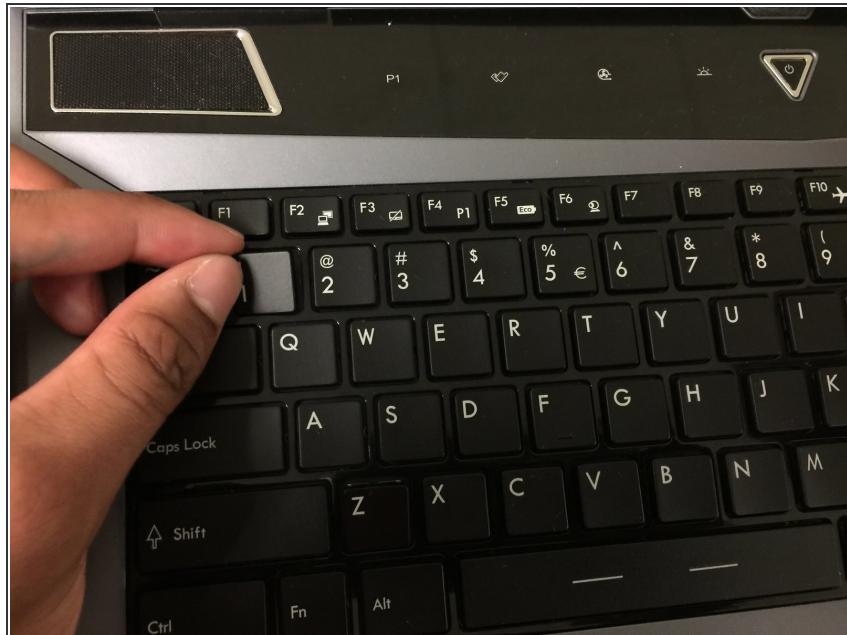

- Place your new key in the appropriate slot positioned as if the key was fully functioning.

Step 5

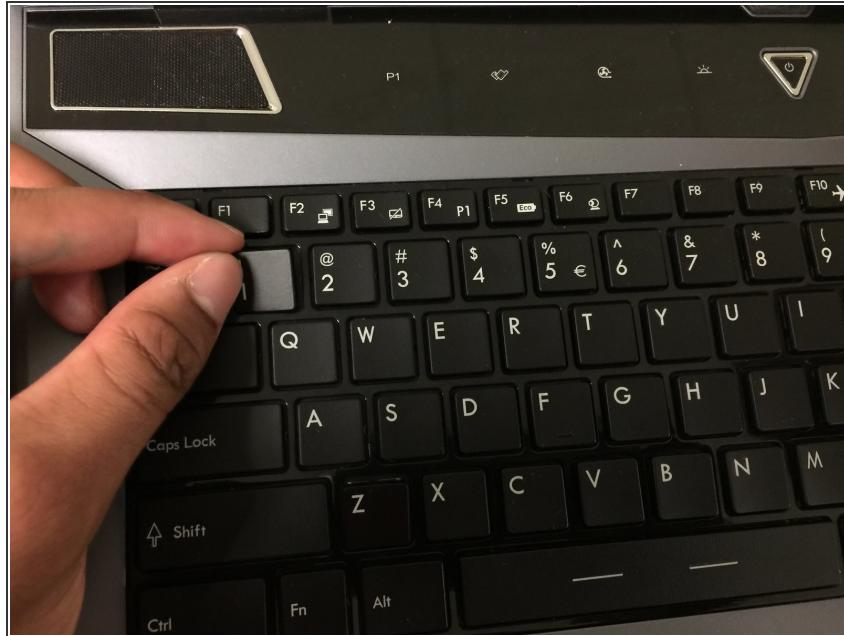

- Apply force to the key until all key clips are properly attached.

To reassemble your device, follow these instructions in reverse order.