


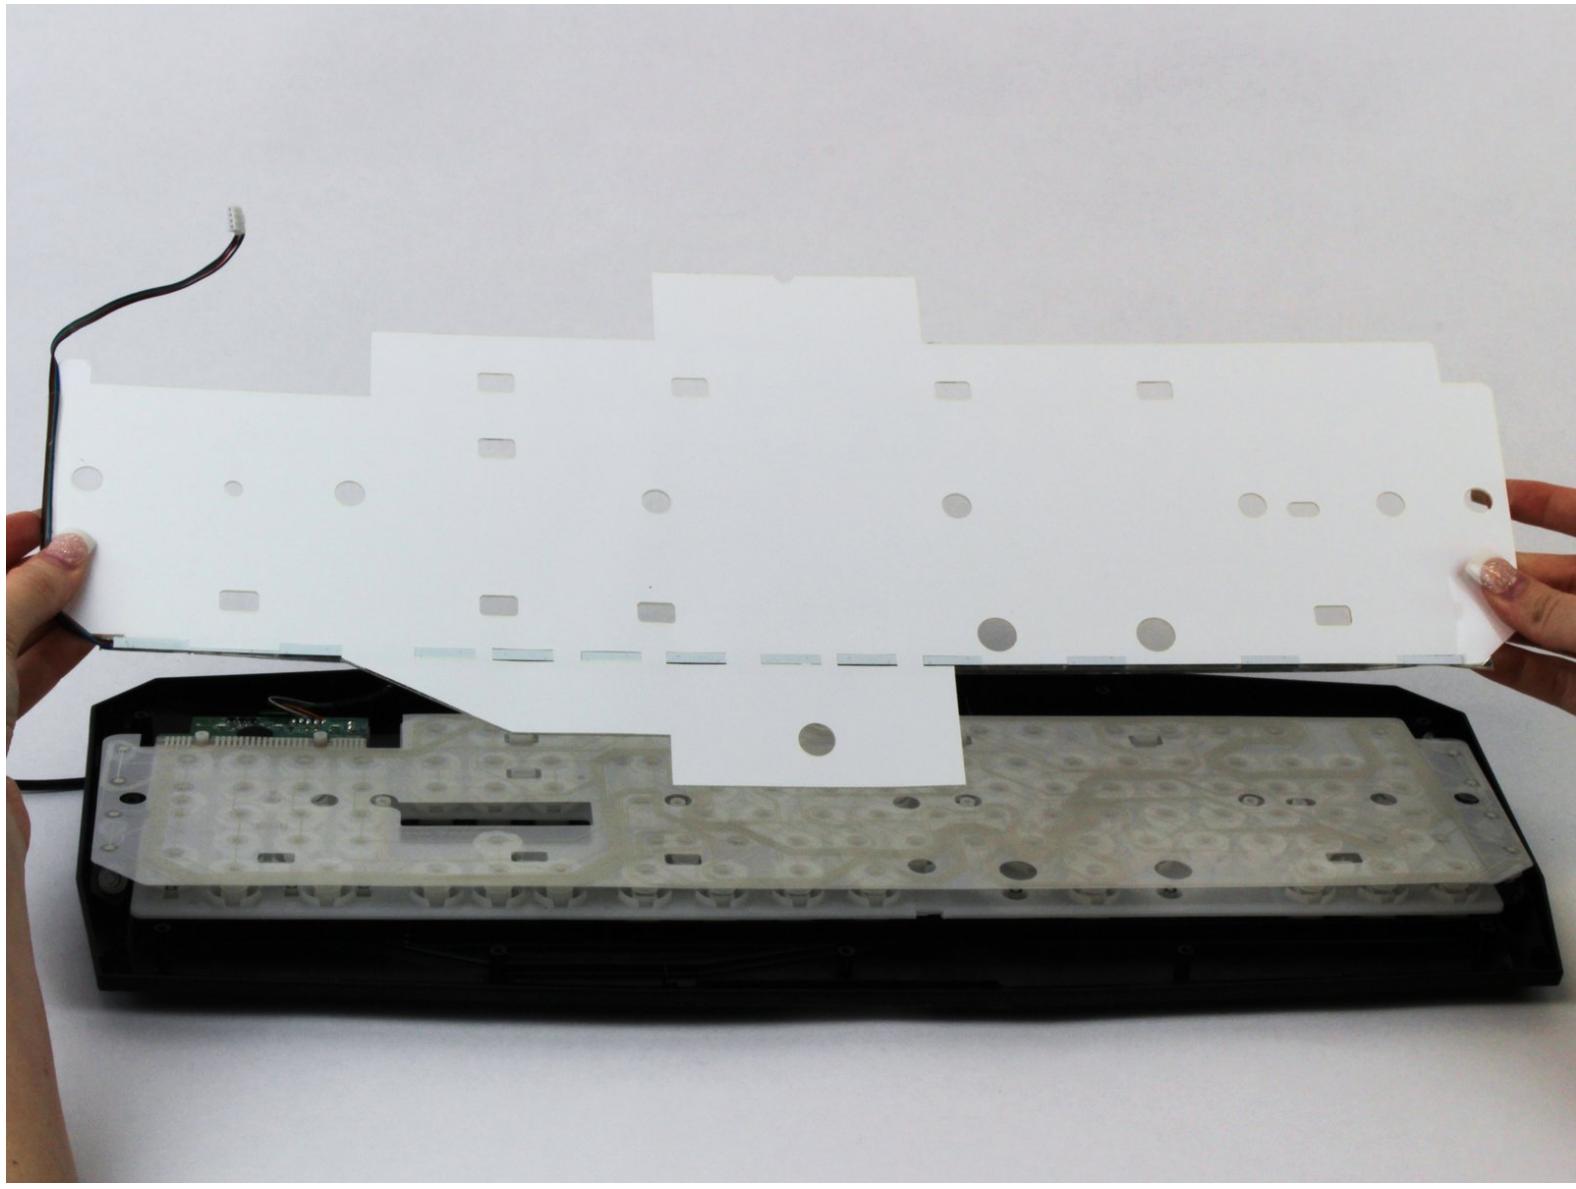

CyberPowerPC RGB 7 Color LED Backlight Replacement

The LED backlight may burn out, causing the backlight to cease working properly. This guide will demonstrate how to replace the LED backlight.

Written By: Braydon Lantz



This document was generated on 2019-09-22 08:03:09 AM (MST).

INTRODUCTION

The LED backlight may burn out, causing the backlight to cease working properly. This guide will demonstrate how to replace the LED backlight.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Phillips #2 Screwdriver](#) (1)

Step 1 — Plastic Casing



⚠ Be sure to unplug the keyboard before starting the disassembly.


- Remove the two 10 mm length screws using the Phillips head #1 which are located underneath the kickstand of the keyboard and directly next to it.

Step 2




- Remove the sixteen 5 mm length screws using the Phillips head #2.
- One of the screws may be located underneath a manufacturer's sticker.

Step 3

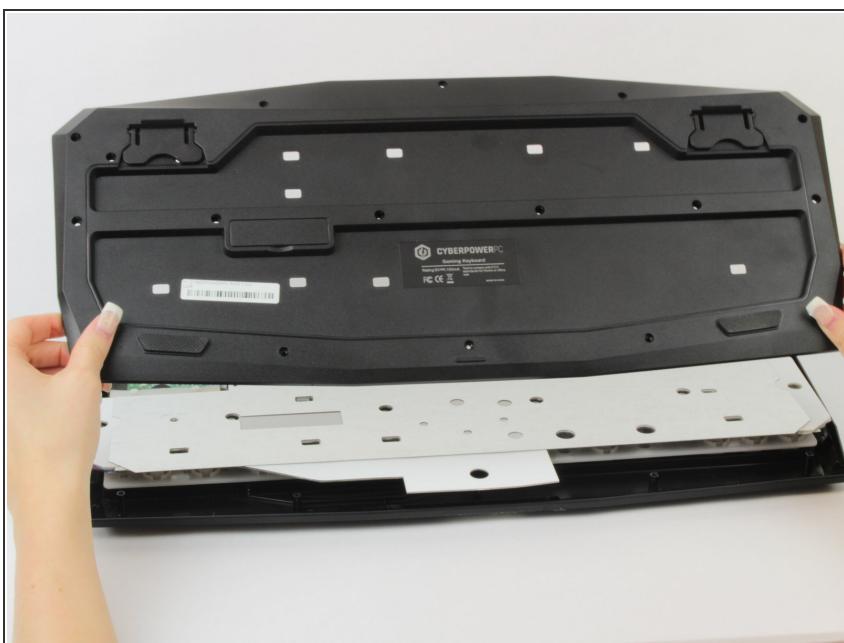


- Lift up and remove the plastic casing.

Step 4 — LED Backlight

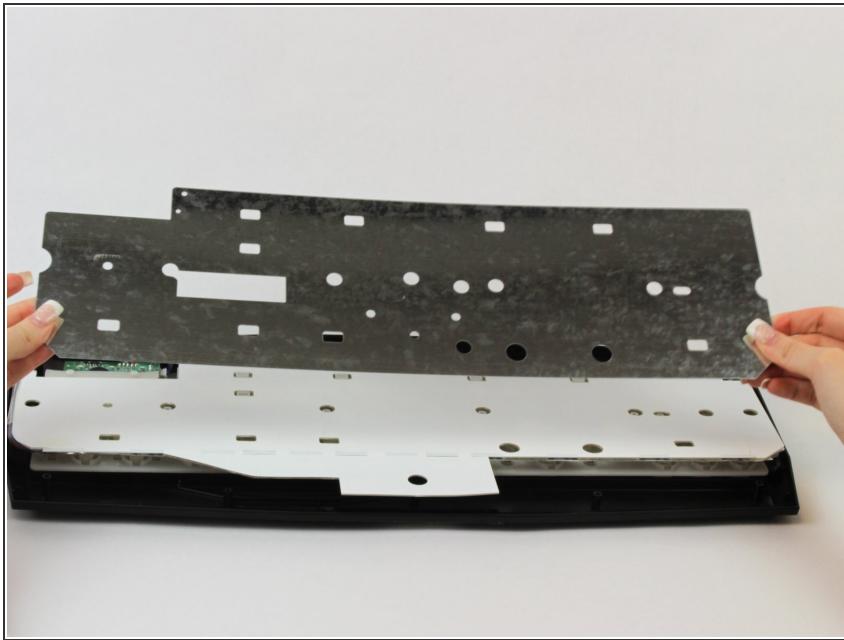

- Remove the metal backing located directly underneath the white plastic casing.


Step 5

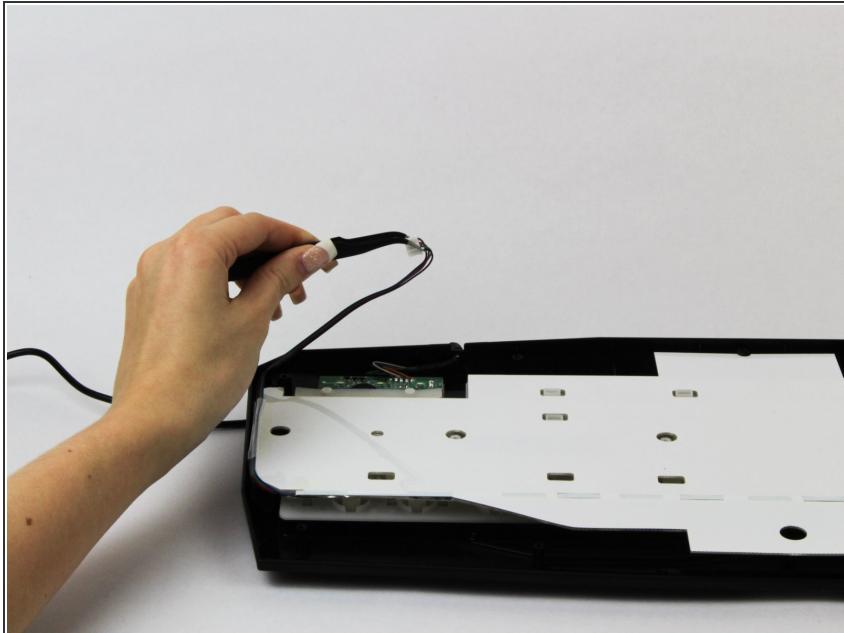

 Be careful not to pull too hard on the ribbon cable, as it may break.

- Disconnect the ribbon cable that connects the LED board to the motherboard.

Step 6

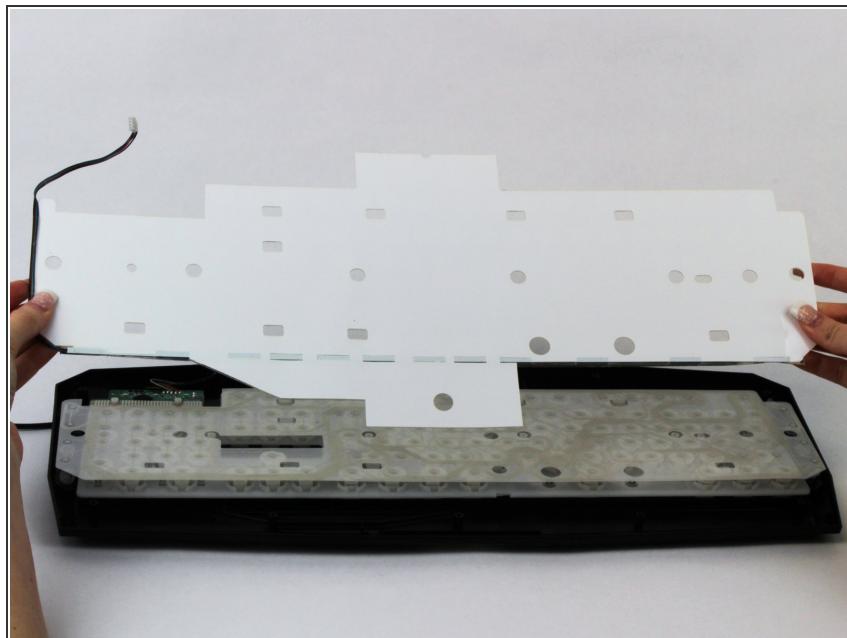

- Carefully remove the LED board, which should now come free from the casing.

To reassemble your device, follow these instructions in reverse order.