



CyberPowerPC RGB 7 Color Plastic Casing Replacement

The plastic shell the keyboard is enclosed is brittle and can break. This guide will show how to replace the plastic shell of the keyboard.

Written By: Braydon Lantz



This document was generated on 2019-09-22 08:03:30 AM (MST).

INTRODUCTION

The case of the keyboard is plastic and can break. This guide will show how to replace the case of the keyboard.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)
- [Phillips #2 Screwdriver \(1\)](#)

Step 1 — Plastic Casing



⚠ Be sure to unplug the keyboard before starting the disassembly.


- Remove the two 10 mm length screws using the Phillips head #1 which are located underneath the kickstand of the keyboard and directly next to it.

Step 2



- Remove the sixteen 5 mm length screws using the Phillips head #2.
- One of the screws may be located underneath a manufacturer's sticker.

Step 3

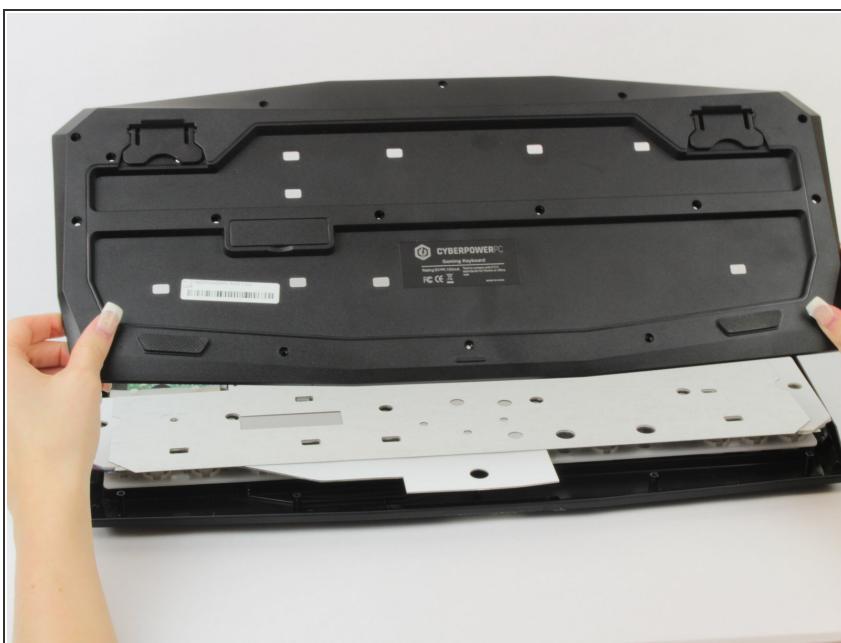

- Lift up and remove the plastic casing.

To reassemble your device, follow these instructions in reverse order.