




# D-Link DCS-2630L Wi-Fi Camera Speaker Replacement

This guide will walk through the necessary steps to replace the speaker in the D-Link DCS-2630L Wi-Fi Camera.

Written By: Collyn Dodge

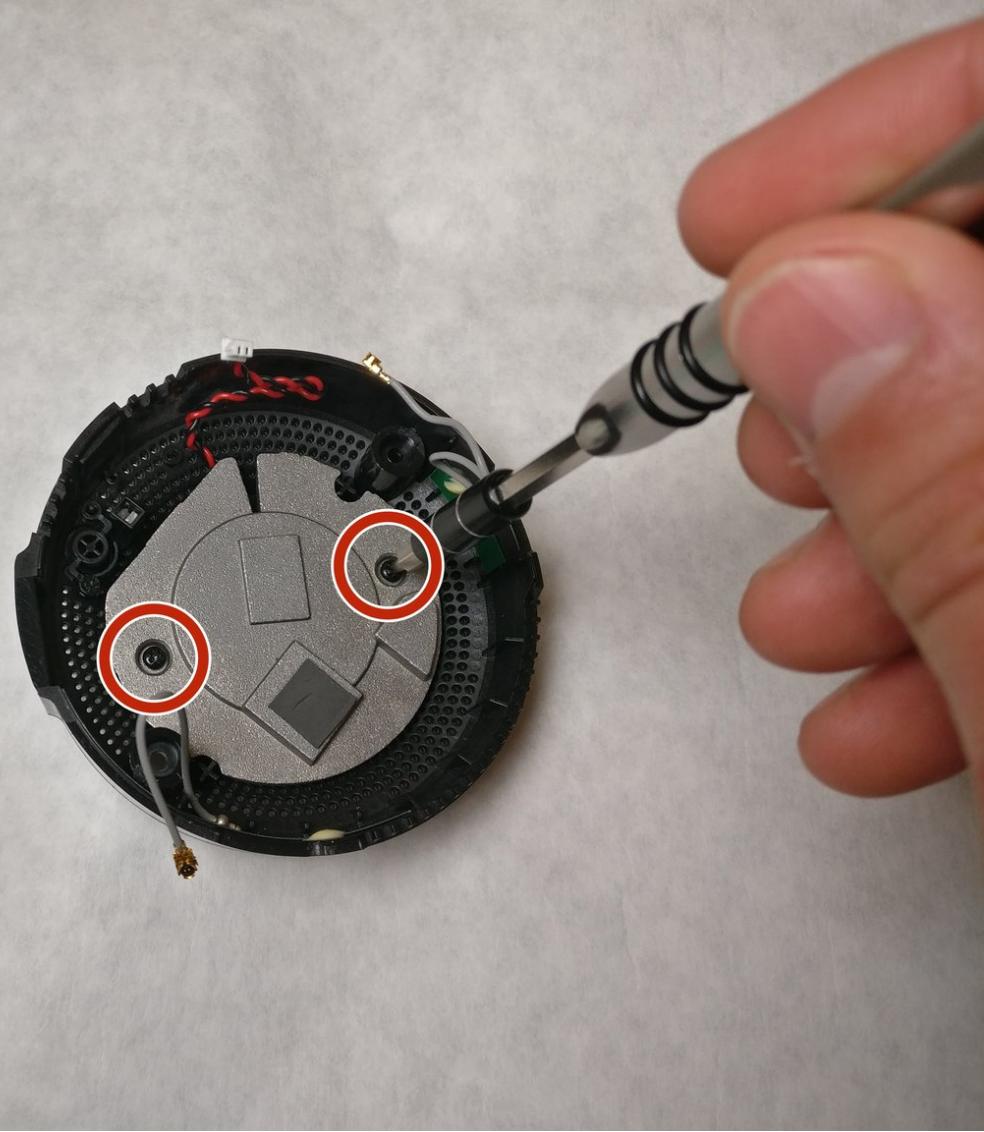

This document was generated on 2019-09-22 04:32:11 AM (MST).

 **TOOLS:**

- **Phillips #00 Screwdriver (1)**

## Step 1 — Back casing




- Remove the two 9.65 mm screws on the back cover using the Philips head PH00 screw driver.

## Step 2




- Remove the back casing to expose the circuit board.

## Step 3

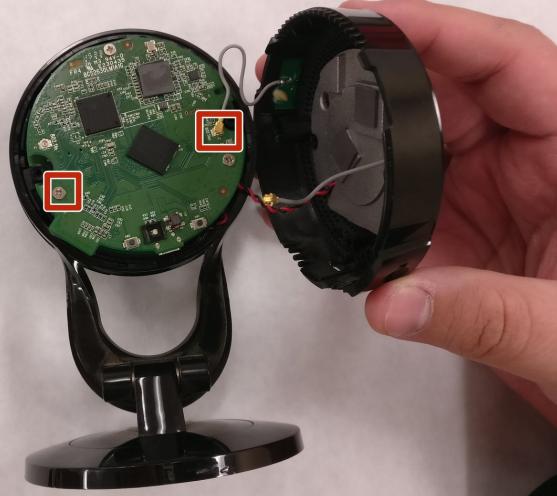


- Detach the gray antenna wires by gently pulling on the side closest to the circuit board.

## Step 4

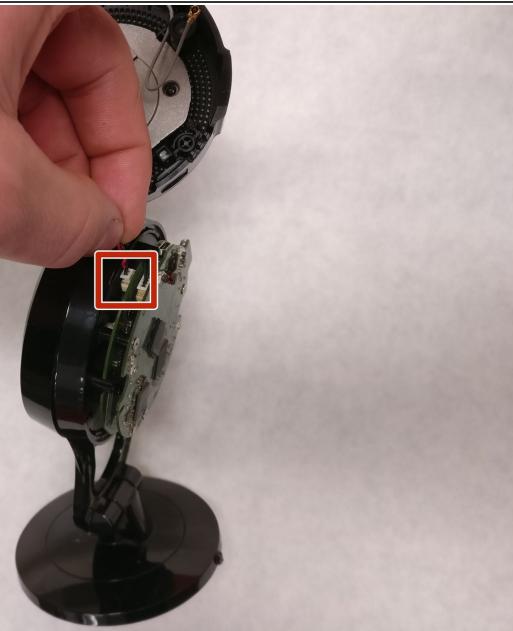


- Detach the speaker wire by gently pulling on the side closest to the body of the camera.

## Step 5 — Speaker

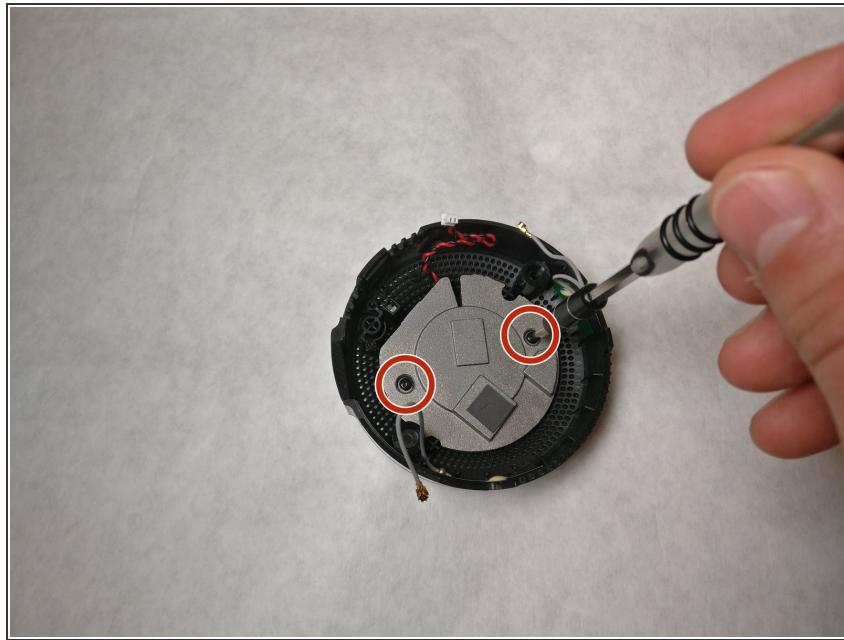

- Remove the two 7.25 mm screws using the Ph00 head.

## Step 6

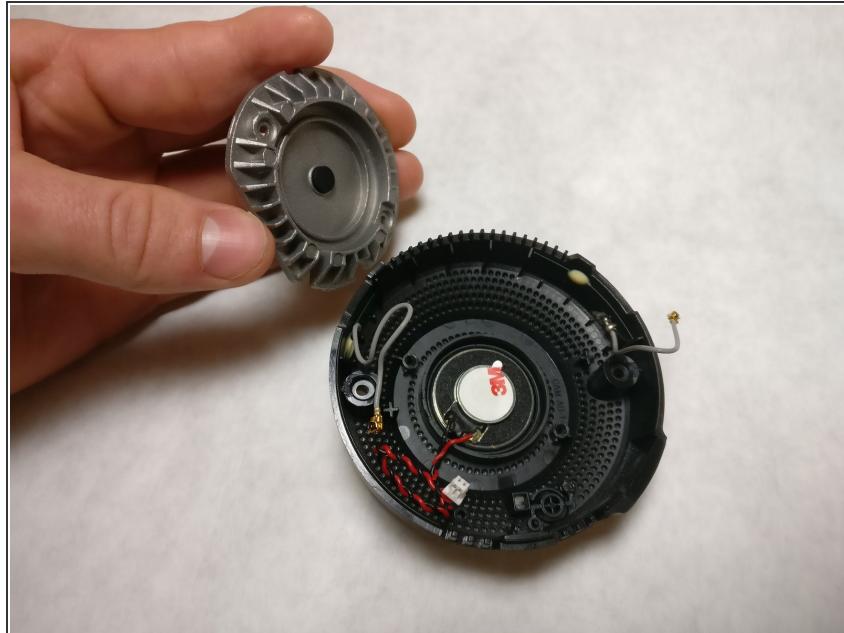

- Remove the back grey speaker plate

## Step 7



- Remove the speaker by gently pulling on the wire near the speaker.

To reassemble your device, follow these instructions in reverse order.