



# D-Link DCS-825L Antenna Replacement

This is a step by step guide on how to replace the antenna for a D-Link DCS-825L.

Written By: Alexis Clopton



## INTRODUCTION

There are times that the antenna of the Wi-Fi Baby Camera does not work. This is a step by step guide on how to remove a faulty antenna from the Wi-Fi Baby Camera and replacing it with a working antenna.

### TOOLS:

- Phillips #2 Screwdriver (1)
- ESD Safe Tweezers Blunt Nose (1)

## Step 1 — Accent Ring



- Grasp the side of the accent ring. There is a notch that your thumb will be able to grab ahold of.

## Step 2



- Twist the accent ring until it pops off. You may need to use both hands if the accent ring is stuck.

## Step 3




- Replace your accent ring with whichever color you choose.

## Step 4 — Back Casing




- Remove one Phillips #2 screw from each side of the camera lens.

## Step 5

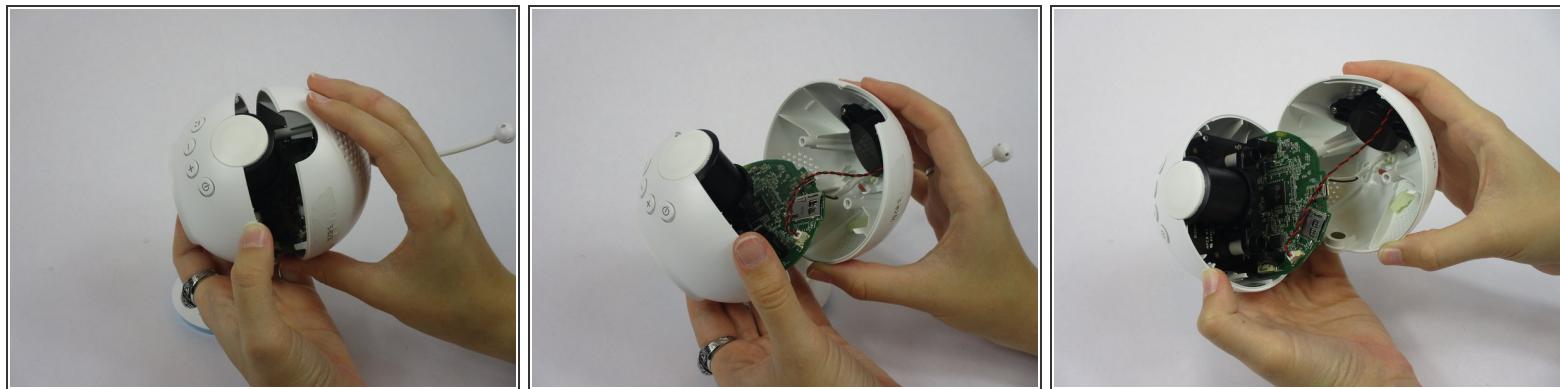

- Pull the Wi-Fi Baby Camera open.
- ⓘ It should be easily done after the screws are removed.

## Step 6

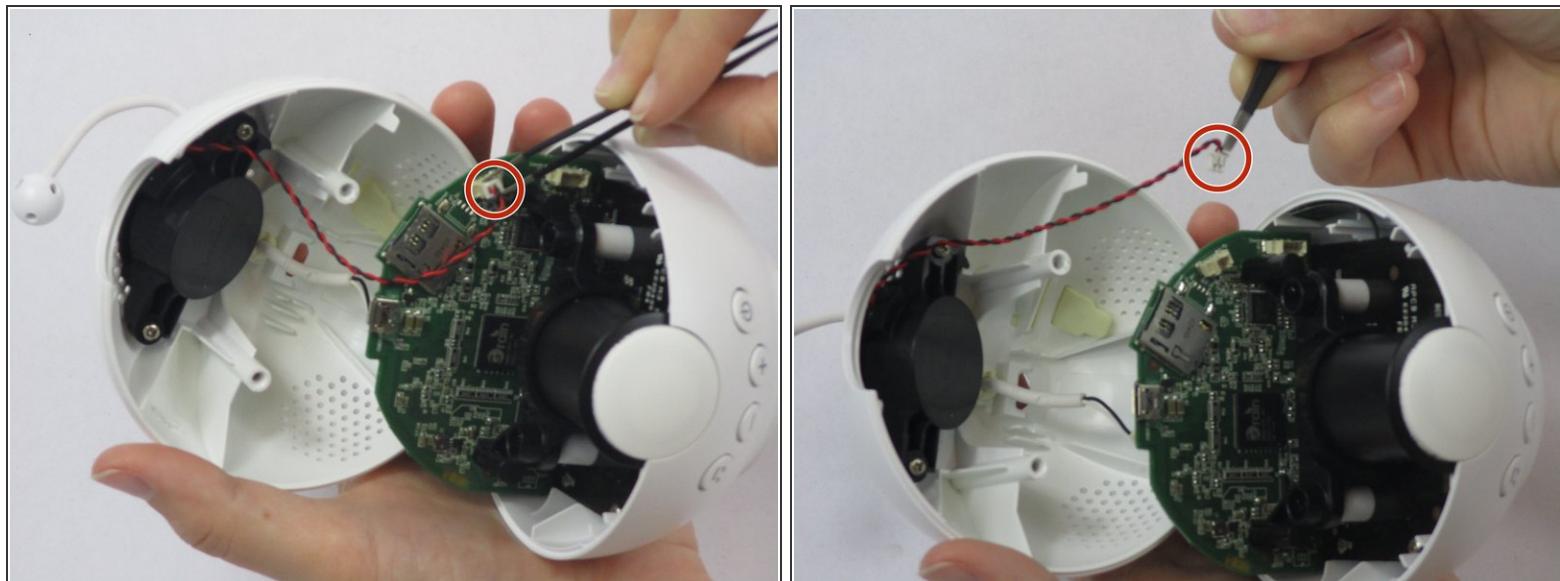

- Take your tweezers and gently pull the white tip out from its plug that is connected to a red and black twisted wire.

## Step 7




- Take your tweezers and gently pull the white tip that is on the end of the white wire (the antenna) out from its plug in.

## Step 8 — Antenna



*(i)* Once you have the back casing removed from the other half of the device, it should look like this with the antenna poking out.

## Step 9

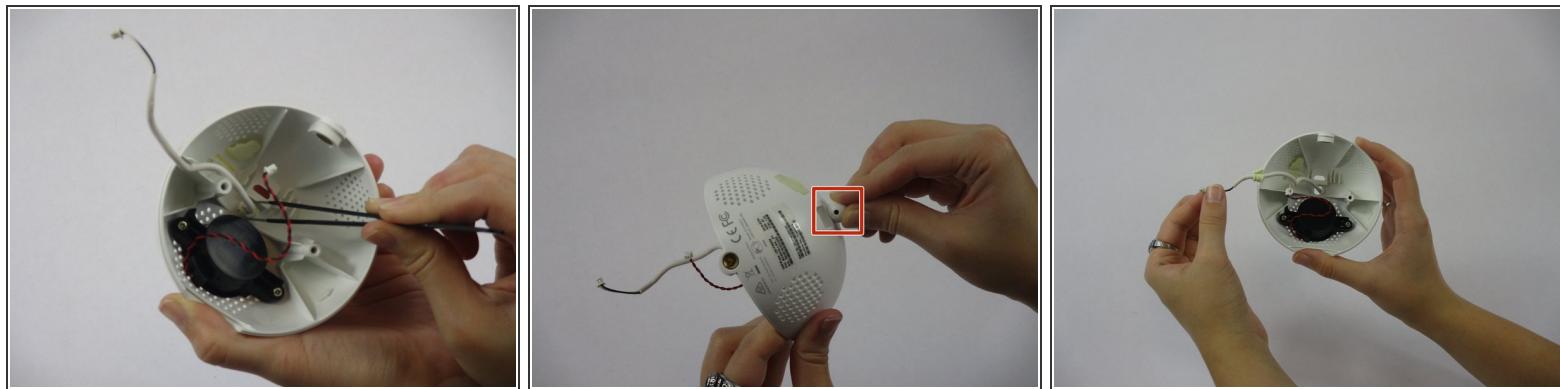


- There will be a light yellow rubber stopper that is holding the antenna in place.
- With your tweezers, gently tug on the stopper to make it come out, or at least come loose.
- If the stopper does not completely come out, use the round top of the antenna to push down on it.

*(i)* You can do this simply by pulling the antenna as close to the back casing as possible, and then pushing down on it until the rubber stopper comes out completely.

*(i)* After it has come out, it can either be taken off from the antenna and set aside, or it can be kept on.

## Step 10

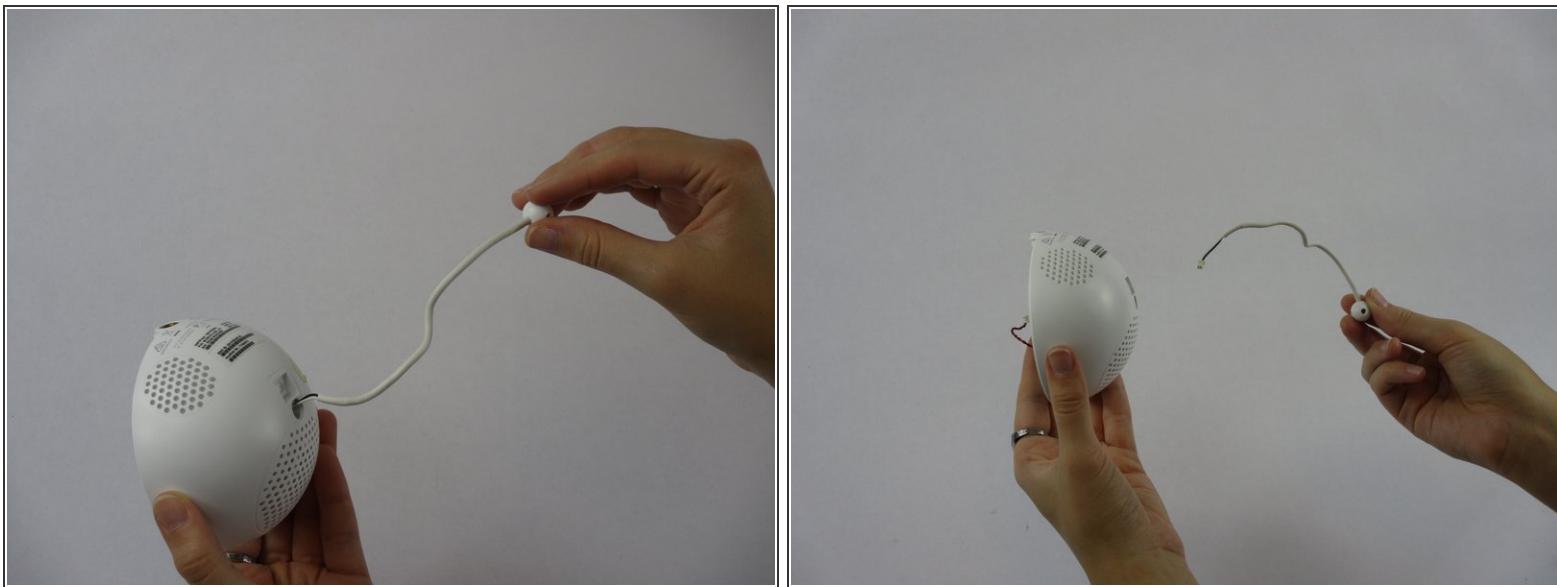

- Once the rubber stopper has been pushed out, you will now be able to easily pull the antenna out from the back casing.
-  After it has been removed, you are now able to replace the antenna of your Wi-Fi Baby Camera.

To reassemble your device, follow these instructions in reverse order.