



DJI Phantom 2 Vision+ Battery Removal

Follow this guide to remove the battery from the DJI Phantom Vision+.

Written By: David Hoyt



INTRODUCTION

No tools are required to remove the battery from your DJI Phantom 2 Vision+. You should always remove the battery before servicing your Phantom to avoid electric shock or accidentally powering the propellers.

Note: the drone used in this guide probably looks different from yours! It's just a custom paint job, otherwise it's completely stock.

Step 1 — Remove the battery



- Pinch the top and bottom tabs of the battery case, pull the battery straight out to remove it.
- ⓘ The metal connectors form a stiff mechanical connection with the battery, you will need quite a bit of force to remove the battery. Hold the Phantom Vision+ with one hand and remove the battery with the other.

To reassemble your device, follow these instructions in reverse order.