



DJI Phantom Battery Replacement

Use this guide to remove or replace the battery in a DJI Phantom.

Written By: David Hoyt



INTRODUCTION

No tools are required to remove the battery from your DJI Phantom. You should always remove the battery before servicing your Phantom to avoid electric shock or accidentally powering the propellers.



PARTS:

- [DJI Phantom Battery](#) (1)

Step 1 — Open the Battery Compartment



- Press down on battery door release tab to flip the battery door open.

Step 2 — Remove the Battery



- Pull out the battery pack.

⚠ Avoid pulling on the battery wires, excess stress may break the wires, damage the power connectors, or crack the internal solder joints.

Step 3 — Disconnect the Battery



- Pull the two halves of the XT60 power connector apart.

⚠ It's a tight fit, so be careful not to hit your drone or yank on the cables when it releases!

To reassemble your device, follow these instructions in reverse order.