



# DJI Spark Cooling Fan Replacement

If the cooling fan is over heating or is not functioning, use this guide to access and replace the cooling fan of your DJI Spark.

Written By: Uzochi Anyanwu



## INTRODUCTION

The purpose of this guide is to access and replace the cooling fan in the DJI Spark (model CP.PT.000903). It will help whether a foreign object may have become stuck in the cooling fan or it is just non-operational.

### **TOOLS:**


- [iFixit Opening Tools](#) (1)
- [1.5mm Hex Screwdriver](#) (1)

## Step 1 — Propellers



- Push down on the propeller that is being replaced.

## Step 2

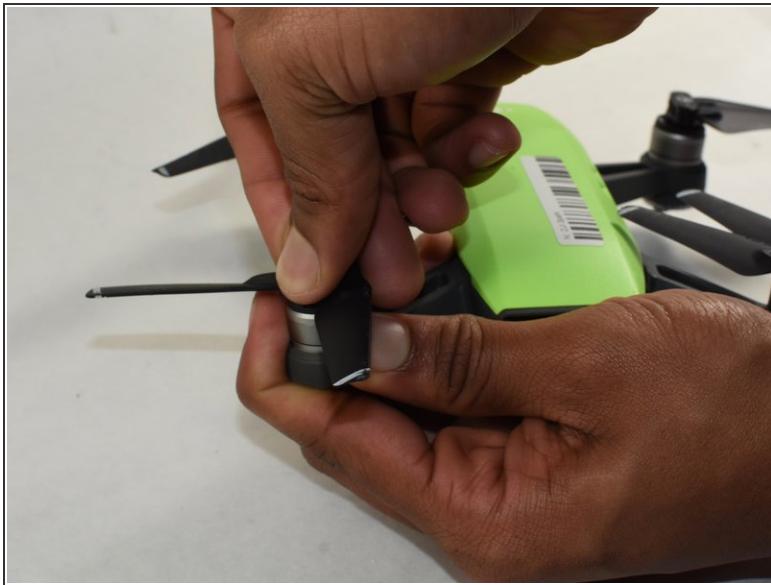

- Twist the propeller until it feels loose.
- Pull on it until it comes off.

## Step 3 — Battery



- Flip the drone over.
- Grip the left and right sides of the battery.
- Slide firmly forward until it pops out.

## Step 4 — Lid



- Flip the drone over.
- Remove the four 1.5mm Hex screws.
- Remove the two 1.5mm Hex screws near the camera head.

## Step 5



- Hold the drone so the lid is facing up.
- Insert the plastic opening tool into the side of the drone.
- Slide the tool around the perimeter until you can lift the top off.


## Step 6 — Cooling Fan



- Remove the fan.

**(i)** It is attached to the motherboard with several pieces of adhesive.

## Step 7

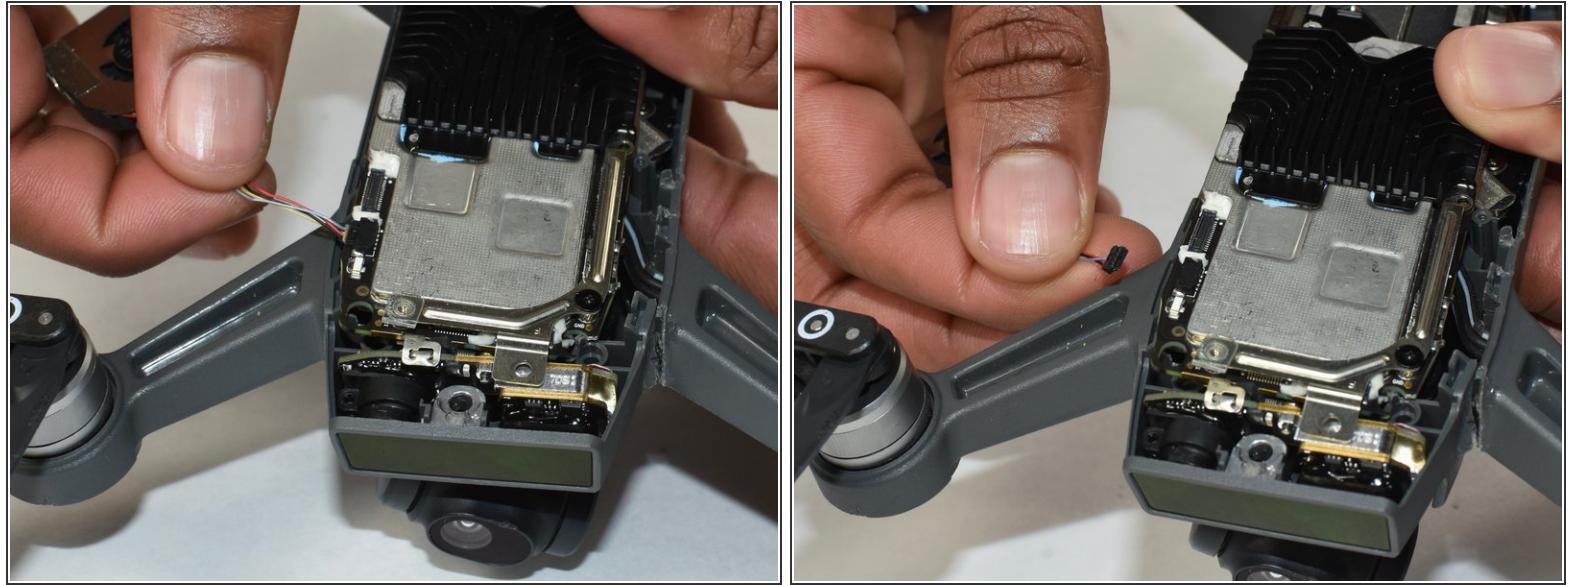

- Trace the fan wires to the side of the panel.
- Unplug the wire from its connector.

To reassemble your device, follow these instructions in reverse order.