



DJI Spark Lid Replacement

Replace the cover of the DJI Spark which protects all the parts in the drone.

Written By: Uzochi Anyanwu



INTRODUCTION

This is the cover of the drone that protects all the various part in the DJI Spark. You will need to remove this first if you want to access any internal parts of the Spark.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [1.5mm Hex Screwdriver](#) (1)

Step 1 — Propellers



- Push down on the propeller that is being replaced.

Step 2



- Twist the propeller until it feels loose.
- Pull on it until it comes off.

Step 3 — Battery



- Flip the drone over.
- Grip the left and right sides of the battery.
- Slide firmly forward until it pops out.

Step 4 — Lid



- Flip the drone over.
- Remove the four 1.5mm Hex screws.
- Remove the two 1.5mm Hex screws near the camera head.

Step 5



- Hold the drone so the lid is facing up.
- Insert the plastic opening tool into the side of the drone.
- Slide the tool around the perimeter until you can lift the top off.

To reassemble your device, follow these instructions in reverse order.