



DOSS SoundBox Base-plate Removal Replacement

This guide will show you how to remove and replace the base-plate on your DOSS SoundBox. This allows you to access the internal components of the speaker.

Written By: Brendan Harkreader



 **TOOLS:**

- [Magnetic Project Mat \(1\)](#)
- [JIS Driver Set \(1\)](#)

Step 1 — Base-plate Removal



- Locate the four 3/32" screws on the bottom of your device.
- Using a JIS #00 screwdriver, remove the four 3/32" screws.
- After removing the screws, lift the cover off of the device.

Step 2



- Using a JIS #1 screwdriver, remove the six 3/32" screws that attach the base-plate to the speaker enclosure. These screws are marked with red circles.
- Using a JIS #000 screwdriver, remove the two 1/16" screws from the areas marked with an orange circle.

(i) Having the magnetic pad handy will be beneficial, as these screws are very small and easily lost.

Step 3



- Lift the base-plate off of the enclosure.

To reassemble your device, follow these instructions in reverse order.