



DYMO LabelPOINT 100 Cutting Blade Replacement

Replace a dull, broken, or jammed cutting blade.

Written By: Dustin Holifer



 **TOOLS:**

- **Phillips #00 Screwdriver (1)**

Step 1 — Rear Panel




- Slide the panel release button.
- Lift the panel.

Step 2 — Remove Label Tape Cassette






- Firmly press the cartridge release button with your finger.
- You may need to hold the cassette and/or entire device still while pressing the button.
- Lift the label tape cassette out of the device.

Step 3 — Blade Disassembly

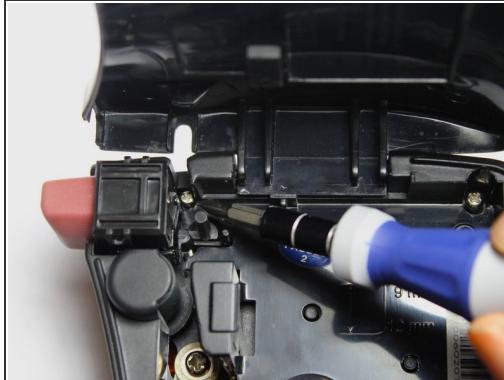

- Use Phillips #00 Screwdriver to disengage cutter from device
- Remove cutter

Step 4 — Remove Blade

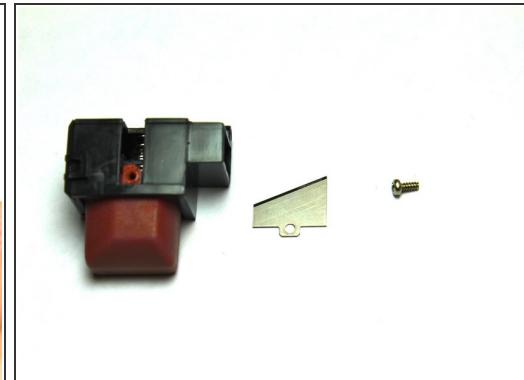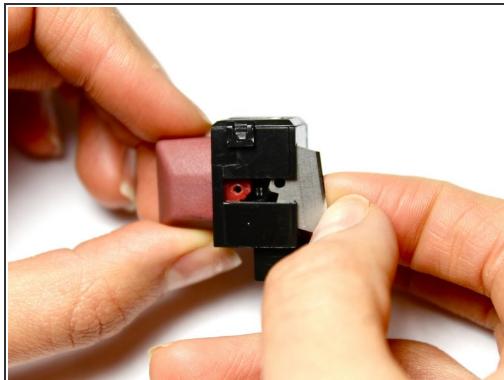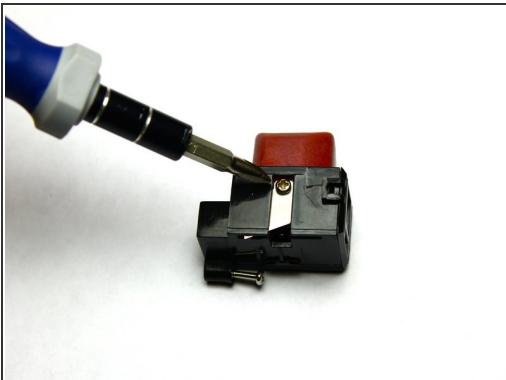

- Use Phillips #00 screw to unscrew blade from blade cutter

⚠ Carefully remove blade. The blade is sharp and can be dangerous if not handled properly.

- Replace blade

To reassemble your device, follow these instructions in reverse order.