



De'Longhi EC155 Bottom Panel Replacement

Prerequisite Only

Written By: David Griffith



This document was generated on 2019-10-01 03:17:15 PM (MST).

 **TOOLS:**

- Phillips #2 Screwdriver (1)

Step 1 — Bottom Panel



- Flip the device on its head.
- Using the Phillips #2 screwdriver, unscrew the four 12 mm screws found at each corner of the bottom panel.
- Lift the panel off or flip the device over and let the panel drop out.

To reassemble your device, follow these instructions in reverse order.