



# DeWalt DC970 Battery Cells Replacement

The battery cells may deteriorate over time. This guide will show how to replace them.

Written By: Jonathan Hamel



## INTRODUCTION

If the battery of your drill is not giving the drill power, a problem you could have is deteriorated battery cells. This guide will show you how to replace the battery cells.

### TOOLS:

- T15 Security Torx Screwdriver (1)
- Torque Wrench (1)
- Soldering Iron (1)

## Step 1 — Battery



- Compress the buttons on either side of the battery and lift the drill away from battery.

## Step 2



- Remove battery from drill.

## Step 3 — Battery Cells



- Remove the six 19 mm, Torx Security 15 screws from the top of the battery.

## Step 4



 Pull off the battery cover, exposing the battery cells.

## Step 5



**⚠** Remove the old battery cells by slowly pulling them out of the top piece of the battery.

**ⓘ** If the battery cells seem like they will not come out, you may need to pull harder cautiously.  
Recycle the old battery cells.

To reassemble your device, follow these instructions in reverse order.