



# DeWalt DCD771C2 Battery Replacement

Removing and attaching battery from drill.

Written By: Emily Passey



## INTRODUCTION

Make sure the drill is "off" by putting the forward reverse switch in the middle position. Make sure your hands are dry when handling the drill and charger.

## Step 1 — Battery



- Grab drill in one hand and cup the battery (located at the bottom of the drill) with the other hand .

## Step 2



- Use other hand to push down on the yellow button located on the battery

## Step 3



- Pull the battery in a horizontal direction away from the drill.

To reassemble your device, follow these instructions in reverse order.