



DeWalt DCS380 Blade Release lever Replacement

Replacing a broken blade release handle.

Written By: Jonathan Hicks



INTRODUCTION

This guide will show how to remove the blade release lever and replace it.

TOOLS:

- T20 Torx Screwdriver (1)

PARTS:

- Blade release lever, part #N088811 (1)

Step 1 — Removing shoe and boot.



- ➊ Remove the battery before disassembly.
- Remove the shoe by pressing the yellow button on the left side of the hand grip.

Step 2



- Remove the two M8x18mm T20 bolts from the front plate.

Step 3



- Pull the front of the grip while holding the saw body in place.

Step 4 — Blade Release lever



- Fold the lever all the way back and push it out of the boot.

To reassemble your device, follow these instructions in reverse order.