



DeWalt DCS380 Grip Disassembly

Dissassembly of the grip.

Written By: Jonathan Hicks




INTRODUCTION

This guide will show how to disassemble the grip for replacing the trigger or motor armature.

TOOLS:

- [Small Needle Nose Pliers \(1\)](#)
- [T10 Torx Screwdriver \(1\)](#)
- [T15 Torx Screwdriver \(1\)](#)

Step 1 — DeWalt DCS380 Grip Disassembly

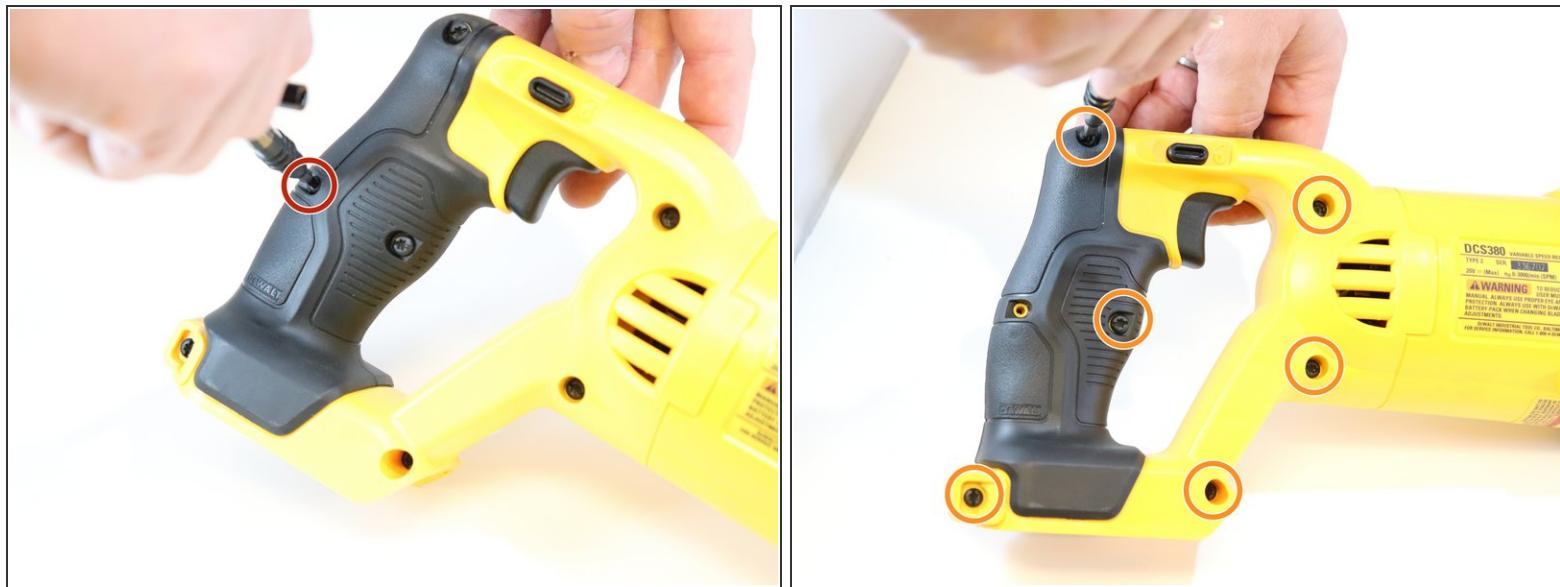

(i) Remove the battery before disassembly.

- Remove the M3x16mm T10 screw from the back of the grip. Keep it separate from the rest of the grip screws
- Remove the six M3.63x19 T15 screws from the grip.

Step 2



- Remove the top half of the grip.
- Turn the saw over and locate the power connectors to the motor.
- Use needle nose pliers to remove the spade connectors. Take care not to grab the wires on removal, only the end of the spade terminal.

 Note the polarity for the power connectors and be sure they are not reversed on reassembly.

To reassemble your device, follow these instructions in reverse order.