



DeWalt DCS380 shoe and boot removal

Removal of DCS380 shoe and boot.

Written By: Jonathan Hicks



INTRODUCTION

Disassembly of shoe and boot for later repair of gearbox or blade release lever.

TOOLS:

- T20 Torx Screwdriver (1)

Step 1 — Removing shoe and boot.



- ➊ Remove the battery before disassembly.
- Remove the shoe by pressing the yellow button on the left side of the hand grip.

Step 2



- Remove the two M8x18mm T20 bolts from the front plate.

Step 3



- Pull the front of the grip while holding the saw body in place.

To reassemble your device, follow these instructions in reverse order.