



DeWalt DW920 Rotational Switch Replacement

If your drill is only rotating in one direction then you will have to replace the rotational switch. This guide will help you fix this problem.

Written By: Cameron MacKinnon



INTRODUCTION

This guide will show you how to properly take apart the drill and replace the rotational switch.

TOOLS:


- [T10 Torx Screwdriver](#) (1)
- [H5.0 bit Driver](#) (1)

Step 1 — Disassembly



- Use a T-10 Torx bit screwdriver to take out the 4 screws shown.

Step 2

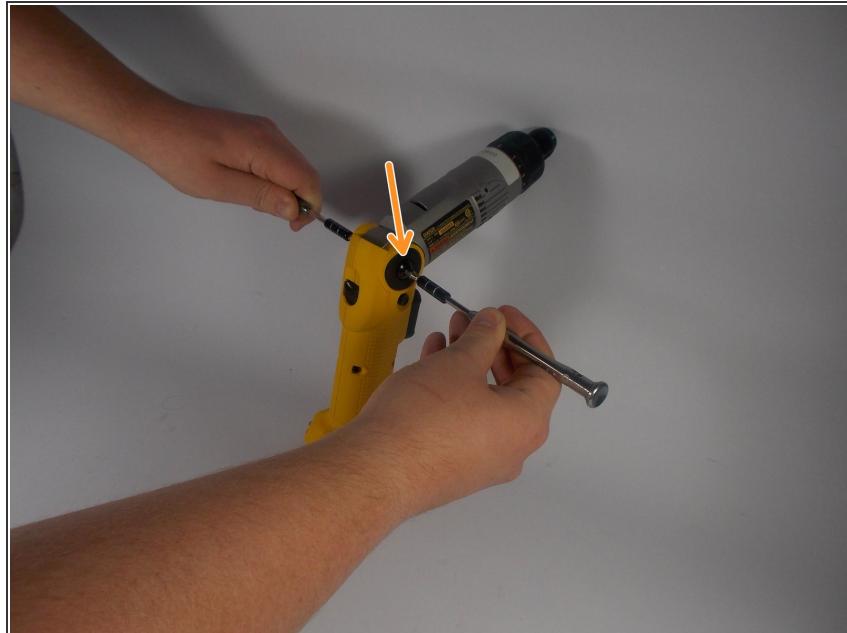

- Use 2 H-5.0 bit drivers to take out the main bolt and head.
- Note: there will be blue locktite on the tread

Step 3



- Pull apart 2 halves of the handle.

Step 4 — Rotational Switch




- Locate the rotational switch

Step 5



- Carefully release the connection between the rotational switch and the motor assembly. This should be done carefully to ensure that the switch connection switch on the assembly is not damaged.

Step 6

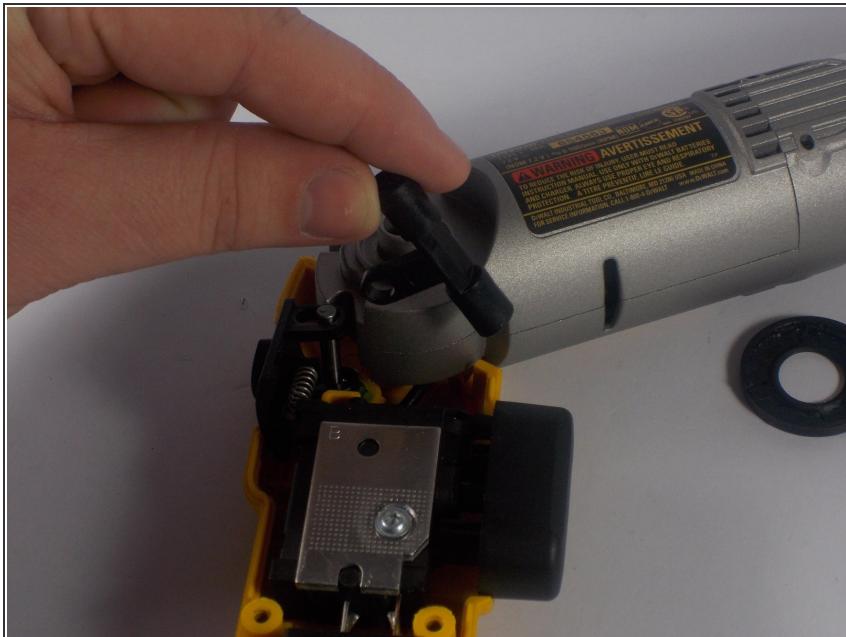

- Once the switch is freed from the assembly, firmly grip it between two fingers and lift it straight out of the drill frame.

To reassemble your device, follow these instructions in reverse order.